


Instruction Manual

26800mAh USB C PD Wireless External Battery

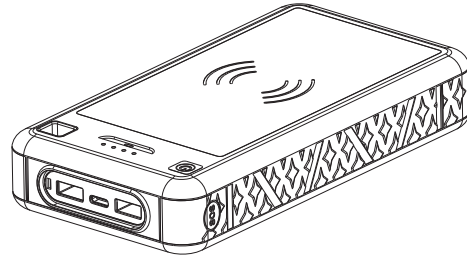


26800mAh USB C PD
Wireless External Battery



User Manual

Thank you for purchasing our product. To ensure optimal performance and safety, please read the following instructions carefully before operating this product. Please keep this manual for future reference.

Functional Introduction

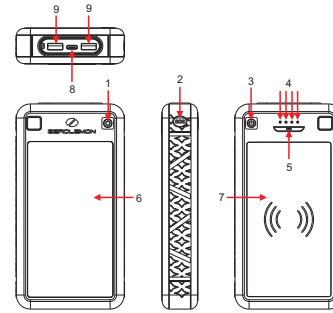

Product Part	Operation
1 LED Light Button	Hold the LED light button for 3 seconds to turn the light on or off. Click the button once to switch between the following 3 light modes: max brightness, low brightness, and strobe.
2 SOS Button	Hold the SOS button for 3 seconds to turn the SOS feature on or off. The key is valid in any state.
3 Power Button	Click to start charging and display the current power level.
4 LED Indicator	Click the power button to show the remaining power level.
5 Wireless Charging Indicator	This light turns green when wireless charging working.
6 LED Light Panel	There are 4 light modes on this panel: max brightness, low brightness, strobe, and SOS. Please refer to #1 and #2 for operation.
7 Wireless Charging Panel	Make sure the device is aligned with the center of the power bank. Make sure your device is compatible with wireless charging. Wireless Charging Output: DC 5V/1A(max)
8 USB C PD Port	Any connected devices will be automatically recognized. Input/Output: DC 5-20V/3A(max)
9 Dual USB Output	Output: DC 5V/2.8A(max)

Product Features

- High Capacity of 26800mAh.
- 60W USB C PD Charging: Charge your USB-C mobile phones and laptops at high-speed with max 60W Power Delivery charging.
- Wireless Charging Support all Qi-enabled phones for inductive charging at ultimately astonished speed.
- Four Charging Outputs enable charging 4 devices simultaneously.
- Four Light Modes: Max Brightness, Low Brightness, Strobe, and SOS
- Portable Hanging Buckle Design: Convenient to carry for outdoor use and camping
- Smart LED Display shows remaining power
- Rain resistant, dirt proof, and shockproof for long trips and hiking

Specifications

- Battery Type: Li-Ion battery
- Capacity: 26800 mAh/97.28Wh
- Input: DC 5-20V/3A(MAX)
- Output:
 - ⚡ USB C PD: DC 5-20V/3A(MAX)
 - ⚡ USB A: 5V/2.8A(MAX)
 - ⚡ Wireless Output: 5V/1A(MAX)
- Weight: 563g(19.86 ounces)
- Product Dimension: 6.93 x 3.26 x 1.30 in

How to Use the External Battery?

1. Charge your Devices: Press the power button to turn on the battery and charge your devices. For USB C charging, any connected devices will be automatically recognized.
2. Charging your Devices Wirelessly: Put the device on center of the wireless charging panel.
3. Use SOS: Hold down the SOS button for 3 seconds to turn the feature on or off.
4. Use Flashlight: Hold down the LED button for 3 seconds to turn the feature on or off. Click the button to switch between the following 3 lighting modes: max brightness, low brightness, and strobe.

How to Charge the External Battery?

1. To ensure optimal performance and user safety, only use an official cellphone charger or ZeroLemon authorized charger when charging.
2. It takes 2-8 hours to fully charge the external battery based on the charging output of the charger.
3. The LED indicator will flash while the external battery is being charged. It will be fully charged when all the LED lights are fully lit and no longer flashing. To avoid overcharging, please stop charging once the LEDs are fully lit.

How to Test Remaining Power?

Capacity (●ON ○OFF ◉FLASH)	LED Light Status
100%	●●●●
75%~100%	●●● flash
50%~75%	●● flash ○
25%~50%	● flash ○○
0~25%	◉○○○

How to Charge your Devices?

1. Press the power button to begin charging. For USB C charging, any connected devices will be automatically recognized.
2. Only use the supplied charging cable or your phone's charging cable when charging.
3. Disconnect your phone/tablet from the external battery when charging is completed.

Caution

1. Keep the external battery away from high temperatures.
2. Do not disassemble the external battery.
3. Recharge the battery at least once every month to maintain optimal performance.
4. For optimal use and user safety, use only an official phone charger or ZeroLemon charger to recharge.
5. Keep the battery away from metallic objects.
6. Do not crush the battery.

Package Contents

- 1 x Hook
- 1 x Charging Cable
- 1 x 26800mAh External Battery

Warranty and 100% ZeroLemon Guarantee

This product is covered by our 12-Month ZeroLemon Warranty. Customer satisfaction is always our #1 priority. If your product is not working as it should or if you would like to return it to us for any reason, please let us know by contacting us at info@zerolemon.com or 1-415-685-4343. We promise to deliver only the best quality products and offer 100% customer satisfaction.

Subscribe to us
for more deals and news!



Sales Inquiry: sales@zerolemon.com
Designed by ZeroLemon, LLC in USA
Made in China
Copyright 2019 ZeroLemon, LLC All Rights Reserved.
All names, brands, logos, and/or trademarks used in this publication are property of their respective owners.

www.zerolemon.com