

To set the temperature on the digital controller, hold the "Set" button for 3 to 5 seconds. The letters "St" should appear. Press and release the set button once more, and the number "03" should appear (or another number, depending on the factory temperature setting), which represents the current temperature setting in Celsius. Use the 2 right buttons (the up and down arrow) to adjust the temperature. When the desired temperature is displayed, leave the controller as it will return to the inside temperature reading on its own. The temperature has just been reset!