 





urban drivestyle

UNI Maxi Manual

 Meet your UNI Maxi

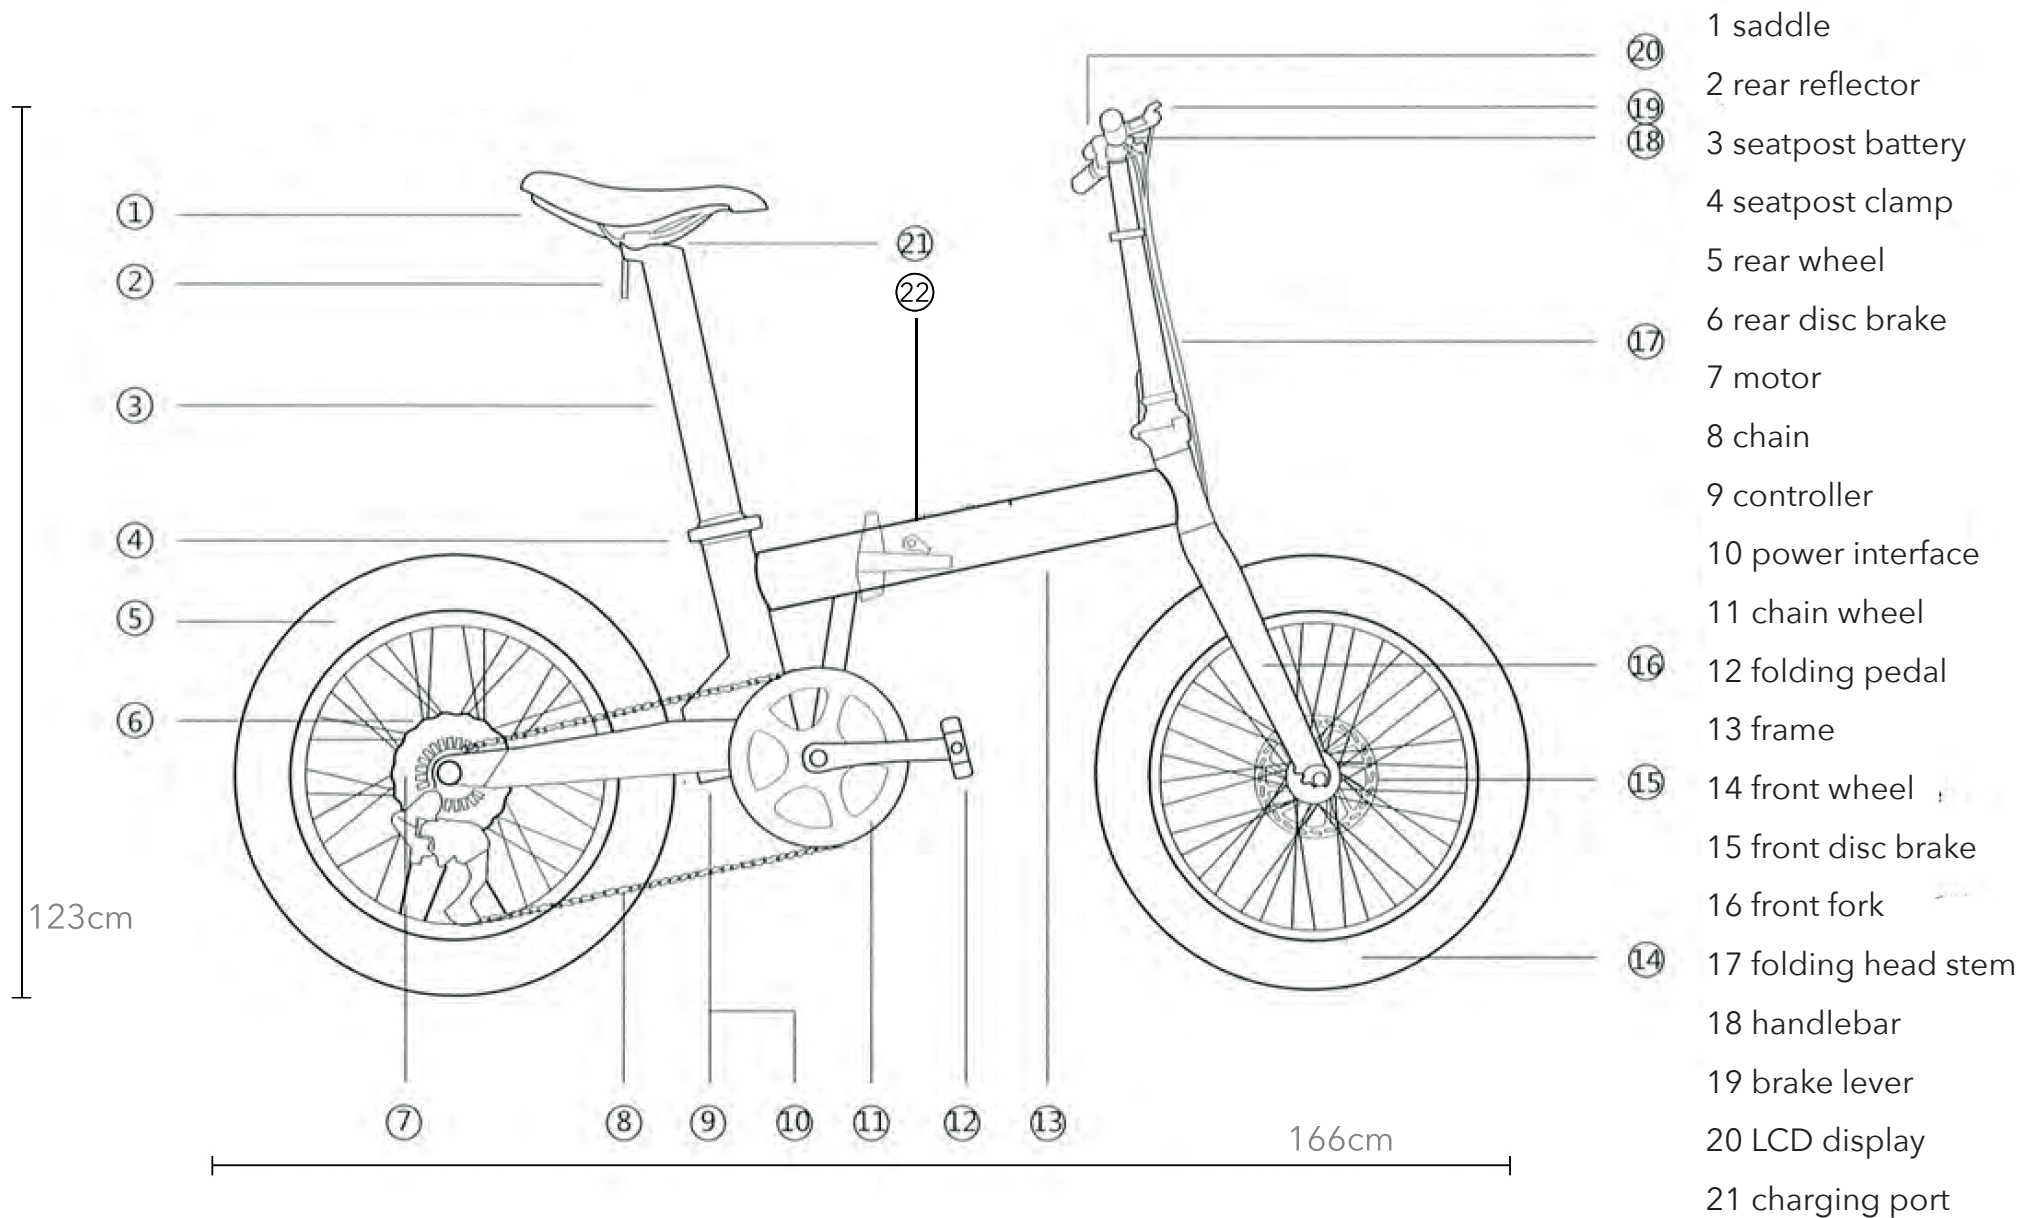

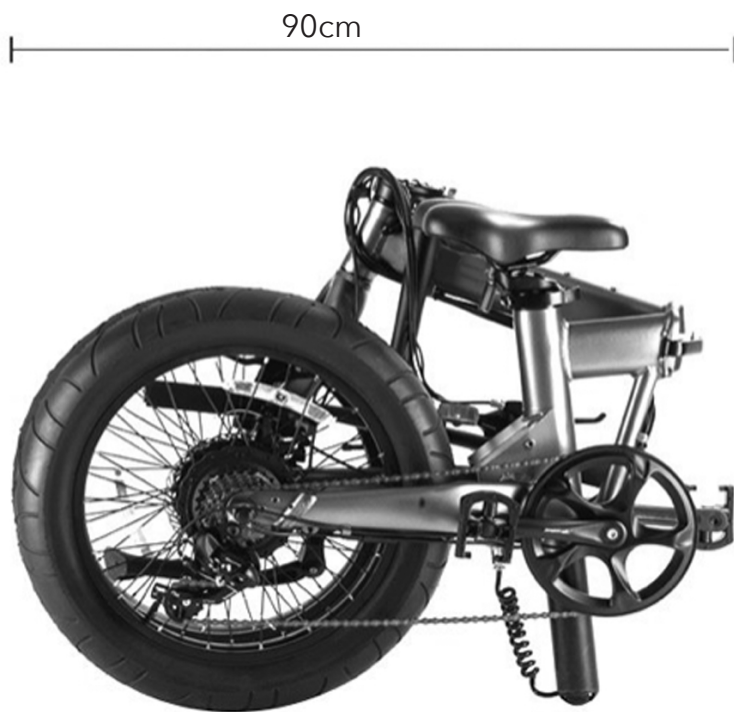


Paremeter


Product name: UNI Maxi	Motor : MXUS 250W brushless geared	Brakes: 160mm disc brakes
Model name: QSEB03	Max rated output power: 350W	Rim: 20 inch Al-Alloy 12G36H
Size: 1660x640x1230mm (max.)	Motor efficiency: $\geq 78\%$	Tire: Innova 5189 20x4 1/4"
Folded size: 900x500x800mm	Rated RPM: 310 \pm 10r/min	Chain wheel: Prowheel 52T
Wheel base: 1100mm	Rated voltage: 36V	Free wheel: Shimano 14-28T
Net weight: 28.5kg	Max torque: 40N.m	Derailleur: Shimano 7 speed
Range: PAS>50-60km	Overcurrent protection: 15 \pm 1A	Chain: KMC
Max. load: 110kg	Low-voltage protection: 30 \pm 1 V	Handle bar: Promax
Max. speed: 25km/h	Kwh: ≤ 1.2 Kw.h	Display: Kunteng LCD
Charging time: 7 Hrs	Modes: 5 levels	Controller: Kunteng sine wave FOG
Battery type: Lithium-ion	Tire diameter: 20 inch	Brake levers: Al-Alloy e-bike lever
Battery capacity: 36V 14.Ah	Frame: 20 inch 6061 Al-Alloy foldable	Saddle: KNUS
Noise : s 62 dB(A)	Front fork: 20 inch 6061 Al-Alloy	Pedal: foldable pedals

Operate your UNI Maxi


1. Press & hold power button for 3 sec. LCD shows screen I, data shows as :single riding time- PAS level-speed-single range.
2. Press power button. LCD shows screen II, data shows as: total riding time-PAS level -average speed-total range.
3. Press power button twice. LCD shows screen III, data shows as: totat riding time-max speed-voltage.

Touch & hold power button to turn off.

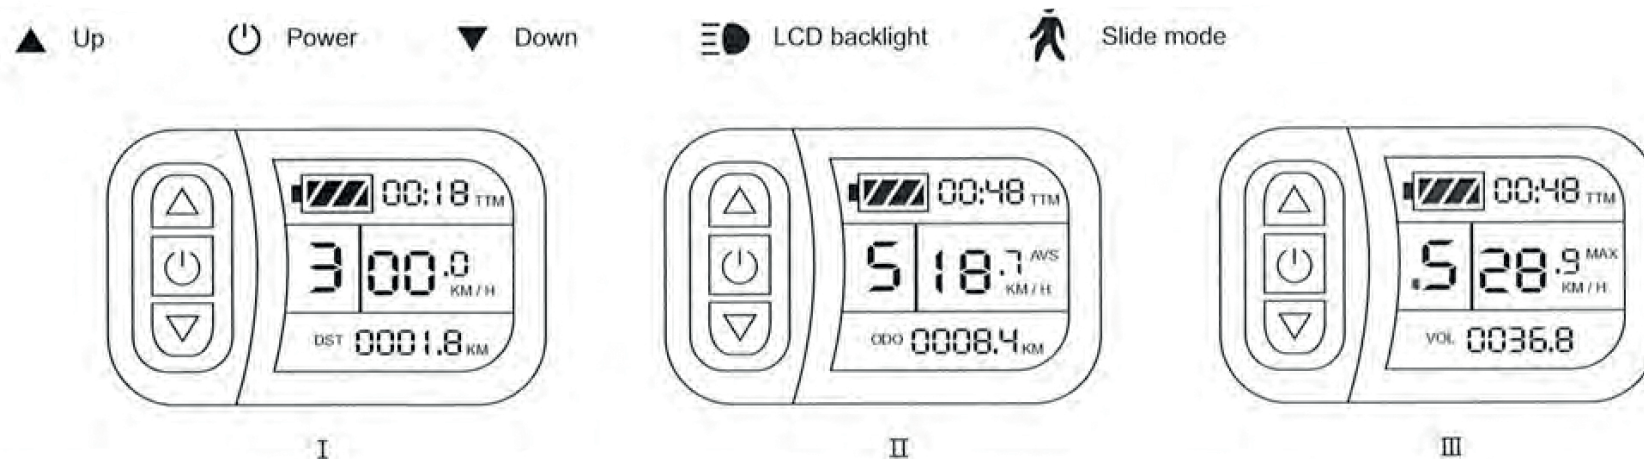


1. Walking mode: press & hold DOWN button till  flicker, your UNI Maxi will ride at a fixed speed of 6KM/H, release to quit.
2. Cruise mode: ride your UNI Maxi with your selected/fixed speed (must be over 7km/h), then press & hold DOWN button for 3 sec to enter cruise mode, take break or press any button to quit.
3. LCD display light: press & hold UP button to turn on display light. Press & hold UP button again to turn off.
4. PAS mode: press UP or DOWN button to choose PAS levels from 0-5.

Charge your UNI Maxi

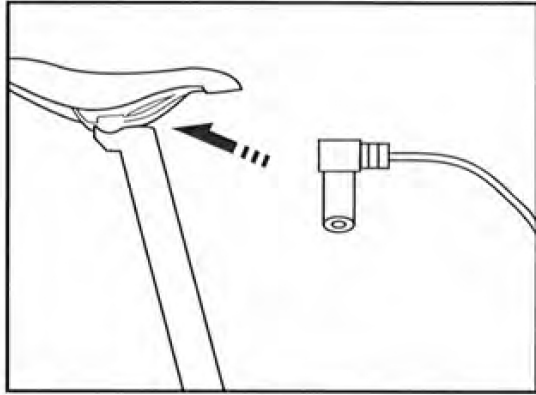

Charging port is right beneath the saddle, covered by a rubber dust cover. Open it. Plug the charger into the port: Cover the port again when charged.

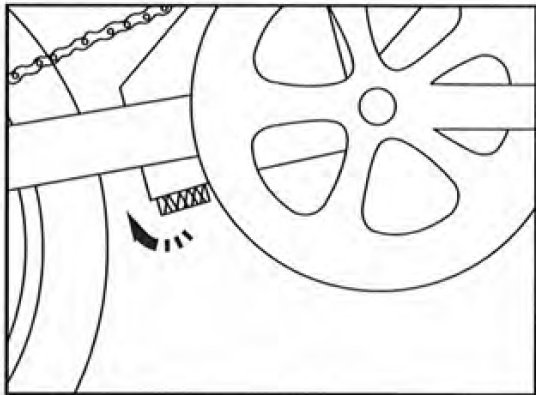


If you want to charge your battery separately. Roll out the power port, release the seatpost clamp. Pull out the seatpost battery. Then repeat the steps above.

Accessory list

- 1 front mud fender
- 2 rear mud fender
- 3 reflectors
- 4 ring
- 5 lamp


Please mount accessories according to your needs.

 Fold your UNI Maxi

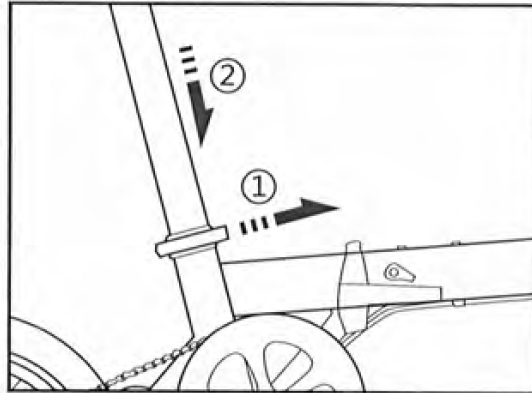


1. Grab the seatpost (important). Loose the clamp.

 2. Push the seatpost slowly into the tube. Tighten the seatpost clamp.

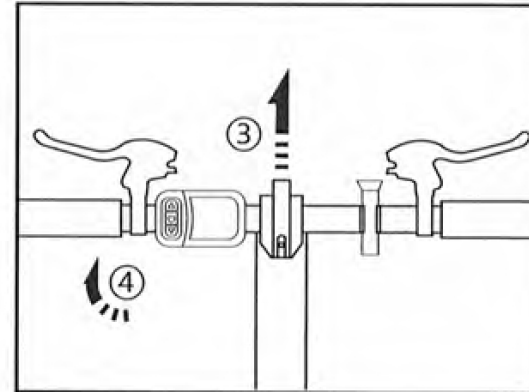


3. Loose the handlebar clamp.

 4. Turn the handlebar clockwise till vertical, tighten the clamp.

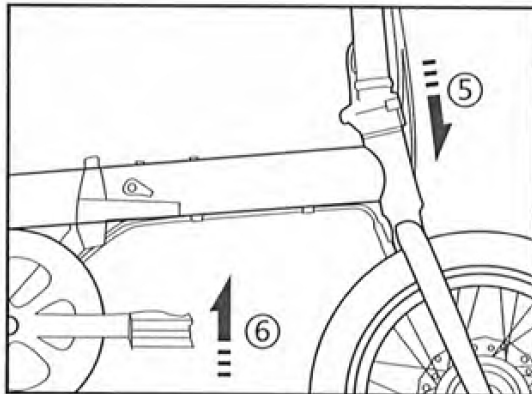

5. Release the lock clamp, fold the headtube.

 6. Fold the pedal by pushing it inwards.

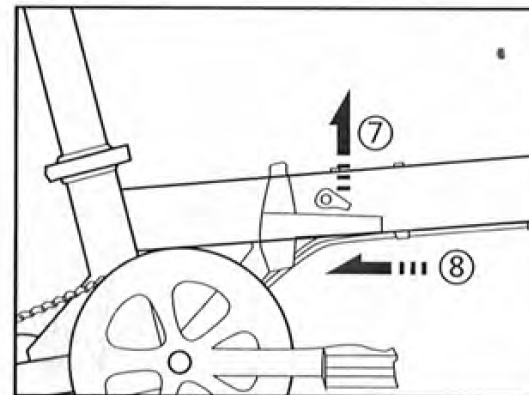

7. Release the safety cap.

8. Pull the lock bar, fold the main tube.

Attention

Battery & Charging

1. Red indicator on the charger indicates charging. When it turns green, please stop charging your battery, by plugging it out.
2. Do not expose to temperature $-20^{\circ}\text{C} < \text{or} > 35^{\circ}\text{C}$. Fully charge the battery and store separately if it won't be used for over 30 days. Fully charge it every 60 days, or the battery may self-discharge and be damaged. This damage is not covered by any Warranty.
3. Never expose your battery to damp/wet environments or soak them in water. Never short circuit the battery terminals, this damage is not covered by the Warranty.
4. Charge with the original charger only!
5. Do not disassemble/damage battery pack. Do not place it in or close to fire or drop it from high grounds. Avoid touching the ports/contacts.
6. Turn off Ebike's power before charging it. Plug the charge port first then the AC plug.
7. Do not cover any items on the charger during charging.
8. Pull out charger port before the AC plug.
9. Please keep the battery out of the reach of children.
10. The capacity of Li-ion will decrease when -10°C or colder.
11. Recycle or dispose battery in accordance with local regulations.

Riding & Maintenance

1. Ride with your helmet on and follow the local laws and regulations
2. Read this instruction carefully before riding the Ebike
3. Start your ride with the 3rd PAS level.
4. Keep the lamp on during night rides.
5. Fully check break system, tire pressure and remaining battery level before riding.
6. PLEASE always use both brakes.
7. Do not do intense riding, offroad or stunts.
8. Do not ride into water.
9. Replace the wearing parts (like break pad) in time.
10. Juveniles, Pregnants, Intoxicated persons are not allowed to ride ebikes.
11. Keep your Ebike away from damp, high temperature or corrosive environments.
12. Keep your Ebike away from sun-scorched and rain-drenched environments.
13. Check screws, chain and other parts regularly.

Declaration of Conformity (for countries within EU)

According to EC directive 2006/42/EC on machinery (Annex II A)

This declaration relates exclusively to the machinery in the state in which it was placed on the market and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no longer valid if the product is modified.

Herewith, we declare, that your UNI Maxi Pedelec complies with all essential requirements of the Machinery Directive 2006/42/EC and Directive 2004/108/EC relating to electromagnetic compatibility.

The following technical standards were used:

EN ISO 4210:2015 Cycles - Safety requirements for bicycles

EN 15194:2009+A1 :2011 Electrically Power Assisted Cycles (EPAC)

Berlin, August 1 st, 2018

Urban Drivestyle GmbH
Wilhelminenstraße 92
12459 Berlin
Germany

Commercial Register-Nr.: HRB 193941 B
Ust.ID-Nr.: DE316683386

www.urbandrivestyle.com



urban drivestyle

