



OPERATION INSTRUCTIONS

FOOD WARMER

MODEL: GFW-100

INSTRUCTIONS FOR THE WET HEAT SOUP WARMER

Specification

| | |
|-----------|--------------------------------|
| Capacity: | 25Qt/24L |
| Voltage: | 110V/60Hz AC / 220V/50-60Hz AC |
| Power: | 1200W |
| Weight: | 17.2Lb/7.8Kg |

Operating and Maintenance:

- * Plug unit into correct electrical socket.
- * Use with WET HEAT ONLY. Add water in the stainless steel container. Never overfill with water. Remove any excess water immediately.
- * The temperature control should be set between 1 and 3 and always be set to the lowest setting to maintain the correct serving temperature. Hold at high temperature by setting the control between 3 and 5.
- * A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off. Unplug from the wall socket when not in use.
- * Never move or carry the appliance when unit is switched on, or when containing hot soup or food.
- * Spilled soup or food should be removed immediately from all exterior surfaces. The stainless steel should be wiped with a damp soapy cloth.
- * Ensure unit is unplugged when not in use, when filling and when being cleaned.
- * The appliance can not be cleaned with a high pressure jet.

IMPORTANT: NEVER IMMERSE KETTLE IN WATER OR OTHER LIQUID AS DAMAGE TO THE UNIT WILL RESULT AND ALL WARRANTIES WILL BE VOIDED.

WARNING: THIS APPLIANCE MUST BE GROUNDED.

WARNING: DO NOT OPERATE KETTLE EMPTY.

General Foodservice

Weston, FL 33331, U.S.A. - Phone:(954) 202-7419 · Fax:(954) 202-7337 - www.generalfoodservice.com