

FEATURES

- Two Handles
- Ceramic cartridge
- Brass body
- Flow rate 1.2 GPM
- Installation hole 1-3/8"
- Chrome finish
- Hoses and mounting parts includedPop up drain not included (available)






BATHROOM FAUCET DAX-8255C		
MODEL	DAX-8255	
ADA	NO	
UPC APPROVED	NO	
ANSI APPROVED	NO	
ASME APPROVED	NO	
WATERSENSE CERTIFIED	NO	
NSF APPROVED	NO	
CONNECTION SIZE	G3/8	
FAUCET HOLE SIZE	1-3-8"	
FAUCETS HOLE	3 Holes	
FAUCET TYPE	Basin Mixer	
FLOW RATE (GPM)	1.2 GPM	
HANDLE STYLE	Double lever	
NUMBER OF HANDLES	2	
INSTALLATION TYPE	Deck mounted	
MATERIAL	Brass	
FINISH	Chrome	
SPOUT HEIGHT	2-3/8"	
SPOUT SWIVEL	NO	
SPOUT TYPE	Casting spout	
CARTRIDGE TYPE	Ceramic	
POP-IP INCLUDED	NO	
MAX DECK THICKNESS	1-3/4" max	





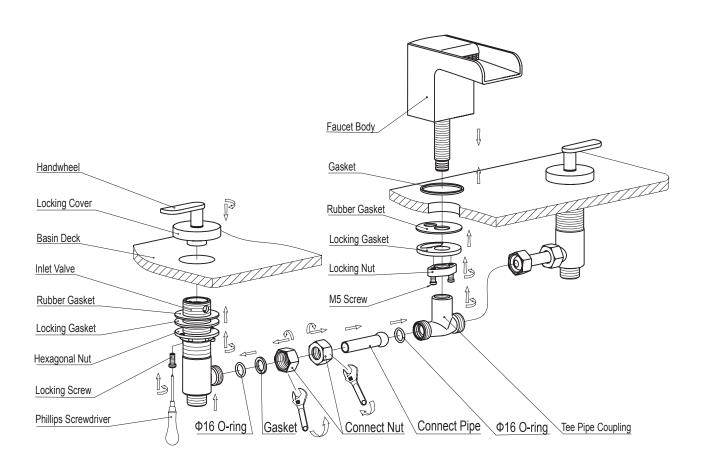


INSTALLATION STEPS

- 1. Remove locking covers from the two inlet valves and take off the handwheels. Screw off the hexagonal nut to bottom. Then place the valve bottom-up through the basin deck hole (attention to red left and blue right) and keep the outlets of the two valves opposite towards each other. Then install the handwheels. Tighten the locking nut first and then the hexagonal nut. Screw them tightly with four locking nuts.
- 2. Remove the locking nut, locking gasket and rubber gasket off the faucet body. Put the gasket onto the faucet body and slide it up through the basin deck hole. Then put on the rubber gasket and the locking gasket. Screw the locking nut with M5 screw and screw the tee pipe coupling.
- 3. Connect the valves and the tee pipe coupling with the connect pipes and screw the connect nuts tightly.
- 4. Turn on water for inspection.



DIAGRAM NUMBER	DAX SKU	TITLE DESCRIPTION
1		Handle
2	FH 653-05	Ø 1-7/8" washer
3	FH 617-22	M4x12 Stop screw
4	FH 608-04G	Handle core
5	FH TBO4/TBO4A	BO4F/BO4G valve
6	FH 9825-09	M4 Screw
7	MF 0610	Ø4 x l"O-ring
8		Faucet body
9	FH TJ-30504	M5 x 4 Internal Hex flat end locking screw
10	FH 9825-05	Filter
11	FH 2123-28	Spout washer
12	FH TQ41-02	Spout inner collar
13	FH 9825-08A	M6 screw rod
14	FH 9825-02A	Seal cover
15	FH 9825-03A	Rubber seal ring
16	FH TQ41-02	Spout inner collar
17	FH 9825-07	Filter
18	FH 9825-06	Water segregator

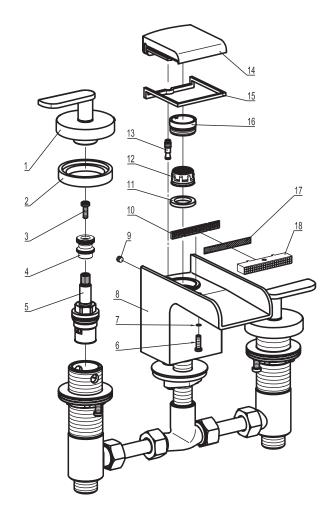

For parts or sale requirements please contact our customer service department:



CS@daxib.com



1 888 685 8236