

LCD Timer/Stopwatch/Clock AX520S Operating Instructions

SETUP


The unit operates on one 'AAA' size battery that has a life expectancy in excess of one year. Remove the battery cover (which may be under an installed folding bracket). Remove any battery interrupter and install the 'AAA' battery into correct position. Replace the battery cover.

INTRODUCTION


ACCUSPLIT products use a common setting procedure called S1-2-3-4.


- S1 = enter the setting mode
- S2 = change the field to be set
- S3 = change the field value(s)
- S4 = exit the setting mode

TO SET CLOCK AND DATE

- S2 - Slide the mode switch (on FRONT) to CLOCK Mode. 
- S1 - Push the slide switch Up (on BACK) to the SET position.
- S3 - To set the HOUR, press or hold the HR (Hours) button.
- S3 - To set the MINUTES, press or hold the MIN (Minutes) button.
- S3 - To set the SECONDS, press the SEC (Seconds) to set to 00.
- S3 - To select the 12/24HR display mode, press RIGHT BOTTOM BUTTON (on FRONT).
- S2 - To set the DAY, DATE and MONTH, first push the BIG BUTTON (on FRONT), then:
- S3 - To set the DAY, press or hold the DAY Button.
- S3 - To set the DATE, press or hold the DATE Button.
- S3 - To set the MONTH, press or hold the MONTH Button.
- S4 - To EXIT the Clock and Date setting mode, push the slide switch down to the LOCK position.

TO OPERATE ALARM

- Slide the mode switch (on FRONT) to ALARM Mode. 
- To change the HOUR, press or hold the HR (Hours) button.
- To change the MINUTES, press or hold the MIN (Minutes) button.
- Turn the ALARM function On/Off, press RIGHT BOTTOM Button (on FRONT).
- When Alarm is ON, the Alarm Sound Symbol will appear on TOP LEFT of the Display.
- After the Alarm sounds, press RIGHT BOTTOM Button (on FRONT) to Shut Alarm Sound and Alarm OFF.

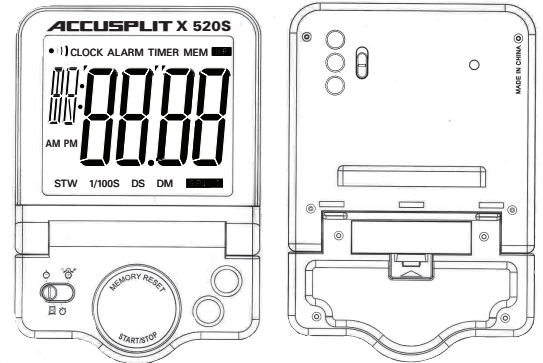

INCLUDED PARTS

- Dual use Bracket (Folding Table Top Foot Brace or Hanging Wall Mount*).
- * Extra components for Wall Hanging:
 - 3 Wood Screws.
 - Double sided adhesive foam pad.

LCD Timer/Stopwatch/Clock AX520S Operating Instructions

SETUP


The unit operates on one 'AAA' size battery that has a life expectancy in excess of one year. Remove the battery cover (which may be under an installed folding bracket). Remove any battery interrupter and install the 'AAA' battery into correct position. Replace the battery cover.

INTRODUCTION


ACCUSPLIT products use a common setting procedure called S1-2-3-4.


- S1 = enter the setting mode
- S2 = change the field to be set
- S3 = change the field value(s)
- S4 = exit the setting mode

TO SET CLOCK AND DATE

- S2 - Slide the mode switch (on FRONT) to CLOCK Mode. 
- S1 - Push the slide switch Up (on BACK) to the SET position.
- S3 - To set the HOUR, press or hold the HR (Hours) button.
- S3 - To set the MINUTES, press or hold the MIN (Minutes) button.
- S3 - To set the SECONDS, press the SEC (Seconds) to set to 00.
- S3 - To select the 12/24HR display mode, press RIGHT BOTTOM BUTTON (on FRONT).
- S2 - To set the DAY, DATE and MONTH, first push the BIG BUTTON (on FRONT), then:
- S3 - To set the DAY, press or hold the DAY Button.
- S3 - To set the DATE, press or hold the DATE Button.
- S3 - To set the MONTH, press or hold the MONTH Button.
- S4 - To EXIT the Clock and Date setting mode, push the slide switch down to the LOCK position.

TO OPERATE ALARM


- Slide the mode switch (on FRONT) to ALARM Mode. 
- To change the HOUR, press or hold the HR (Hours) button.
- To change the MINUTES, press or hold the MIN (Minutes) button.
- Turn the ALARM function On/Off, press RIGHT BOTTOM Button (on FRONT).
- When Alarm is ON, the Alarm Sound Symbol will appear on TOP LEFT of the Display.
- After the Alarm sounds, press RIGHT BOTTOM Button (on FRONT) to Shut Alarm Sound and Alarm OFF.

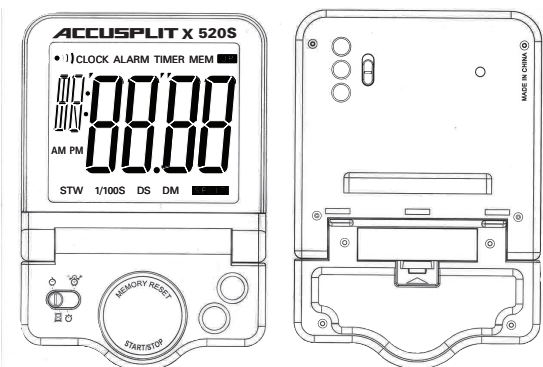

INCLUDED PARTS


- Dual use Bracket (Folding Table Top Foot Brace or Hanging Wall Mount*).
- * Extra components for Wall Hanging:
 - 3 Wood Screws.
 - Double sided adhesive foam pad.

TO OPERATE STOPWATCH

- Slide the mode switch (on FRONT) to STOPWATCH Mode. 
- To select One of the Four Modes of Count Up Stopwatch, press the HR (Hours) Button:

STW	1 second to 23 hours, 59 minutes, 59 seconds.
STW + 1/100s	0.01 second to 59 minutes, 59.99 seconds
STW + DS	0.01 second to 9999.99 seconds
STW + DM	0.01 second to 1999.99 minutes
- To START the Stopwatch, press START Button.
- To display a SPLIT time, press the SPLIT Button.
- To REJOIN the Running time, press the RELEASE Button.
- To END the Timing, press STOP Button.
- To RESET Time to Zero, press the CLEAR Button.

TO OPERATE MEMORY TIMER

- Slide the mode switch (on FRONT) to TIMER Mode. 
- To PRESET the Timer, use the HR, MIN, SEC Buttons (on BACK).
- To quickly RESET the Timer, press the CLEAR Button (and Start again).
(The PRESET Time is in the Memory and is indicated by MEM at top of Display)
- To START the PRESET Timer, press START Button.
- To take a TIMEOUT, press the STOP Button.
- To RESTART the timer, press the START Button.
- When PRESET Timer reaches Zero an Alarm sounds for 60 seconds.
(After the PRESET Timer reaches Zero, it starts Counting Up.)
- To RESET the Timer to the PRESET MEMORY, press STOP.
- To CLEAR the Preset Memory, press CLEAR.

REGISTER NOW

Please register your AX520S online at
<https://accusplit.com/pages/service-support>
and we will let you know about future
products.

Email (preferred) _____

User _____


5-YEAR DUAL NO-PROOF-OF-PURCHASE OR PROOF OF PURCHASE LIMITED WARRANTY™

See label on back of unit for details, or check
<https://accusplit.com/pages/service-support>

ACCUSPLIT, Inc. • 800-935-1996 • 925-290-1900 • FAX 925-290-1930
www.ACCUSPLIT.com • support@ACCUSPLIT.com


321-1809

TO OPERATE STOPWATCH

- Slide the mode switch (on FRONT) to STOPWATCH Mode. 
- To select One of the Four Modes of Count Up Stopwatch, press the HR (Hours) Button:

STW	1 second to 23 hours, 59 minutes, 59 seconds.
STW + 1/100s	0.01 second to 59 minutes, 59.99 seconds
STW + DS	0.01 second to 9999.99 seconds
STW + DM	0.01 second to 1999.99 minutes
- To START the Stopwatch, press START Button.
- To display a SPLIT time, press the SPLIT Button.
- To REJOIN the Running time, press the RELEASE Button.
- To END the Timing, press STOP Button.
- To RESET Time to Zero, press the CLEAR Button.

TO OPERATE MEMORY TIMER

- Slide the mode switch (on FRONT) to TIMER Mode. 
- To PRESET the Timer, use the HR, MIN, SEC Buttons (on BACK).
- To quickly RESET the Timer, press the CLEAR Button (and Start again).
(The PRESET Time is in the Memory and is indicated by MEM at top of Display)
- To START the PRESET Timer, press START Button.
- To take a TIMEOUT, press the STOP Button.
- To RESTART the timer, press the START Button.
- When PRESET Timer reaches Zero an Alarm sounds for 60 seconds.
(After the PRESET Timer reaches Zero, it starts Counting Up.)
- To RESET the Timer to the PRESET MEMORY, press STOP.
- To CLEAR the Preset Memory, press CLEAR.

REGISTER NOW

Please register your AX520S online at
<https://accusplit.com/pages/service-support>
and we will let you know about future
products.

Email (preferred) _____

User _____

5-YEAR DUAL NO-PROOF-OF-PURCHASE OR PROOF OF PURCHASE LIMITED WARRANTY™

See label on back of unit for details, or check
<https://accusplit.com/pages/service-support>

ACCUSPLIT, Inc. • 800-935-1996 • 925-290-1900 • FAX 925-290-1930
www.ACCUSPLIT.com • support@ACCUSPLIT.com

321-1809