

# ACCUSPLIT® AX705

## OPERATING INSTRUCTIONS


**Twin Button Feature:** The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.

### Event Timing (works for Lane and Finish timing)

This watch features *Ultimate Lane Timing*—you can’t make a mistake!

A – Start (beginning of event)

A – Stop (end of event)

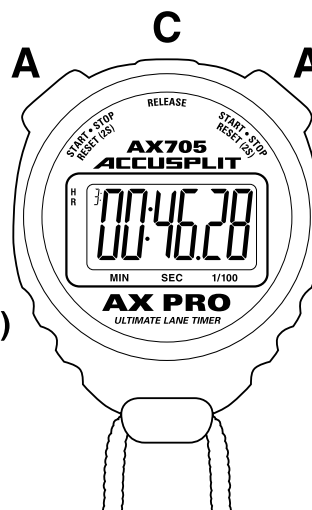

*Oops! I accidentally pressed **Stop** before the end of the event. There’s still one lap to go. Now what do I do? You can recover by simply pressing **A** again when the event really ends.*

**Note:** You can press **C** at any time to Rejoin (see current running time).

**Note:** You can use this watch to take Splits if you manually record after each split (Press **A** for each split time, then write it down before taking next split.). See ACCUSPLIT models AX625 (splits without memory), AX725 (16 memory), or AX725 (50 memory) for dedicated split timing.

### BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at [www.accusplit.com/support](http://www.accusplit.com/support). The watch uses a five-year CR2032 Lithium battery.

### Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

#### NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check  
<http://support.ACCUSPLIT.com>