 


CONAIR

家用制冰机说明书

Household Ice Maker Manual

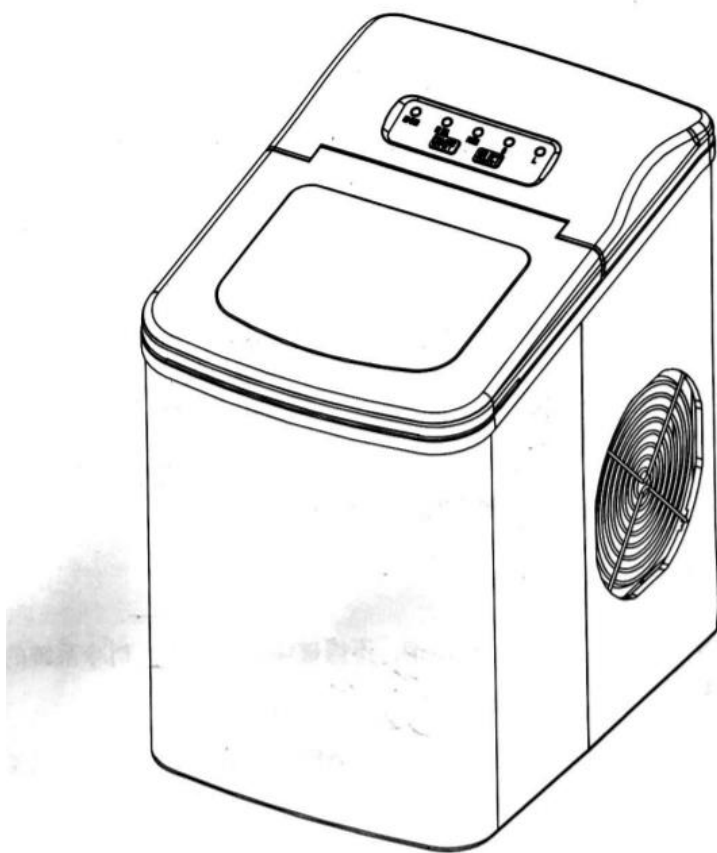

CZB-26YB

宁波富如瑞希贸易有限公司

Ningbo Furuixi Trading Co., Ltd.



Safety precautions:

- The refrigerant of this product is a flammable refrigerant, please pay attention to flammable source during usage. Please do not use combustible materials near the machine to avoid fire.**
- There should be no obstacles around the machine, and the ventilation should be kept unobstructed.**
- No machinery or other methods may be used to accelerate the demining process aside from the given instructions.**
- Do not damage the refrigeration circuit of the machine.**
- Aside from the types recommended by the manufacturer, no electrical appliances may be used in the food storage room of the machine.**
- The insulation material of the cabinet is flammable cyclopentane, please keep away from any fire source and it is recommended to ask professionals to dispose of it.**
- Do not store explosives, such as combustion-supporting sprays, in the appliance.**
- Only fill with drinking water.**
- The refrigeration system contains high-pressure refrigerant. The refrigeration system must not be damaged. The maintenance of the refrigeration system should be carried out by professionals.**
- If the power cord is damaged, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.**

Parts of the Ice Maker:

CZB-26YB

1. Ice shovel
2. Sensor if the ice basket is full: if the ice basket is full, ice basket indicated in the panel section would light up.
3. Ice basket: used to store and move ice cubes.
4. Upper cover: includes a transparent window to see the inside visibly.
5. Air outlet: To ensure ventilation within the machine.
6. Drain plug: Pull down the drain plug to drain excess water in the water tank.
7. Water upper limit position: Add water up to the "MAX" mark.
8. Control panel:
 - A. Select Ice Size: Small and Large
 - B. Power indicator
 - C. Ice tank indicator- indicates if the tank is full
 - D. Water shortage indicator: indicates if the machine needs more water
 - E. On/off button
 - F. Ice cube size selection button

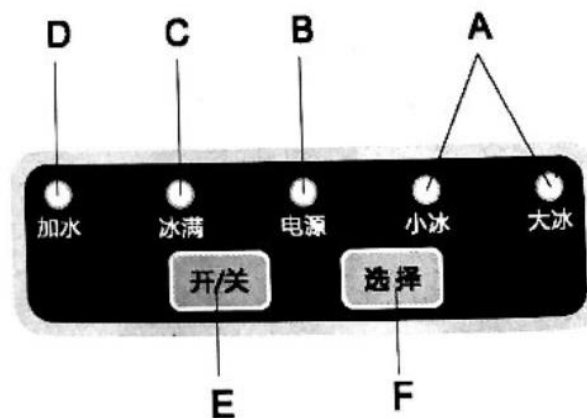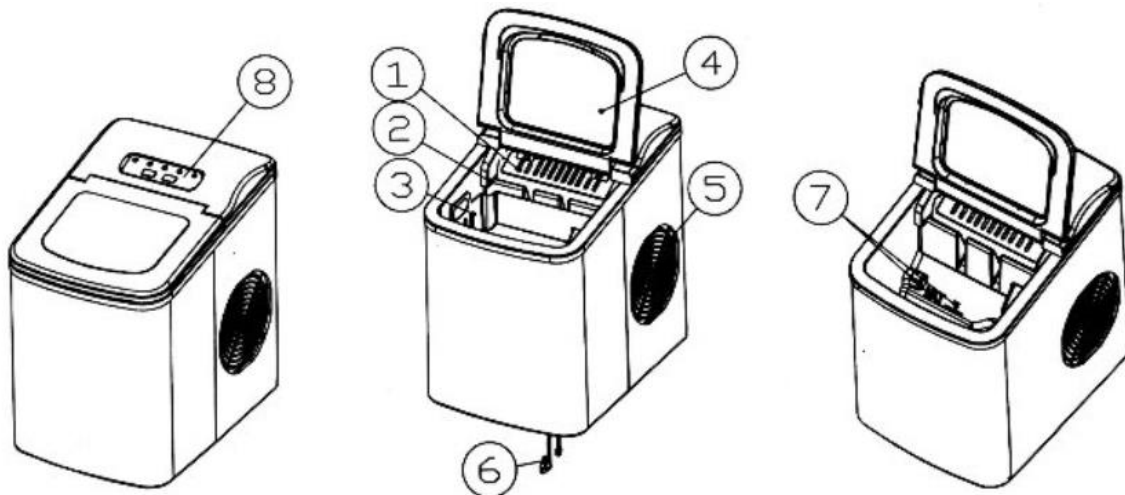

Get to know your Ice Machine:

Unpacking the Machine:

- 1. Remove the ice basket and Scrub in warm water, then wash the bladder with warm water and a soft cloth.**
- 2. Clean the column of the evaporator with water or alcohol.**
- 3. Place the ice maker in a place where there is no direct exposure to sunlight or heat radiation. Place the ice maker horizontally and ensure that there is at least a 15cm gap**
- 4. Find a suitable place where you can plug in the socket of the machine.**

Before Turning the Power On:

****Wrong use of the cause the wire to be grounded and lead to the risk of electric shock. If the power cord is damaged, please contact the after-sales service department.***

- 1. For your safety, the ice maker must be placed in a stable position.**
- 2. The machine needs a standard 220-240V / 50HZ / 10A power supply.**

Maintenance and Cleaning:

- 1. Take out the ice basket.**
- 2. Open the drain plug and drain the water in the water tank.**
- 3. Use diluted detergent, warm water and soft cloth to scrub the inner tank.**
- 4. The exterior of the machine should be frequently scrubbed with diluted detergent and warm water.**
- 5. Use another soft cloth to dry the inner tank.**
- 6. Close the drain plug.**

When the machine is not in used for a long time, the water in the inner tank should be drained and the inner tank should be wiped dry.

How to use the Machine:

- 1. press the "Select" button (F) to select the size of the ice cubes. If the room temperature is lower than 15°C, it is recommended that you choose Small ice selection to prevent continuous ice production.**
- 2. Open the top cover, take out the ice basket and add water to the water tank, make add enough water upto the "Max" level mark, then put it back in the ice basket and close the top cover.**
- 3. Press the "on/off" button on the control panel to start ice making.**
- 4. The duration of each ice making cycle is 6-13 minutes, depending on the size of the ice cube selected and the room temperature. The size of the ice cube is also related to the water temperature and the room temperature.**
- 5. After starting the ice machine, check the water level in the water tank frequently. If the water pump fails to deliver water, the ice maker will automatically stop, and the "add water" indicator will light up to indicate water shortage. At this time, fill the water tank and press the "on/off" button to restart ice making.**
- 6. If the ice in the ice basket is full, it will automatically stop ice making and the "Ice full" light will light up; when the ice cube position is lower than the infrared detection position, the machine will restart and start making ice again.**
- 7. It is recommended to change the water every 24 hours to keep the water clean. If the ice maker is not used for a long time, please empty the remaining water in the water tank.**

***It is recommended to use water that can be consumed directly.**

Malfunction Management:

Problem Scenario	Possible Causes	Solution
"Add Water" indicator light is on.	<ol style="list-style-type: none"> 1. Water shortage. 2. The filter at the bottom of the water tank is blocked. 	<ol style="list-style-type: none"> 3. Stop the ice-making process, add water, then click the "on/off" button to restart. 4. Clean the filter at the bottom of the water tank.
"Ice full" indicator light is on.	<ol style="list-style-type: none"> 1. There are too much ice in the refrigerator. 2. The sensor is broken. 	<ol style="list-style-type: none"> 3. Remove some of the ice in the refrigerator. 4. Hold down the "Select" button for more than 5 seconds. Forcibly turn on the Ice Machine and retreat for 10 cycles. You may also contact the manufacturer to replace the sensor.
"Ice full" indicator light flashes.	The ice shovel is stuck.	If the ice is stuck in the ice shovel, remove the ice cubes. Otherwise, please consult the after-sales engraving staff.
The ice cubes are connected together.	The ice-making loop time is too long; The evaporator is flooded into the ice box part too.	Stop ice making, after the ice cubes have melted, restart.
	The water temperature in the water tank is too low.	The suggested water temperature during the water replacement period is between 8°C to 32°C.
The ice is full but the "Ice Full" indicator does not light up.	The location of the machine has strong light, which affects infrared detection.	Move the machine to a place with relatively low light.
The ice making process is normal, but there is no ice to make.	The ambient temperature or water temperature is too high.	Please make ice when the ambient temperature is lower than 32°C
	Leak in the ice-making system.	Contact the after-sales service staff.
	The ice-making system is blocked.	Contact the after-sales service staff.

Technical Parameters:

Model	CZB-26YB
Climate Type	SN/N/ST
Security Level	1
Power Supply	220V/50Hz
Rated Current	0.7A
Rated Electricity Rate	105W
Refrigerant / Addition Amount	R600a / 21g
Foaming Agent	Cyclopentane
Net Weight	7.1kg
Shell	Stainless Steel Housing
Machine Size (WXDXH)	222mm x 313mm x 320mm

C\NAIR

宁波富如瑞希贸易有限公司

地址：浙江省宁波市杭州湾新区滨海四路 55 号
联系电话：0574-63321924 传真：0574-63303998
邮编：315336 E-mail: hicon@hicon.cn
网址：www.hicongj.cc

合 格 证

Certificate of Quality

检验员：_____

宁波富如瑞希贸易有限公司