 




SMART STEAM OVEN PRODUCT MANUAL

PRODUCT INTRODUCTION

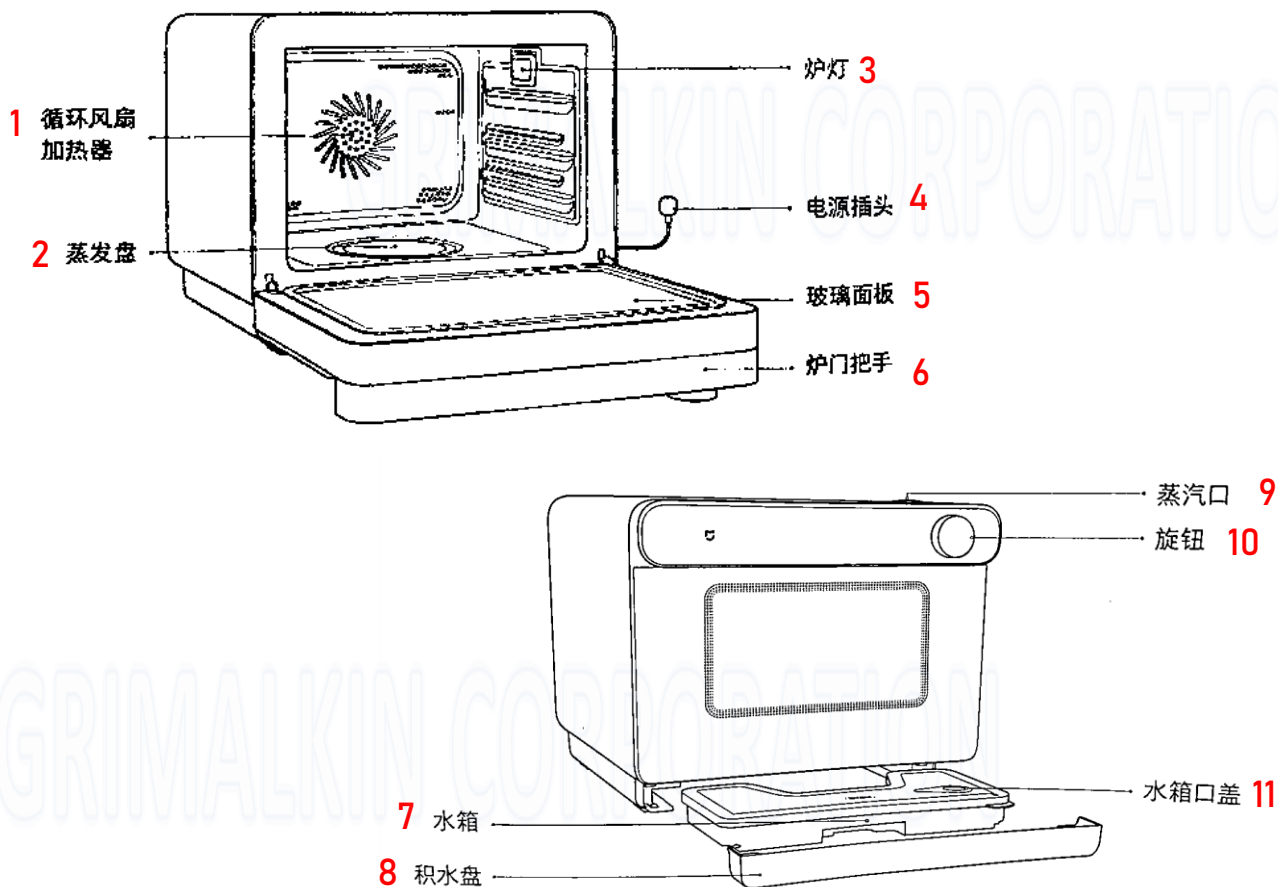

1. Circulating fan heater
2. Evaporation pan
3. Oven light
4. Power plug
5. Glass panel
6. Oven handle

 
7. Water tank
8. Drip tray
9. Steam outlet
10. Selection knob
11. Water tank inlet cover



SMART STEAM OVEN PRODUCT MANUAL


ACCESSORIES LIST

1

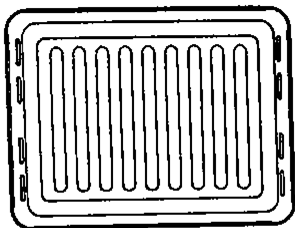


烤盘×1

 2

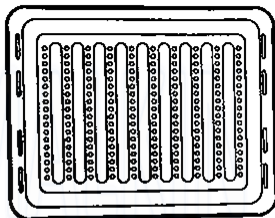


蒸盘×1

 3

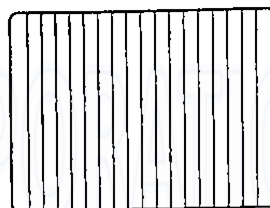

烤网×1

 4

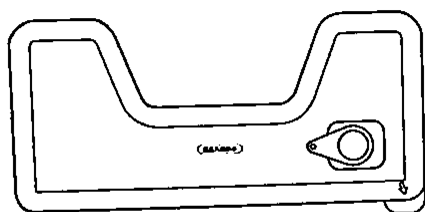

水箱×1

5



防烫手套×1

6



净水盒×1

7



直连接管×1

1. Baking plate x1
2. Steaming plate x1
3. Baking wire x 1
4. Water tank x 1
5. Oven mitts x1
6. Straight connecting pipe x 1



SMART STEAM OVEN PRODUCT MANUAL

INSTALLATION & REMOVING OF WATER TANK, DRIP TRAY, WATER PURIFIER


This item requires installation of water tank and drip tray to operate properly. The water purifier can be used on the ff. instances.

1. If tap water is used for cooking, water purifier is necessary to lessen water scales generated in the evaporation pan.
2. If water purifier will not be used, make sure to use distilled or purified water in cooking. The following accessories are required: water tank, drip tray & elbow connecting pipe.



SMART STEAM OVEN PRODUCT MANUAL

INSTALLATION OF WATER PURIFIER

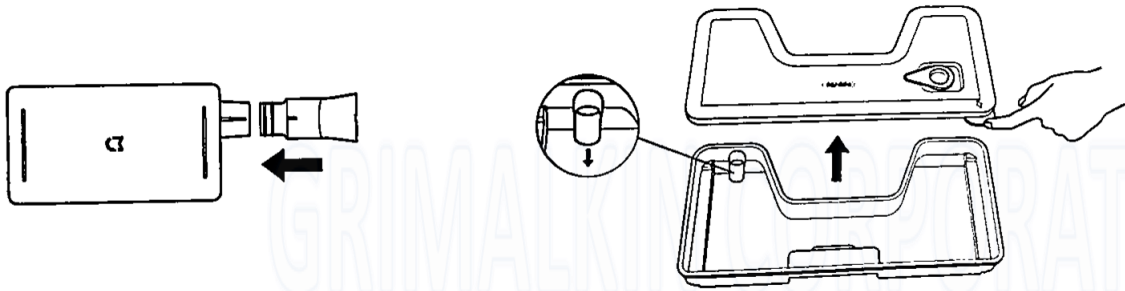

1. Install the straight connecting pipe into the outlet port of water purifier.
2. Open the water tank cover, and take out the elbow connector.

Note: Make sure to store the elbow connector properly for future use.





3. Make sure that the Xiaomi logo on the water purifier is facing upwards, connect the straight connecting pipe to the water outlet on the water tank.
4. Cover the water tank properly.

Note: After covering the water tank, double check each sides to ensure it is closed properly and tight to avoid leakage.



SMART STEAM OVEN PRODUCT MANUAL



INSTALLATION OF WATER TANK & WATER INJECTION

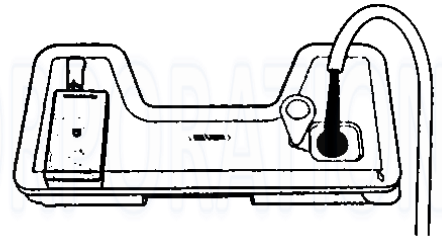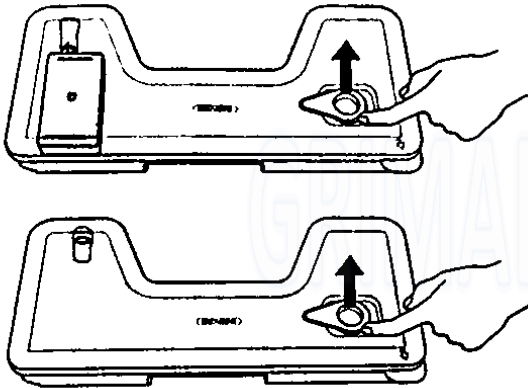

1. Open water tank inlet cover (applicable for both with / without water purifier)
2. Inject water to be used for cooking through the water tank inlet port

Note:

- Capacity of the water tank is between 0.2L ~ 1.2L. Please follow the scale indicated on the water tank as reference.
- Make sure that water tank is properly installed to avoid leakage.
- Wash & clean the water tank on a regular basis.

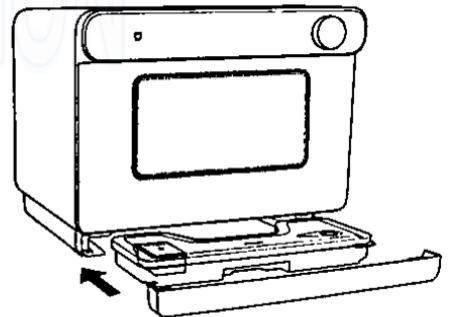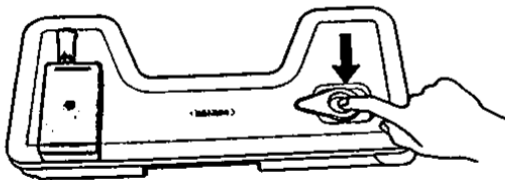



3. Cover the Water tank inlet tightly
4. Insert the water tank into the lower portion of the oven and push until it reached the end. Install the drip tray.

Note: Make sure that the water tank is pushed to the end to avoid leakage incidents.





SMART STEAM OVEN PRODUCT MANUAL

REMOVING THE WATER TANK AND WATER PURIFIER

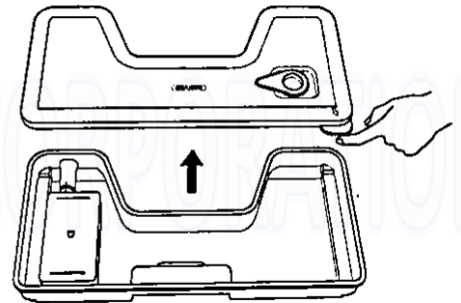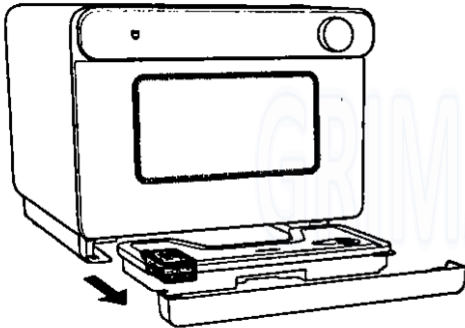

1. Pull the Drip tray and water tank outwards.
2. Open the water tank cover.

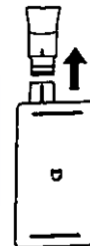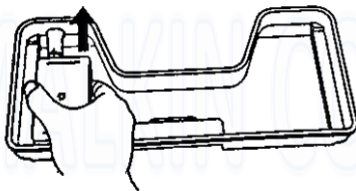

3. Remove the water purifier by pulling it upwards

Note: If the Water purifier has less than 10% of lifespan make sure to replace immediately as it will run out fast.

4. Remove the straight connecting pipe.

Note: Do not throw the straight connecting pipe, store properly for future use.



SMART STEAM OVEN PRODUCT MANUAL

WATCH TUTORIALS ON HOW TO USE

For initial use, when power supply is connected QR code will appear on the selection knob, scan the QR Code to watch the tutorials on how to use.



CLEANING FUNCTION FOR NEW UNITS

1. Before connecting power supply, check the manual on how to install the water purifier, make sure that water tank is filled with water fully before installing to the unit then properly install the drip tray.
2. For initial use, when power supply is connected, QR code will be displayed on the selection knob, press the knob to start cleaning.

Note: You can stop the cleaning in the middle of the operation, but you cannot pause the cleaning operation. When cleaning is stopped, this will be regarded as the cleaning is completed. Reminders will not be present afterwards.



SMART STEAM OVEN PRODUCT MANUAL

USAGE

Power On / Off

1. Power On

- When plugging in power supply, after the power on animation, unit will be on Pre-start status, when the display screen shows “长按开启” (which means long press to turn on) long press the selection knob for 2 seconds. By default, unit will be set on the previously used cooking program.



2. Power Off

- Long press the selection knob for 2 seconds to turn off the unit anytime.

Note: When program is paused or oven door is open or pre-heating is completed, unit will automatically turn off after 20 mins of idle status.



SMART STEAM OVEN PRODUCT MANUAL

USAGE

Connecting to Mi Home App

- This item can be connected to the Mi Home App, user can use the Mi Home App to control the unit.
- Scan this QR Code to download the Mi Home App. For user who are existing Mi Home users, you may proceed to the add device page in the app.
- Or search for Xiaomi Home in your playstore and install this app in your smart phone. Open the app, you may click the “+” located on the upper right corner and follow the instructions in app to connect the device.

 




SMART STEAM OVEN PRODUCT MANUAL

USAGE

Reset Wi-Fi

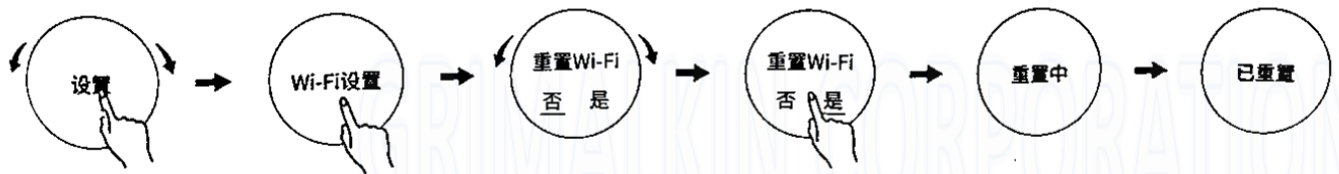

1. During Standby mode, Twist the selection knob until the screen displays “设置” (which means settings), Press the selection knob.



2. Screen will display “Wi-Fi 重置” (which means reset Wi-Fi), press the selection knob.



3. Screen will display “重置 Wi-Fi 否/是” (which means Reset Wi-Fi? No / Yes) Twist the knob to select.



4. Twist the selection knob until line is under “是” (Yes which is located on the right side) then press the selection knob.



5. Wi-Fi will reset. When display screen shows “重置中” it means it is currently resetting.



6. After reset, screen will display “已重置” (which means Reset is successful)



SMART STEAM OVEN PRODUCT MANUAL

USAGE

Wi-Fi Status

Status	Indication
Waiting for connection	Wi-Fi image is blinking slowly
Connecting	Wi-Fi image is blinking fast
Successfully connected	Wi-Fi image is always on

Note: When Wi-Fi is not yet connected, Wi-Fi image will appear blinking. After 30 mins, if Wi-Fi is not yet connected, Wi-Fi image light will turn off.

Selection Knob

1. Press Once: to Select
2. Twist to the left / right : to choose between the menu. Twist to the left to go the front option, twist to the right to move on to the next option.
3. In submenu, long press for 0.5 seconds: go back to main menu.
4. Long press for 2 seconds anytime: to Power Off.





SMART STEAM OVEN PRODUCT MANUAL

DIRECTIONS

After plugging power supply, you can immediately use the unit.
Note: when steam grilling, it is recommended to turn on the range hood.

1. Selecting program (using “烘烤” Baking as an example)
 - Twist the selection knob to “烘烤” (baking) then press the selection knob to confirm the program.
 - Twist the selection knob to adjust the temperature then press selection knob to confirm.
 - Twist the selection knob to adjust the cooking time then press selection knob to confirm.
 - Oven will now start cooking and countdown timer will start.

Note: While cooking, selection knob can be twisted to adjust the temperature & time

Program selection: (Following the sequence)

Sequence	Chinese Characters	English Reference
1	烘烤	Bake
2	纯蒸	Steam
3	蒸烤	Steam Grill
4	慢炖	Slow Cook
5	空气炸	Air Fry
6	发酵	Ferment



SMART STEAM OVEN PRODUCT MANUAL

DIRECTIONS

2. Pause

- While cooking, press the selection knob to pause the operation. Display will show remaining time when operation is paused.

Note:

- Within 10 mins after pressing pause, if the user did not operate or open/ close the oven door, there will be a notification sound every 30 seconds. If after 20 mins, unit is still on idle, it will automatically turn off.
- During pause, user may twist the selection knob to change the temperature & time.

3. Cancel

- During operation or paused situations, long press the selection knob for 0.5 seconds to cancel the current program and revert to standby mode.

Note:

- After long press of the selection knob, screen will display the choices 否/是 (No / Yes), twist the selection knob and select the right option to proceed with canceling the program.



SMART STEAM OVEN PRODUCT MANUAL

DIRECTIONS

4. Open / Close the Oven door

- Opening the oven door during operation will automatically pause the cooking inside the oven. Screen will display “请关门继续” (which means close the door to continue), at this moment, pressing and twisting the selection knob will have no effect. Close the oven door to restore cooking status.

Note:

- If oven door is open for more than 20 mins, oven will automatically shut off and cooking status and record will not be saved.
- During ferment program, if oven door is not opened for more than 20° angle, oven will still continuously operate. If oven door is opened for more than 20°x angle, program will be automatically paused.

5. Pipe Cleaning

- This function can discharge all remaining water in the pipes to the evaporation pan to avoid residue water or liquid in the pipes that cause malodor.

Note:

- Refer to the directions in App, After initial use in App, function will be distributed to the unit for succeeding use.



SMART STEAM OVEN PRODUCT MANUAL

DIRECTIONS

6. Water Scale cleaning

- When the water scale on the evaporation pan is too much, put citric acid on the evaporation pan then press the selection knob. After pressing, the evaporation pan will automatically inject water and start heating. After heating, wipe clean the evaporation pan.

Note:

- Refer to the directions in App, After initial use in App, function will be distributed to the unit for succeeding use.

7. Deep Cleaning

- Deep cleaning is used to clean oven cavity. This will thoroughly clean all areas.

Note:

- Refer to the directions in App, After initial use in App, function will be distributed to the unit for succeeding use.



SMART STEAM OVEN PRODUCT MANUAL

CLEANING & MAINTENANCE

1. Clean the oven regularly and take out all residues from cooking. Maintain the oven cavity clean. If the food is spilled inside the oven use a wet cloth to wipe. If stubborn dirt is present, user can use a soft cleaning agent. Do not use rough and abrasive cleaning agent.
2. Take out the water tank and drip regularly, use a soft sponge when cleaning.

ERROR CODES

ERROR CODE	ISSUE	NOTE
E-06	Warning High Temperature	Contact aftersales team for repair.
E-09	Oven sensor damaged	
E-10	Water tray sensor damaged	
E-11	Abnormal communication	



SMART STEAM OVEN PRODUCT MANUAL

TROUBLESHOOTING

ISSUE	TROUBLESHOOT
Oven light is not turning on	Oven light / Main circuit board is damaged, contact aftersales service.
Food is not cooked	Base on the ingredient, do necessary adjustments on the temperature and time.
Burnt food	
Heating pipe is not heating	Heating pipe / Main circuit board is damaged, base on the ingredients do necessary adjustments on the temperature. Contact aftersales service.
Circulating fan is not working	Fan / Main circuit board is damaged. Contact aftersales service.
Notice of water shortage	Check water tank and add water. Contact aftersales service.

GRIMALKIN CORPORATION



SMART STEAM OVEN PRODUCT MANUAL

PRECAUTIONS

Usage limitations

- The normal working altitude of the smart blender is within 0m~2000m
- Product must be placed on a flat and even surface. Must not be placed in a humid area or an area near fire or heat source. Must have at least 30cm distance from any heat source.
- Do not put the unit in areas that are easily affected by electromagnetic waves.
- Do not let children or person with disability use this item without supervision.
- This is not a toy, keep out of reach from children.
- Do not hang the power cord on a sharp surface.
- This product is for home use only, do not use this product for other functions aside from heating food / defrosting.
- Do not use accessories other than the ones included in this package to avoid possible damage.
- This product must not be used outdoors.
- Coal or other flammable material must not be used in this product.



SMART STEAM OVEN PRODUCT MANUAL

PRECAUTIONS

Cleaning instructions

- Smart Seam Oven must be cleaned in a regular basis to avoid residue oil that can cause fire.
- So not use sharp cleaning materials when cleaning the glass areas to avoid breaking the glass.
- The external areas and accessories can be cleaned using a soft cloth or sponge. Wipe with small amount of cleaning agent then use clean water to wipe out the remaining cleaning solution used.
- Regularly check the steam outlet to ensure that it is not clogged.

Power Supply

- Make sure to only use the power cord provide in the package.
- Before cleaning / maintenance and transporting, make sure to unplug power cord.
- Do not touch the power cord with wet hands to avoid electric shock.
- Do not overly squeeze, bend or twist the power cord.
- Use only with 220V outlet
- Unplug the power cord the proper way to avoid damages on the power cord.



SMART STEAM OVEN PRODUCT MANUAL

PRECAUTIONS

Environment

- This product must be stored in a cool & dry place.
- The oven must be placed on a flat surface. Smoke and oil are produced while using the oven, to avoid damaging other furniture or causing fire due to the high temperature the oven must have at an appropriate distance on all sides. 10cm each on back and sides, 25cm from the top.
- Avoid placing the oven near flammable materials or heat sources.

While using

- Do not put anything on top of the oven.
- Do not put flammable items inside the oven like paper or plastic products.
- Do not put sealed containers inside the oven while reheating, this may explode.
- When putting containers inside the oven, make sure it is not filled full to prevent overflowing while heating.
- When using metallic containers, take extra caution.
- Make sure to unplug the power cord after using & if unit will not be used for a long duration.
- The water purifier lessen the water scale generated but it doesn't prevent water scales. If there is visible water scale present inside the evaporation pan clean it immediately and replace the water purifier.



SMART STEAM OVEN PRODUCT MANUAL


BASIC PARAMETERS

Product Name	Smart Steam Oven
Model No.	MZKXD01ACM-MZ01
Power (Steaming)	1200W
Power (Baking)	1450W
Power (Steam Grilling)	1450W
Capacity	30L
Rated Frequency	50Hz
Rated Voltage	220V
Item Dimensions	506 x 460 x 388 mm
Wi-Fi Connection	Wi-Fi IEE 802.11b/g/n 2.4GHz
Approved Code	CMIIT ID: 2017DP6053 radio transmitter



SMART STEAM OVEN PRODUCT MANUAL

ELECTRICAL DIAGRAM

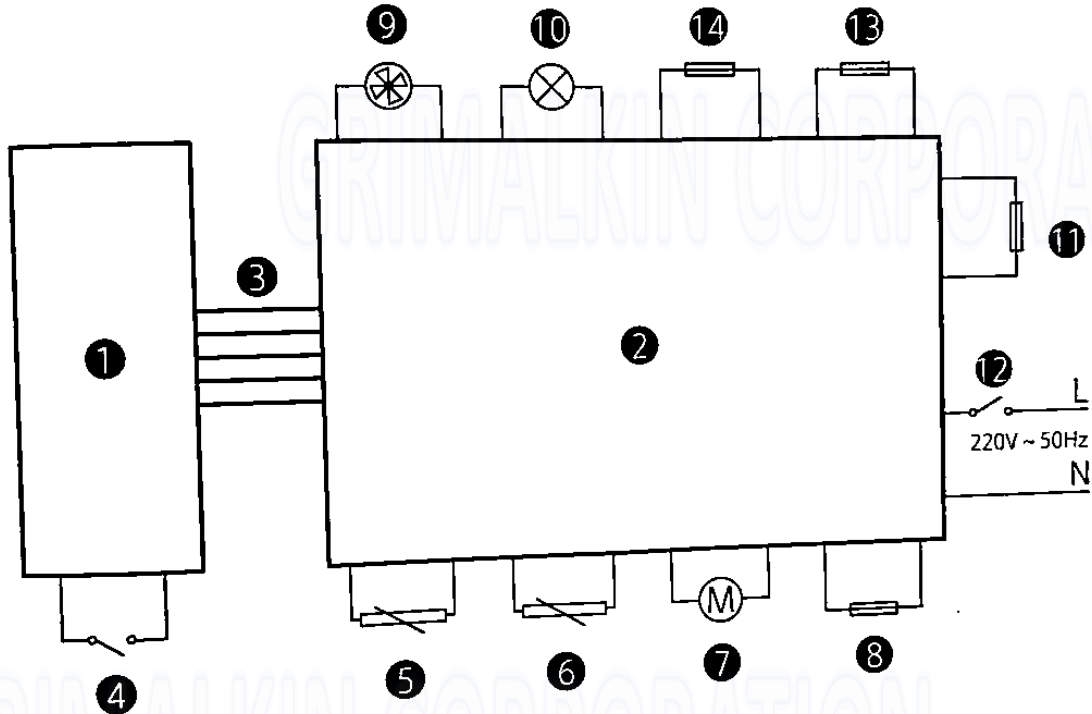

- | | |
|---------------------------------------|---------------------------------|
| 1. Main control panel | 8. Evaporation pan heating pipe |
| 2. Power board | 9. Back fan |
| 3. Connection cable | 10. Oven light |
| 4. Door open / close sensor | 11. Current fuse |
| 5. Evaporation pan temperature sensor | 12. Snap thermostat |
| 6. Oven temperature sensor | 13. Hot air heating pipe 1 |
| 7. DC water pump | 14. Hot air heating pipe 2 |