

# BEARD OCTANE

## HEATED BEARD STRAIGHTENER



— INSTRUCTION MANUAL —

BEARD OCTANE

### READ BEFORE USE //

Thank you for choosing this Beard Octane Heated Beard Straightener. In order to ensure you use this product in a safe and effective manner, please read this instruction manual thoroughly and be sure you are familiar with the operation of your new Heated Beard Straightener. Retain these instructions for future reference.

If you need assistance at any time with your Heated Beard Straightener, please contact us at [support@beardoctane.com](mailto:support@beardoctane.com).

### QUICK TIPS //

Want more tips for using the Beard Octane Heated Beard Straightener to style your beard? Then scan the QR Code below:



01

BEARD OCTANE

### TECHNICAL SPECIFICATIONS //

The Heated Beard Straightener unit is designed to work on ordinary household current only, 100-240V, 50/60Hz. It is not intended for commercial use.

RATED VOLTAGE	100-240V
FREQUENCY	50/60 Hz
RATED POWER	19W
HEATING ELEMENT	PTC - Ceramic Coating
TEMPERATURE RANGE	250-430°F

### WARNING & SAFETY PRECAUTIONS //

**BURN DANGER: KEEP OUT OF REACH OF CHILDREN AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES.**

THE UNIT'S HEATING PLATE BECOMES VERY HOT DURING USE. AVOID DIRECT CONTACT WITH SKIN. DO NOT USE IF THE UNIT'S BRISTLES ARE BROKEN, BENT OR DAMAGED. TAKE CARE NOT TO DROP THE UNIT, AS HEAVY IMPACTS MAY CAUSE UNSEEN INTERNAL DAMAGE.

02

BEARD OCTANE

DO NOT USE THIS UNIT FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.

MAKE SURE THAT THE SUPPLY CORD NEVER COMES INTO CONTACT WITH THE HOT PARTS OF THE UNIT.

UNIT MUST BE PLACED BRISTLE'S FACING UPWARDS, ON A NON FLAMMABLE, HARD SURFACE WHILE USING. DO NOT PLACE UNIT ON SOFT MATERIAL E.G. CARPET, BEDDING, TOWELS, RUGS ETC, OR WITH BRISTLES FACING DOWNWARD.

THE UNIT MUST ALWAYS BE UNPLUGGED:

- BEFORE CLEANING AND MAINTENANCE PROCEDURES.
- IF IT IS NOT WORKING CORRECTLY.
- AS SOON AS YOU HAVE FINISHED USING IT.
- IF YOU LEAVE THE ROOM, EVEN IF ONLY FOR A SHORT WHILE.

THIS UNIT MUST NEVER BE USED NEAR WATER (E.G. A FILLED SINK, BATHTUB, TOILET OR SHOWER). DO NOT ALLOW THE UNIT TO GET WET.

RISK OF FIRE: DO NOT USE UNIT OUTDOORS, OR OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED, OR WHERE OXYGEN IS BEING ADMINISTERED.

03

BEARD OCTANE

### OPERATING INSTRUCTIONS //

#### Getting Started

1. Plug the unit's power cord into a properly installed power outlet.
2. Press the on/off button from OFF to ON, until the LED displays the starting temperature.
3. After approximately one minute, the device is ready to use.
4. To adjust the temperature, click the on/off button until your desired temperature is reached. The temperature will flash on the LED display. To use the desired temperature that is on the LED display, simply stop clicking the on/off button and the LED display will stop flashing. \*Refer to the temperature chart for recommended temperature settings.
5. After approximately two minutes, the device is ready to use.

#### Preparing Your Beard

- DO NOT USE ON A WET BEARD. Your beard must be dry to avoid creating steam that may burn you and your beard.
- Do not use the unit on a beard shorter than 2 inches.
- Brush or comb your dry, clean beard to remove all tangles before using the unit.
- (Optional) Apply a light amount of Beard Octane beard oil to help protect your beard hair from the

04

BEARD OCTANE

heat of the unit. Wait 5 minutes after applying oil to your dry beard, before using your heated beard straightener.

#### Recommended Temperature Settings

Unless your beard is known to be thin, or badly damaged, we recommend starting with the default setting, until you become more comfortable with how your beard will style with our Heated Beard Straightener.

DEFAULT TEMPERATURE	320°F
THIN/DAMAGED/FINE BEARD HAIR	250-280°F
NORMAL BEARD HAIR	320-360°F
COARSE/THICK/CURLY BEARD HAIR	400-430°F

#### Using The Heated Beard Straightener

- Using a medium pace (not too fast, not too slow), brush your beard with the Heated Beard Straightener as you would any regular brush, moving in sections from root to tip.
- Depending on the length of your beard, this should take an average 5 minutes to complete.

05

BEARD OCTANE

#### After Using The Heated Beard Straightener

- When you have completed brushing your beard, turn the Heated Beard Straightener off, unplug the unit, and leave the unit on a hard surface with the bristles facing upwards.
- Allow the unit to cool before storing.

#### Storing Your Unit

- Unplug the unit and let it cool, with bristles pointing up.
- After it has cooled, store in a clean, dry place, with the bristles pointing up to protect the unit.
- Store cord loosely coiled; never wrap the cord around the unit. This could cause the cord to wear prematurely and break.
- Do not put any stress on the cord where it enters the handle, as it could cause the cord to fray and possibly break.
- Never hang the unit up by the power cord.

#### Cleaning Your Unit

- To clean the unit, make sure it is turned off and the plug is pulled out of the power outlet, and the

06

BEARD OCTANE

- unit has cooled down.
- Clean the casing with a soft, damp cloth, without any additional cleaning agents.
- Clean the bristles of the unit softly, with a slightly moist cloth. If necessary you can use a small amount of liquid dishwashing detergent on the cloth.
- Dry the product thoroughly after cleaning, and allow the product to air dry for at least 12 hours before next use.

### WARRANTY //

We offer a 12 month warranty with a hassle-free return or exchange program for the Beard Octane Heated Beard Straightener. If you are dissatisfied with your unit at any time, contact us with your order number (or retailer receipt) at [support@beardoctane.com](mailto:support@beardoctane.com) and we will work to resolve the issue to your satisfaction!

[www.BEARDOCTANE.com](http://www.BEARDOCTANE.com)



Manufactured for Beard Octane

07