

97-105 MONK STREET DERBY UK DE22 3QE



Dirty Pro Tools Model No. A388 ELBL: FMNO. QT6268: Electric Blower Vacuum

General Information & Safety Instructions

When using the equipment, a few safety precautions must be observed to avoid injuries and damage.

Please read the complete operating manual with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, please also give them these operating instructions. We accept no liability for damage or accidents which arise due to non-observance of these instructions and the safety information.

Safety information

Warning!Read all instructions.Failure to follow all instructions listed below may result in electric shock, fire and /or serious injury.

SAVE THE INSTRUCTIONS.

Intended use:

The appliance has lawn trimmer functions. This lawn trimmer is designed for cutting grass and similar soft vegetation and for trimming grass edges in private and hobby garden areas.

Training

- a) Read the instructions carefully. Be familiar with the controls and the proper use of the equipment.
- b) Never allow children or people unfamiliar with these instructions to use the tool.Local regulations may restrict the age of the operator
- c) Never use while people, especially children, or pets are nearby.
- d) Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- e) If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
- f) This appliance is not intended for use by persons (including children)with reduced physical, sensory or metal capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- g) Children should be supervised to ensure that they do not play with the appliance.

SPECIFIC SAFTY RULES

- 1. Before use check the supply and extension cord for signs of damage or aging.if the cord becomes damaged during use, disconnect the cord from supply immediately.
- 2. DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.Do not use the appliance if the cord is damage or worm.
- 3. Read the instruction carefully. Be familiar with the controls and proper use of the equipment.
- 4. Keep extension cord away from cutting elements.
- 5. Wear protective glasses and goggles.
- 6. Never allow children or people unfamiliar with the instructions to use the machine.
- 7. Stop using the machine while people, especially children, or pets nearby
- 8. Only use the machine in daylight or good artificial light
- 9. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
- 10. Never operate the machine with damaged guards or without the guarding place
- 11. Keep hands and feet always from the cutting means at all times especially when switching on the motor.
- 12. Take care, against injury from any device fitted for trimming the filament line length.
- 13. Never fit metal cutting element.
- 14. Never use replacement parts or accessories not provided or recommended by the manufacturer.
- 15.Disconnect the machine from the mians before checking, cleaning or working on the machine and when it is not in use.
- 16.Inspect and maintain the trimmer regularly. Have the trimmer repaired only by an authorized repairer.
- 17. Take care against injury from the blade fitted for trimming the filament length. After extending new cutter line, always return the trimmer to its normal operating position before switching on.
- 18. Always ensure that ventilation openings are kept clear of debris.
- 19. When not in use, store the trimmer out of the reach of children.
- 20. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable

- 21. This appliance is not intended for use by persons(including children) with reduced physical. sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 22. The nylon line will run on for a few seconds after the tools is switched off!

General instructions

Read the complete operating manual with due care. Acquaint yourself with the controls and how to use the tool.

All people (including children) who, for reasons of physical, sensory or mental ability or inexperience or lack of knowledge, are not in a position to be able to use this device safely, should not use the device unsupervised or without instruction by or from a responsible person. Children must always be supervised in order to ensure that they do not play with the device.

Never allow children to use the tool.

Never allow other people, who are not familiar with the operating instructions use the tool.

Never use the tool when there are people – particularly children – or pets nearby.

The user is responsible for any accidents or hazards suffered by third parties or their property.

Preparation

Always wear sturdy footwear and long trousers when using the tool. Never wear loose fitting clothes or jewellery. They may get drawn into the suction opening. Rubber gloves and non-slip shoes are recommended when working outdoors. Wear a hair net if you have long hair.

Wear eye protection while you work.

Use a dust mask when working on dusty jobs

Always check the tool, the power cable and the extension cable before using the tool. Only operate the tool when it is in good working order and is not damaged in any way. Damaged parts have to be replaced immediately by a qualified electrician.

Never use the tool if any of its safety devices or guards are damaged or if any safety attachments such as deflectors and/or grass catching devices are missing.

When working outdoors, use only extension cables which are approved for outdoor use. Extension cables must have a minimum cross section of 1.5 mm2. The plug connections must be splash-proof.

Operation

Always trail the power cable behind the tool.

If the power cable or extension cable is damaged, pull the plug out of the socket. NEVER TOUCH THE CABLE BEFORE THE PLUG HAS BEEN PULLED OUT OF THE SOCKET.

Do not carry the tool by its power cable.

Always pull out the power plug:

When the tool is not being used, when it is being transported or when you leave it unsupervised.

When you are checking the tool, cleaning it or removing blockages.

When you want to carry out cleaning or maintenance work on the tool or replace accessories.

After the tool impacts with foreign bodies or you notice unusual vibrations.

Use the tool only in broad daylight or in well-lit conditions.

Do not underestimate the forces involved. Make sure you stand squarely and keep your balance at all times.

If possible, avoid using the tool on wet grass.

Ensure that you maintain a steady foothold particularly while working on slopes.

Never run carrying the equipment.

Always keep the ventilation opening clean.

Never direct the vacuum/blow hole at people or animals.

The machine may only be used at reasonable times of the day, i.e. not in the early morning or late evening when it will be a nuisance to other people. Permitted times of use specified by local authorities must be observed.

The machine must be run at the lowest possible motor speed required to carry out the work.

Remove all foreign objects with a rake and brush before starting any blowing or vacuuming work.

Where conditions are dusty, dampen the surface a little or use a sprinkler attachment.

Use the full-length blower nozzle extension so that the air current can work near to the ground.

Watch out for children, pets, open windows etc. and blow the foreign objects safely away from them.

Maintenance and storage

Check that all nuts, bolts and screws are securely tightened in order to be sure that the machine is in a safe working condition.

Frequently check the debris bag for signs of wear and deformation.

Use only genuine accessories and spare parts.

For your own safety, replace worn or damaged parts without delay.

Electric tools should be kept in a dry place when not in use.

If the mains cable for this device is damaged, it must be replaced by the manufacturer or its aftersales service or similarly trained personnel to avoid danger.

The tool can be plugged into any socket-outlet (with 230 V AC) that is equipped with a 10A fuse or higher. The socket-outlet has to be safeguarded by an earthleakage circuit breaker (e.l.c.b.). The operating current must not exceed 30 Ma

CAUTION!

Read all safety regulations and instructions. Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury. Keep all safety regulations and instructions in a safe place for future use.

Proper use

The garden blower vac is designed to handle only foliage and garden refuse such as grass and small branches. Any other use is prohibited.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

Before starting the equipment

Before you connect the equipment to the mains supply make sure that the data on the rating plate are identical to the mains data.

Always pull the power plug before making adjustments to the equipment.

Fitting the debris bag

First hang the eyelet on the hook on the suction tube. Then slip the debris bag over the port on the motor housing. Make sure that there is an audible click when they engage.

Operation

Connecting the equipment to the power supply and switching on

The equipment can be connected to any socket outlet (with 230 V AC) that is equipped with a 10A fuse or higher. The socket-outlet has to be safeguarded by an earth-leakage circuit breaker (e.l.c.b.). The operating current must not exceed 30 mA.

Insert the equipment's plug into the power cable coupling (extension).

Secure the power cable with the strain-relief clip provided on the equipment .

To switch on, push the On/Off switch toward "I".

To switch off, push the On/Off switch toward "O".

Selecting the mode of operation

Suctioning

Turn the lever to position A. You can do this both when the equipment is at a standstill and while it is running.

Blowing

Turn the lever to position B. You can do this both when the equipment is at a standstill and while it is running.

Channel the air stream forward and walk slowly to blow foliage or garden refuse into a pile or to clear out hard-to-reach places.

Caution!

Empty the debris bag before blowing. Otherwise, the material that has been vacuumed up could drop out.

Emptying the debris bag

Empty the debris bag in good time. With a nearly full bag, the suction power drops notably. Organic waste should be composted.

Switch off the equipment and pull out the power plug.

Open the zipper on the debris bag and shake out the material.

Close the zip on the debris bag again.

Cleaning & maintenance

Always pull out the mains power plug before starting any cleaning work.

Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.

We recommend that you clean the device immediately each time you have finished using it.

Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device.

After shaking out the debris bag, turn it inside out and thoroughly clean it in order to prevent mould and unpleasant doors from forming.

You can use soap and water to clean out a heavily soiled debris bag.

Rub a bar of dry soap across the zipper teeth if the zipper becomes difficult to pull.

Clean the vacuum/blower tube with a brush upon evidence of dirt and grime.

Dirt and grime can make the switch (blower/vacuum) more difficult to operate as a result of the material that swirls up off the ground. When this occurs, simply flip the switch back and forth a few times, which should bring it back to the normal feel.

Troubleshooting guide

Fault - Motor does not start

Possible cause - No voltage present / Power cord defective

Remedy - Check the cord and fuses / Check the power cord

TECHNICAL DETAILS

Voltage / frequency :	230-240V~50 Hz
Power	3000W
No load speed :	14.000 min-1
Max airspeed	270 km/h
Max air volume	13.2 m³/min
Dust bag	45 L
Shredding ratio:	10: 1

NOISE

Noise emission values measured according to relevant standard. (K=3)

Acoustic pressure level LpA	96 dB(A)
Acoustic power level LwA	102 dB(A)

ATTENTION! Wear hearing protection when sound pressure is over 96 dB(A). aw (Vibration) 7,5 m/s 2 K = 1,5 m/s 2

DECLARATION OF CONFORMITY

Œ



97-105 MONK STREET DERBY UK DE22 3QE

DECLARATION OF CONFORMITY

This is an important document and should be retained.

WE DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE PRODUCT DESCRIBED UNDER "TECHNICAL DATA" IS IN CONFORMITY WITH ALL RELEVANT PROVISIONS OF THE DIRECTIVES. EUROPEAN DIRECTIVE (INCLUDING, IF APPLICABLE, THEIR AMENDMENTS UP TO THE DATE OF THE SIGNATURE):

2011/65/EU

2006/42/EC

2014/30/EU

2000/14/EC ANNEX V LWA 96DB(A) / 102DB(A)

EUROPEAN HARMONIZED STANDARDS (INCLUDING, IF APPLICABLE, THEIR AMENDMENTS UP TO DATE OF SIGNATURE):

EN60335-1: 2012/A11:2014

EN50636-2-100: 2014

EN 62233:2008

EN55014-1: 2017

EN55014-2: 2015

EN61000-3-2:2014 EN61000-3-3:2013

IEC62321-8: 2013

DIRTY PRO TOOLS MODEL NO. A388 ELBL:

FMNO. QT6268: ELECTRIC BLOWER VACUUM

SIGNED:

DIRECTOR - RUGBIR JOHAL

DATE ISSUED - 02/01/2018