

Dear valued customer:

Thank you for purchasing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally hand crafted and designed to provide a lifetime of trouble-free performance. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

NOTE :the initial user code: 1234; The initial master code:4449136

Open the door

Input “#” and input the user code, then input “#” to confirm, after three beeps, the display reads “OPEN”, the door can open.

When wrong code is input, the display reads “ERROR”, and three times' wrong code inputting will lead to one minute alarming, which need the correst code to stop alarming.

Set user's code

Input “#” and the input the current user code, after three beeps, the display reads “OPEN”, the door will open automatically in seven minutes. During the seven minutes, press the “*” key, the display reads “-----”, which indicates the entering into the state of code setting. Input new user code (3-8 digits), and press “#” to confirm, the display reads “INTO” which indicates the acceptance and storage of the new user code.

Set master code

Input “#” and input the current master code, after three beeps, the display reads “OPEN”, the door will open automatically in seven minutes. During the seven minutes, press the “#” key, the display reads “-----”, which indicates the entering into the state of code setting. Input new master code (3-8 digits), and press “#” to confirm, the display reads “INTO” which indicates the acceptance and storage of the new master code.

Set date and time

1. When install batteries first time, the screen shows the date and time are "00-01-01" and "00:00"
2. In standby, press key “*”, display will firstly show the date "00-01-01", and then change to "SLEEP" within 6 seconds.
3. When the date or time appears in the screen, you can press “#” to select Year / Month / Day/ or Hour / Min / , selected number of Day/ Hour / Min / Day will keep flashing.
4. Use key“0” and “8” to modify flashing date or time, each press of “0”, selected number will be valued by one, each press of “8” will cause selected number value plus one.

Hide code

In order to keeping secrecy, display can be set to show only "□" instead of code number. Operation is as following:

press key "#" to start the power and click "**", then enter correct code, display will show only "□", if the code is correct, it will show "open", indicate that the program is in normal working condition.

Alarm function

Press "0" once, the display reads "BELL ON", then the alarm will be on when the safe is shaken. During alarming, enter correct code, the alarm will stop and the alarm function is removed; if not enter correct code, the alarm will last for one minutes.

Door opening check

Input correct code, after "OPEN" displays and the display is still on, press "0", the display will show the opening record (date & time) of last time

PASS 1: door opening by user's code

PASS 2: door opening by master code

Before "PASS 1" or "PASS 2" disappear, press "0" again, then show the door opening date and time of second last time. Last 16 times door opening records can be checked by analogy.

Change battery

The working voltage of our system is 6.0V, and the key pad uses 4 pieces of 1.5V batteries. Under the normal condition, when the display reads "LO-BATTE" it means the voltage is low and you need to change the batteries. After changing the batteries, please operate again to ensure there is no problem.

When you forget the code, press "AN" to recover the code to initial state:

Initial user's code:1234 initial master code:4449136

Things to remember

- a. Don't leave your keys inside the safe.
- b. You may use the same code every time you lock the safe, or put in a different one, as you desire.