

FOOT SPA MANUAL



Please keep this manual for future use.

 
 
 
PARTS LIST

| Array | FIR Belt | Main Body |
|--|--|--|
|  x 2 |  x 1 |  x 1 |
| Power Cord | Wrist Band | |
|  x 1 |  x 2 | |


OPERATING INSTRUCTIONS

1. Connect the main frame to the power source, and then connect the parts we provide to the main frame. Make sure that put the fixture in a dry and stable place.
2. Turn on the machine by pressing down the power button on the back side of the main frame.
3. Put the arrays into your basin. The water level should completely submerge the array.
4. It is recommended that add about 0.1g sea salt to the bath water to enhance ionic conduction.
5. Press the corresponding touch key to start the desired working mode.

PANEL INSTRUCTIONS

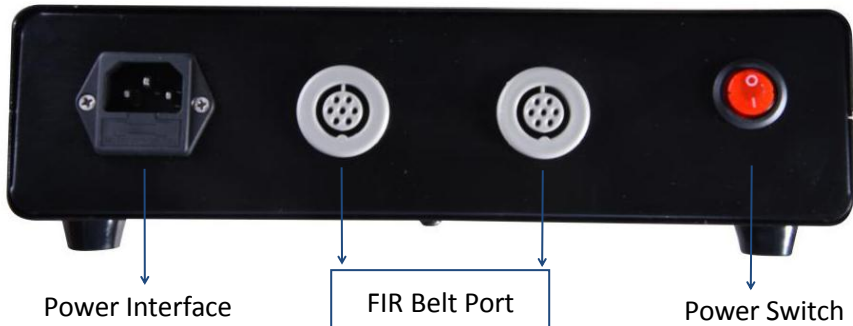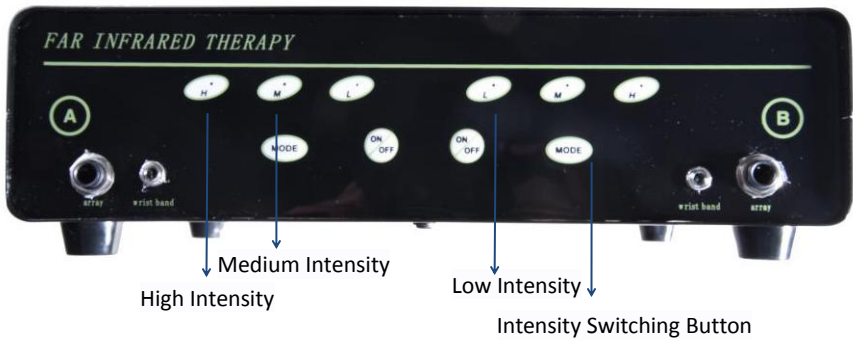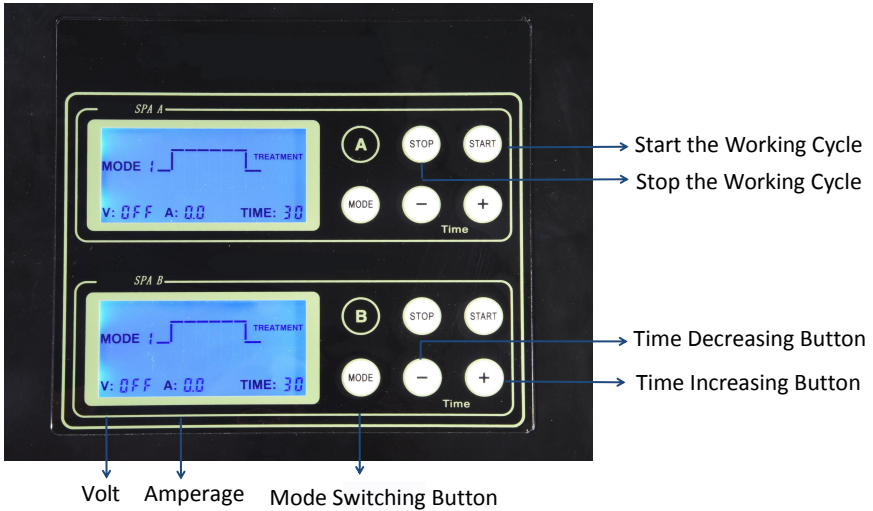


MODE INSTRUCTIONS

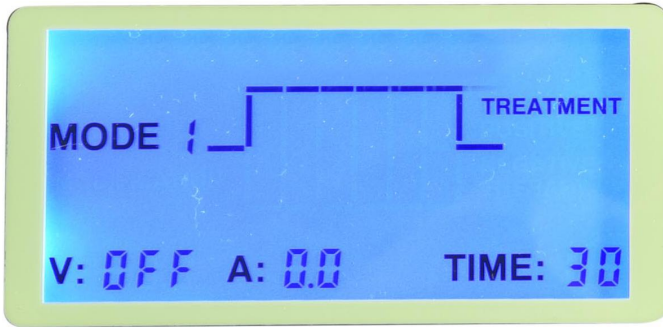 


Mode 1 All positive polarity, expelling acid substance and raising PH levels.

 
Mode 1 is the default mode whose setting time is 30 minutes. The maximum working cycle is 60 minutes. However, 30-minute-session is suitable for most of the people.

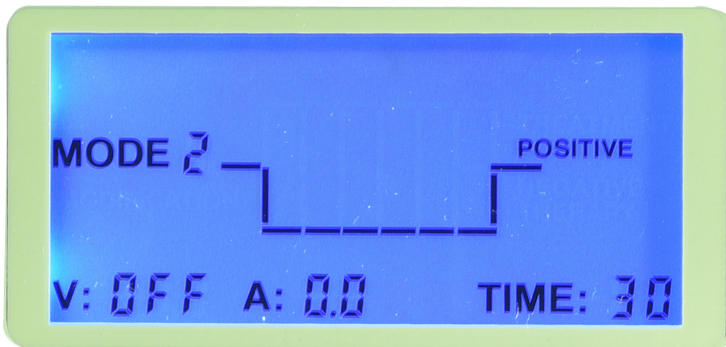

 
Mode 2 All negative polarity, expelling heavy metals and lowering PH levels.

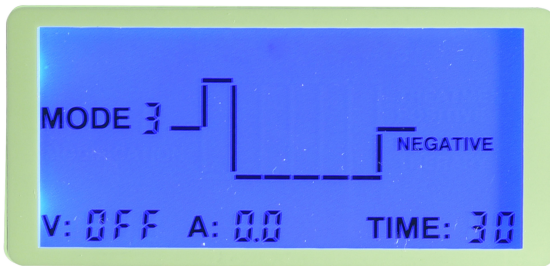

 Mode 3 (70%+)(30%-)Expelling acid substance as well as heavy metals and raising PH levels. Mode 3 is the most popular mode which is suitable for most people.

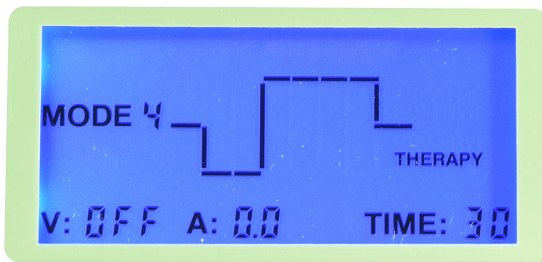

 Mode 4 (15%+)(15%-)(5%-)Expelling acid substance as well as heavy metals and raising PH levels.

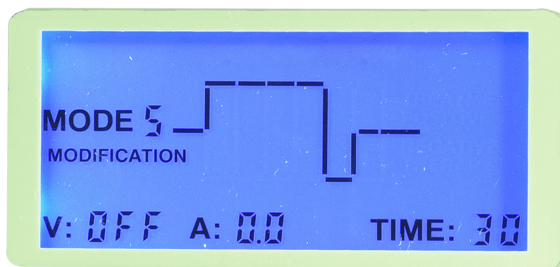

Mode 5 (10%)-(15%+)(5%-)Expelling heavy metals as well as acid substance and maintaining a stale PH level.

TROUBLESHOOTING

| SYMPTOM | POSSIBLE CAUSE | ACTION NEEDED |
|--|---------------------------------------|---|
| No values displayed on the screen | The Wrist Band enters protection mode | Unplug the machine and reboot it. |
| | | Press the STOP button and then START button twice. The screen will display values and reboot the wrist band function. |
| Black Screen/the screen only displays zero | The power supply is not connected | Check if the power is plugged in. |
| | Fuse burned out | Replace the fuse. |
| | The power switch is not turned on | Turn on the power source. |
| The machine stops working | The array is not connected. | Check if the array is plugged in |
| | The array is broken. | Replace the array. |

NOTE

It should never be used by people who are:

- ✓ Using a peacemaker;
- ✓ With a heart condition or epilepsy;
- ✓ Pregnant.

SPECIFICATION

Item No.: HK-809

Frequency: 50Hz-60Hz

Input Power: AC110V-230V

Max Power: 60W

Electric Current: 0-2.5A

Out Power: 0-15V.