

4400™ Airless Product Manual



4400™ Airless Sprayer

TABLE OF CONTENTS

Precautionary Warning	Page 1
Assembly	Page 2
Operation	Page 3
Spray Tip Cleaning.....	Page 4
Cleaning Procedure	Page 4
Cleaning Procedure	Page 5 (Extended Periods)
Cleaning Procedure	Page 5 (Winter Storage)
Maintenance	Page 5
Parts List.....	Page 6
Engine Lubricant & Parts	Page 6
Airless Pump Parts	Page 7
Airless Pump Detail.....	Page 7
Troubleshooting Guide	Page 8
Warranty	Page 9

Thank you! For your purchase of the Newstripe 4400™ Sprayer.

Please read over the instructions and make sure you understand operating procedures before using the unit.

Please check the serial number on your unit. This Manual is for units with serial number 1017050 and above only. For units with serial numbers below 1017050, please contact Newstripe for the correct manual.



4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

PRECAUTIONARY WARNING!



- Please read and understand all operation instructions as detailed in this manual. Failure to follow specified instructions may result in equipment damage or serious injury to personnel up to and including death!
- **Skin Injection Hazard:** High Pressure spray can inject toxins into blood stream. If injection occurs, seek emergency medical treatment.
- **NEVER** try to stop or deflect leaks with any part of our body.
- **ALWAYS** release pressure in the system before changing or cleaning the spray tip.
- **ALWAYS** use the nozzle tip guard.
- **ALWAYS** engage the **Trigger Lock on the spray gun** before removing the spray gun for hand operation.
- **NEVER** place your hands or any body parts in front of the spray gun.
- **NEVER** point the spray gun at or spray other persons or animals.
- **NEVER** clean the spray tip while it is attached to the spray gun. Remove the spray tip from the gun to clean the tip guard.
- **NEVER** remove spray tip while cleaning the pump.
- **NEVER** use pliers to tighten or loosen high pressure fittings on Outlet side of pump.
- Use only in well-ventilated area.
- Always consult your Facility Safety and/or Personnel Department for specified safety protocols prior to operating this equipment.




1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
4400 Manual /3566.0514

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

ASSEMBLY

1. Remove the unit from the crate and open packing cartons. Check for any damage that may have occurred during shipment. Advise factory immediately if you see any damage.
2. Unpack spray gun support tube, spray gun mounting bracket and spray shields.
3. Slide one spray shield onto gun support tube from each end. (Longer part faces upright). Snug star knobs. (Pic 1)
4. Slide tube with shields into receiving tube on front of machine and snug star knobs.
5. Slide the spray gun mounting bracket onto the upright and hand tighten star knob.
6. Place the spray gun (without the hose attached) in the holder and secure with the clamp. (Pic 1)
7. Check placement of spray gun in gun holder. Spray gun should be far enough forward so that there is room between the trigger and lifting bar attached to the plate (1/8"-3/16"). This will allow the gun to shut off completely when the trigger is released.
8. There should also be enough room to push the trigger lock sideways. If the trigger lock will not push, release the gun clamp and slide gun backward until you can push the trigger lock. Re-clamp gun. **NOTE to release trigger lock:** Push the trigger lock in on the right side (outside) of the gun. (Pic 1)
9. Attach one end of the spray hose to the pump outlet with a 3/4" wrench and the other end to the spray gun. You will need two wrenches (3/4" and 9/16" or two adjustable wrenches) to secure the hose on the spray gun as it has a swivel fitting. Make both connections tight. (Pic 3)
10. Always check the oil level in the engine before starting (SAE 10W30).
11. Make sure that the static chain is contacting the ground (Attached to the bottom side of the frame).
12. If unit was shipped with suction hose removed at the pump. (Garden hose type fitting). Depress Inlet Valve Stem to ensure it moves freely. Attach suction hose. Hose fitting may be hand tightened. You may also need to perform this operation any time the pump does not want to prime. (Pic 2)

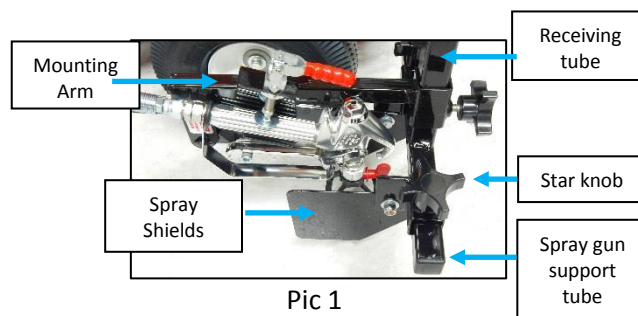

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

OPERATION

We recommend spraying with water first to become familiar with pump operation.

1. Turn spray control (black knob) to the Prime/ re-circulating position (arrows in a circle) in line with arrow on side of pump housing.
2. Pressure Control Knob (Gold, knurled knob) should be turned all the way in. (Turn clockwise to where it just stops. Do not overtighten.
3. Start Engine. You should see liquid start to flow back to pail in the small return hose. Let this run until there are no bubbles in the return hose. If bubbles do not stop, check tightness of suction hose fitting at the pump (See notes below).
4. Turn Spray Control knob to spray position. (Spray gun symbol in line with arrow on side of pump housing)
5. Activate trigger and paint or water will spray from the gun.
6. Adjust pressure by turning pressure control knob counter clockwise until spray pattern decreases, then increase pressure by turning clockwise just to where you get a good even spray pattern.
7. Adjust spray gun height for proper line width.
8. When finished spraying or if machine will be left unattended for any amount of time, turn Spray Control Knob to Re-circulating Position, turn off engine and pull spray trigger to release pressure from the system.



OPERATIONAL NOTE!

- **NOTE:** If pump does not prime, then back out the pressure control knob several turns (counter clockwise) until loose. Leave spray control knob in prime/re-circulating position and let pump run for ONE MINUTE. Then turn the pressure control knob back in until it stops. Push outlet button 3 times. Pump should now prime.
- **NOTE:** If the pump primes and air bubbles continue to appear in the hose after two minutes, the suction hose fitting may not be tight enough or the rubber washer may be worn. Turn off machine, turn spray valve to prime position and depress spray trigger to open gun and release pressure.



Remove garden hose fitting at the inlet side of the pump, depress inlet valve stem to make sure it is free, inspect washer to make sure it is seated and in good condition. Re-attach garden hose fitting making sure that it is tight. You may have to snug it with pliers if you continue to get air bubbles. Start engine and repeat first steps for operation.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
4400 Manual /3566.0514

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

SPRAY TIP CLEANING DURING USE

1. Place the Spray Control Knob in the re-circulating position.
2. Turn spray tip arrow on spray gun so that the arrow points toward the gun.
3. Turn spray control knob to spray position and trigger gun. This should clear the gun. Turn spray control knob to prime position and trigger gun to release pressure.
4. Reverse the tip so the spray tip arrow on the spray gun points towards the ground.
5. Turn the spray control knob to spray and resume spraying. If the spray gun is still clogged, proceed to cleaning procedures below

CLEANING PROCEDURE

1. Remove pail with paint.
2. Place empty pail on machine and fill with 2 gallons of water (if using latex paints) or appropriate solvent if using Alkyd/oil base paint so that suction filter is covered.
3. Place return hose in waste container
4. Make sure Spray Control Knob is in the Re-circulating Position.
5. Start engine and let engine run in prime position until fluid in re-circulating hose runs clear.
6. Turn Spray Control Knob to Spray Position.
7. Trigger gun until gun spray runs clear.
8. Turn spray control knob to prime position, turn off engine and trigger spray gun to release pressure.
9. Wipe down suction tube and re-circulating hose.
10. Clean spray tip if needed with a nylon bristle brush. **DO NOT USE METAL BRUSHES**



PRECAUTIONARY WARNING!

- **ALWAYS** release pressure in the system before changing or cleaning the spray tip. (Place the Spray Control Knob in the re-circulating position, turn off sprayer and squeeze spray trigger to release pressure)
- **NEVER** use fuels to clean the equipment
- **DO NOT** use solvents containing halogenated hydrocarbons such as methyl bromine, carbon tetrachloride and ethyl iodine
- **DO NOT** attempt to clean a clogged gun filter. You must replace it.
- **DO NOT** use brushes with metal bristles or any metal object to clean the spray tip of dried paint. Replace the tip if it cannot be cleaned.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
4400 Manual /3566.0514

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

CLEANING PROCEDURE FOR EXTENDED PERIODS OF NON-USE

1. Clean as instructed in cleaning procedure.
2. Pick up suction filter and hold with bottom facing up.
3. Pour 2 ounces of pump protector into suction filter so there is approximately 2 inches of fluid showing in inlet hose.
4. Leave engine off and pull recoil start until you see fluid in return hose.
5. Unit may now be stored with fluid remaining inside hose and pump

CLEANING PROCEDURE FOR WINTER (FREEZING) STORAGE

1. Clean as instructed in cleaning procedure and then place ½ bottle of pump protector in pail.
2. Place spray knob in prime position and run pump until pump protector is seen flowing from return hose.
3. Turn spray knob to spray position and trigger gun until pump protector sprays from gun.
4. Turn spray control knob to prime position, turn off pump and trigger spray gun to release pressure.
5. Remove as much fuel from the engine gas tank as you can.
6. Run engine until it runs out of gas.
7. Turn Spray knob to prime position.
8. Disconnect paint hose from pump and gun then, drain hose.
9. Unit may now be stored in freezing temperatures.
10. Drain and change engine oil in the spring.

.MAINTENANCE

ITEM	CHECK	MAINTENANCE ACTION
Engine Oil	Before each use	Change oil after first 20 hours of operation and then, every 100 hours
Spark Plug & Air Filter	Every 4 Months	Clean or change as needed
Wheels	Lubricate weekly	Grease with high quality axle lubricant
Spray Gun Clamp and Cable	Check Weekly	Spray with silicone spray
Spray Gun Filter	Check Monthly	Replace if filter becomes clogged
Spray Pump	Before and after each use	Use pump protector if the unit will not be used for more than one day
Suction Filter	Before each use	Replace as needed or when clogged
Suction Tube	Before each use	Replace if needed or has cuts
Bypass (re-circ) hose	Before each use	Replace if needed or has cuts
Spray Hoses	Before each use	Replace if needed or has cuts
Spray Tip	Before each use	Replace if spray pattern is uneven
Outlet Push Button	Before each use	Replace every 1000-1500 gallons or if leaking
Outlet Valve	If pump does not prime	Replace every 500-1000 gallons
Inlet Valve	If pump does not prime	Every 500-1000 gallons
Prime/Spray Valve	If pump will not toggle between Prime/Spray	Every 1000-1500 or if it stops working



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com


4400 Manual /3566.0514

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

PARTS LIST

Item#	Description	Part	Item#	Description	Part
#1	Paint hose, 25' with fittings	10000458	#12	Cable Adjuster	10000018
#2	Spray gun, airless (517 tip)	10005114	#13	Hand Grips, (2 required)	10004281
#3	Spray Gun Release clamp	10001579	#14	Dual handle with hose hanger	10003547
#4	Lifting bar, spray gun trigger	N/A	#15	Handle Braces (2 required)	10004578
#5	Spray gun support tube	10003550	#16	Chassis	10004028
#6	Spray gun mounting bracket	10004607	#17	Belt guard	10003561
#7A	Left spray shield pivot(with star knob)	10001228	#18	Pump Drive Belt, 4L310	10002891
B	Right spray shield pivot(with star knob)	10001229	#19	Star Knob (5 required)	10000007
#8	Spray shields (2 required)	10003562	#20	Trigger, operating spray	10002951
#9	Spray tip guard w/base	10005116	#21	Operating Cable	10000820
#10	Spray gun Filter (Pkg of 2)	10000641	#22	Pulley, engine	10000131
#11	Spray tip, 517 reversible tip (2"-4" wide lines)	10000508	#23	Pulley, pump drive	10000708
	Spray tip 619 (4"-6" wide lines)	10003824	#24	Pulley, tension idler	10003815
			#25	Wheels, 10" pneumatic	10000012

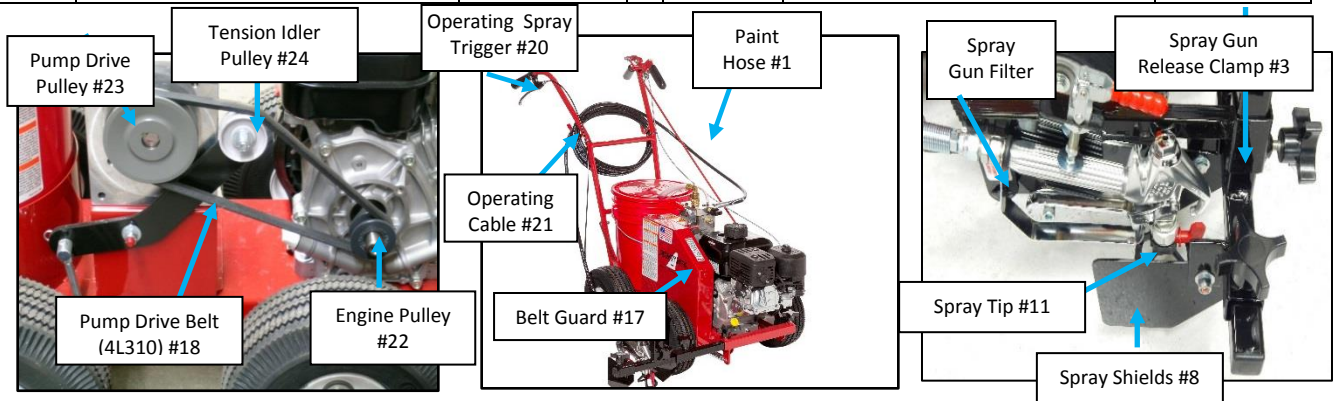

ENGINE LUBRICANT AND PARTS

ITEM	SPECIFICATIONS
Engine	Briggs & Stratton 550 XR Model #083132
Oil Capacity	.20oz, .59l SAE 10W30
Spark Plug	Briggs & Stratton Part # 798615 NGK Part# BPGES
Air Filter	Briggs & Stratton part# 796970



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

4400 Manual /3566.0514

4400™ Airless Sprayer


ALWAYS wear safety goggles or protective eye-wear when operating the unit!

AIRLESS PUMP PARTS

Item#	Description	Part#
#26**	Outlet Valve	10005102
#27**	Outlet Push Button	10005102
** Both #26 and 27 available in kit only		
#28	Spray pump, airless	10000407
#29	Prime/spray control Valve	10004000
#30	Pressure Adjusting Valve	N/A
#31	Inlet Valve	10002745

Item#	Description	Part#
#32	Suction hose filter	10001760
#33	Suction hose sleeve	10003932
#34	Suction Hose	10002863
#35	Bypass Return Hose	10002862
#36	Suction hose washer (pkg of 5)	10000711
#37	5 gallon pail strainer (pkg of 5)	10003569
**	Airless maintenance kit	10004609

AIRLESS PUMP DETAIL

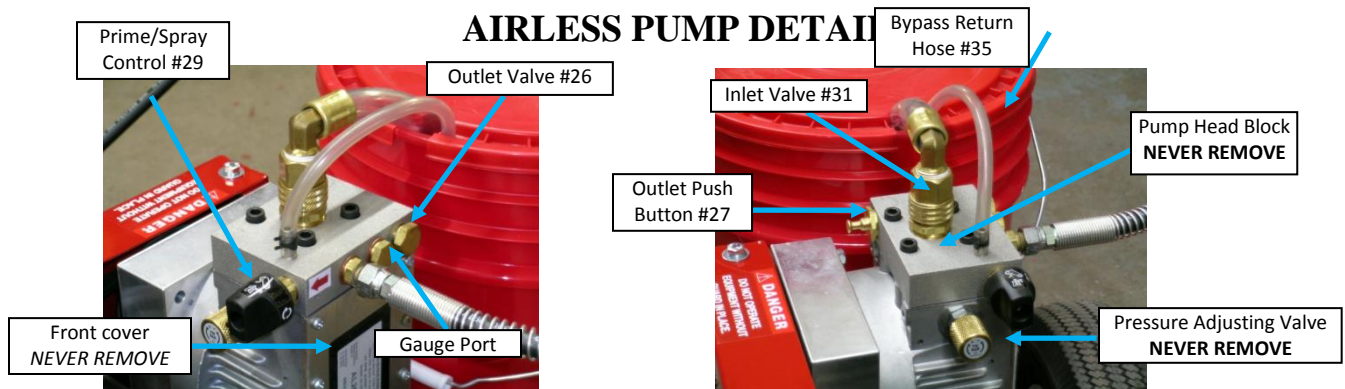

**NEVER REMOVE FRONT COVER, PRESSURE ADJUSTING VALVE OR THE PUMP HEAD BLOCK.
THIS WILL VOID THE WARRANTY. CALL IF THESE ITEMS REQUIRE SERVICE.**

ITEM	CHECK	*REPLACE
Spray tips	Before each use	Every 75-500 gallons Or when line quality becomes poor
Suction filter	Before each use	If filter becomes clogged
Gun filter	Every 25 gallons or if gun does not spray	REPLACE ONLY DO NOT CLEAN every 50-250 gallons
Outlet push button	Before each use	Every 1000-1500 gallons or if leaking
Inlet valve	If pump does not prime. Check washer at same time.	Every 500-1000 gallons. Washer- Every 50-250 gallons
Outlet valve	If pump does not prime	Every 500-1000 gallons
Prime/Spray Valve	Only if it stops working	Every 1000-1500 gallons –or- if it stops working
Suction tube	Before each use	Check for nicks and cuts
Bypass tube	Before each use	Check for nicks and cuts
Maintenance Kit Includes: Inlet Valve, Outlet push button & Valve, prime spray valve and suction hose washer		



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
4400 Manual /3566.0514

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

TROUBLESHOOTING GUIDE

PROBLEM	REMEDY
Engine will not start	Check that the fuel shutoff and ignition switch are in the on position, choke lever is in Choke position and throttle lever is in run position. Fuel tank has adequate new fuel. Call factory for assistance.
Engine starts, but runs rough	Check that the choke is turned off.
Choke off but still runs rough	Check for proper fuel. Check spark plug for fouling. Clean or replace. Check air filter. Call factory if operation is still unsatisfactory.
Pump will not prime (No fluid returning to pail)	Check that spray control knob is in Prime position (Circular arrows aligned with arrow on housing). Push brass outlet valve button 3 times.
Outlet Valve Button pushed, but will still not prime	Turn off pump, turn pressure control knob out (counter-clockwise) several turns until loosens. Turn on pump and run for 60 seconds. Turn pressure control knob all the way in. Pump should now prime. Call factory for assistance. Check that suction filter is below liquid level.
Fluid is returning to pail in bypass hose, but air bubbles are still present in hose after 60 seconds	Check inlet hose fitting for tightness and worn or missing rubber washer. Check suction hose for nicks or cuts. Call factory for assistance.
Pump primes, but gun does not spray	Check spray control knob is in spray position. Check pressure control knob is turned to high pressure (clockwise), until it stops. Do Not Force.
Knobs are set correctly, still does not spray	Check that trigger lock on spray gun is turned to operating position (wings parallel to gun body). Check spray tip arrow is pointing towards ground. Check that handle trigger is operating spray gun.
All of above correct, gun will still not spray	Turn spray control knob to prime position, turn off engine, pull trigger to release pressure. Check spray gun filter, replace if plugged. Call factory for assistance.
Over spray or too much paint	Lower spray pressure. Turn spray pressure control knob counter-clockwise several turns, then increase pressure until desired spray pattern is even.
Too little paint	Increase spray pressure. Paint may need to be thinned in cooler temperatures and if paint viscosity is very thick.
Uneven spray pattern or stringing	Increase spray pressure. Spray tip may be chipped or clogged. Reverse tip to clear obstruction and clean if necessary.
Pressure increased, tip is clean, spray still not correct	Worn tip. Replace tip. Call factory for assistance.

Please call us! If you have any questions during setup, painting or cleaning.

Your machine is designed to be simple and safe to operate: 1-800-624-6706



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

4400 Manual /3566.0514

4400™ Airless Sprayer

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

THE NEWSTRIPE WARRANTY

36 MONTH

NEWSTRIPE, INC., WARRANTS TO THE ORIGINAL PURCHASER, FOR 36 (THIRTY-SIX) MONTHS AFTER DATE OF PURCHASE, THAT THE EQUIPMENT* HEREBY SOLD SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. THIS WARRANTY DOES NOT EXTEND TO ANY DAMAGE OR MALFUNCTION RESULTING FROM MISUSE, NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, OR NORMAL WEAR AND TEAR.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. The CUSTOMER MUST NOTE DAMAGES on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to the customer the cost or parts and labor. The customer can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 36 (THIRTY-SIX) months from date of purchase. For service under this warranty, buyer shall ship the defective part or parts of the equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned. **Prior to retuning any part or machine, the CUSTOMER must obtain a Return Materials Authorization number. Call 1-800-624-6706. To review the complete guidelines for warranty and returns, please visit www.newstripe.com/guidelinesforwarrantyandreturn.**

***Gasoline engines, compressors, pumps (including airless) and Transaxles are furnished with their respective manufacturer's warranties only. Such components are not covered by any warranty of Newstripe, Inc. Where Newstripe elects to extend manufacturers' warranties, the warranty shall be pro-rated as to cover 100% of the cost to replace or repair materials and parts for the first 12 months of ownership and 60% for the remaining 6 month period.**

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty, and may be exercised only within 36 (THIRTY-SIX) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its' specific written authorization.

THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Sincerely,
Newstripe, Inc



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

4400 Manual /3566.0514