

## PRODUCT INFORMATION SHEET

# CHESSER BRIGHT

**Chesser Bright is a granular free flowing white oxygen bleach powder with a mild lemon fragrance.**

### FEATURES & BENEFITS

- Chesser Bright is very easy to use. It can be used on all normal washable fabrics unlike chlorine bleach, which can only be used on white fabrics. Simply add Chesser Bright to the wash in addition to the laundry detergent, or use it to soak stained items.
- Chesser Bright has a mild lemon fragrance. It doesn't leave a chlorine odour on fabrics, crockery or plastic ware.
- **Chesser Bright is a complete product containing enzymes and detergents which help with general cleaning as well as removing bleachable stains.**
- It is also safe for the environment containing biodegradable detergents.

### HOW & WHERE TO USE

- As a soaker: Add from 1/8 cup in a small bucket (about 10 litre capacity) to 1/4 cup in a large nappy bucket or laundry trough. Soak items for 1-2 hours or overnight if desired. Most stains will be removed by soaking in warm water. If the stain is very difficult to remove use hot water which boosts the power (as long as the fabric is not damaged in hot water).
- As a booster: Add 1/4 cup Chesser Bright in addition to your normal laundry detergent. For commercial machines add 1/4 cup per 5 kg dry linen capacity of the load
- Most fabrics are colour fast. If in doubt check by soaking a small piece of the material in a solution of Chesser Bright for 15 minutes. If the colour is affected in any way the fabric should not be soaked. Do not use on wool or silk.
- In the kitchen to destain cups simply put cups into a sink, sprinkle over Chesser Bright and add hot water. Soak for around 1 hour, then rinse with water.
- To destain plastic ware such as crisper trays from fridges, microwave cooking ware, storage boxes, etc. fill with warm to hot water, add 1/8 cup Chesser Bright per 5 litres water and stir to dissolve. Leave to soak for two or three hours or overnight. Then empty and rinse.

Issue 4 : JULY 2008.

#### **DISCLAIMER**

Since the use of this product is beyond the control of either seller or manufacturer, their only obligation shall be to replace any quantity of product which is proven to be defective. They cannot assume any risk or liability in excess of the purchase price of the product itself, which does not include labour or any consequential damages resulting from the use of this product. Determining the suitability of this product for any intended use shall be solely the responsibility of the user.

