

Cobra microTALK

Owner's Manual

TWO-WAY RADIO MODEL ACXT645

Printed in China Part No. 014-A02451-101 English

©2022 Cobra Electronics Corporation www.cobra.com

Nothing Comes Close to a Cobra®

Introduction Making Life Easier and Safer

Staying in touch with your family and friends is convenient and easy when using your microTALK® radio. Some of the many uses you will discover include:

Communicating with others while hiking, biking, and working; keeping track of family and friends at a crowded public event; checking with travel companions in another car; talking with neighbors; arranging meeting spots with others while shopping at the mall.

Belt Clip Secure your microTALK® radio while on the go.

Carrying your microTALK® radio with you is easy when using the belt clip or optional wrist strap. The belt clip easily attaches to your belt, purse, or backpack.

Customer Assistance Product Service & Support


In this user's guide, you should find all the information you need to operate your microTALK® radio. If you require further assistance after reading this guide, Cobra offers the following customer assistance services:

For Assistance In The U.S.A.

For any questions about operating or installing this new Cobra product, PLEASE CONTACT COBRA FIRST... do not return this product to the retail store. The contact information for Cobra will vary depending on the country in which you purchased and uses the product. For the latest contact information, please go to www.cobra.com/support or call 1-800-543-1608.

If your product should require factory service, please go to www.cobra.com/support and follow the instructions.


Introduction Product Features

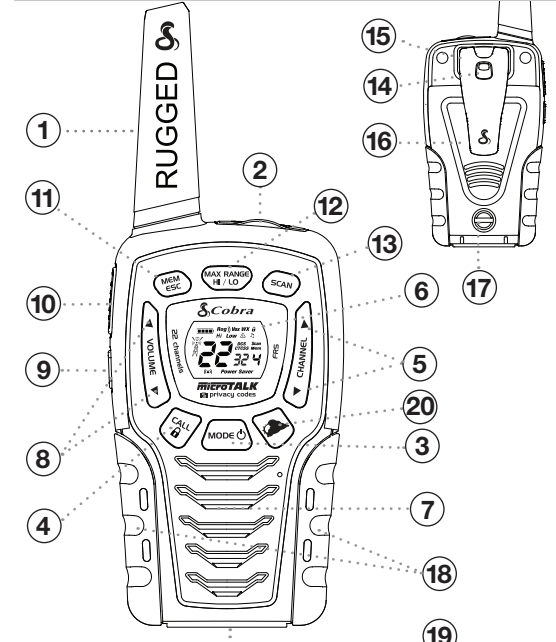

- 1. Antenna 2. External Speaker/Microphone/USB Charge Jack 3. Mode/Power Button 4. Call/Lock Button 5. Channel Up/Down Buttons 6. Backlit LCD Display 7. Speaker/Microphone 8. Volume Up/Down Buttons 9. LED Light Button 10. Push-to-Talk Button 11. Memory/Escape Button 12. Max Range Hi/Lo Button 13. Scan Button 14. Wrist Strap Connection 15. Belt Clip 16. Battery Compartment 17. Battery Door Screw 18. Rubberized Grips 19. LED Flashlight 20. Weather Button

- Features • 22 Channels • 10 Channel Weather Radio • Weather Alert • 121 Privacy Codes (38 CTCSS codes/ 83 DCS codes) • Hands-Free Operation (VOX) • VibrAlert® Silent Paging • Scan Channels, privacy codes • Backlit LCD Display • LED Flashlight • Call Alert Ten selectable tones • Button Lock • Speaker/Microphone/Charge Jack • Roger Beep Selectable On/Off • Battery/Power Saver • Keystroke Tones • Battery Level Indicator • Low Battery Audible Alert • Auto Squelch • Maximum Range Extender • Belt Clip

Backlit LCD Display

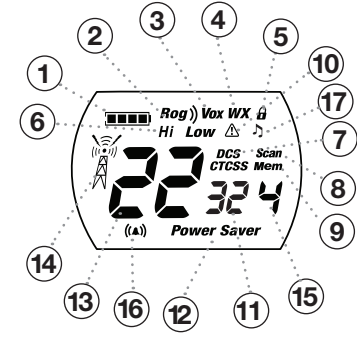


- 1. Battery Level Indicator 2. Roger Beep Icon 3. VOX Icon 4. Weather Icon 5. Lock Icon 6. Hi/Low Power Icon 7. DCS/CTCSS Icons 8. Scan Icon 9. Memory Icon 10. Weather Alert Icon 11. DCS/CTCSS Privacy Code Numbers 12. Power Saver Icon 13. Channel Numbers 14. Receive/Transmit Icon 15. Memory Channel Number 16. VibrAlert® / Call Alert Icon 17. Key Tone Icon

Maximum range may vary and is based on unobstructed line-of-sight communication under ideal conditions.

Caring for Your microTALK® Radio

Your microTALK® radio will give you years of trouble-free service if cared for properly. Handle the radio gently. Keep the radio away from dust. Never put the radio in water or in a damp place. Avoid exposure to extreme temperatures.

 Installing Batteries



To install or replace batteries: 1. Remove belt clip by releasing belt clip latch and sliding clip up. 2. Using a flat head screw driver or edge of a coin (a quarter may be used), remove the screw securing the back battery panel.

3. Insert the supplied three AA rechargeable batteries or non-rechargeable alkaline batteries. Position batteries according to polarity markings. 4. Replace battery compartment cover, screw and belt clip.

- Do not attempt to charge alkaline batteries. • Do not mix old and new batteries. • Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.



To charge batteries in radio:


- 1. Check to see that the batteries have been inserted properly. 2. Insert the cable into the charge jack located at the top of the radio. 3. Plug the cable into USB-compatible power port.

Use only the supplied rechargeable batteries and charger for recharging your Cobra microTALK® radio.

Cobra recommends your radio is turned off while being charged.

Non-rechargeable alkaline batteries can also be used in your radio.

Operation Using Your Radio

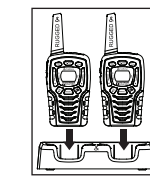

For charging microTALK® radio(s) in desktop charger:

- 1. Insert radio(s) into desktop charger as shown. 2. Insert the micro-USB cable into jack on back of charger. 3. Plug the cable into USB-compatible power port. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

If charging light is not on, check position of radio. Radio should be upright. The charge indicator light will stay on as long as the radio is in the charging well, and the light will go off when the charging is complete.

Note: To charge a single radio, you can bypass the desktop charger and simply insert the micro-USB's connector directly into the charge jack located on the top of the radio.

The radio will display flashing battery icon while charging.

 
Cobra recommends your radio be turned off while being charged.

Non-rechargeable alkaline batteries can also be used in your radio.

Quick Start

- 1. Press and hold the Mode/Power button to turn on your radio. 2. Press the Channel Up or Channel Down button to select a channel. Both radios must be tuned to the same channel/privacy code to communicate. 3. Press and hold the Talk button while speaking into the microphone. 4. When finished talking, release the Talk button and listen for a response.


Turning on Your microTALK® Radio



Press and hold the Mode/Power button until you hear a series of audible tones indicating the radio is on.

Your microTALK® radio is now in Standby mode, ready to receive transmissions. The radio is always in Standby mode except when the Talk, Call or Mode/Power buttons are pressed.

 Battery Low



When battery power is low, the final bar in the Battery Low icon will blink and an audible tone will sound twice before the radio shuts off. Your batteries should be replaced or recharged, if using rechargeable batteries.

The radio will display flashing battery icon while charging if the radio is on.

Auto Battery Save



If there are no transmissions within 10 seconds, the radio will automatically switch to Battery Save mode and the Power Saver icon will flash in the display. This will not affect the radio's ability to receive incoming transmissions.

Communicating with Another Person



- 1. Press and hold the Talk button. 2. With the microphone about two inches (5 cm) from your mouth, speak in a normal voice. 3. Release the Talk button when you are finished talking and listen for a response.



You cannot receive incoming calls while pressing the Talk button.

Both radios must be tuned to the same channel to communicate.

To Select a Channel



With the radio on, select any of the 22 channels by pressing the Channel Up or Channel Down button.

Both radios must be tuned to the same channel to communicate.



 
See page 17 for frequency allocations charts.

Listening for a Response



Release the Talk button to receive incoming transmissions. Your microTALK® radio is always in Standby mode while the Talk or Call buttons are not pressed.

To Adjust Volume



Press the Volume Up or Volume Down button. A double beep sound is used to indicate the minimum and maximum volume levels



(1 through 8).

Call Button

 


Press and release the Call button.

The other person will hear a two second call tone. This tone is used only to establish voice communications.

See page 12 on how to select between ten call tone settings.

LED/S.O.S. Flashlight




Press and release the LED flashlight button below the Talk button to use the LED flashlight located at the bottom of the radio.

To activate S.O.S. function, press and hold the LED flashlight button to turn on. Press and release to turn off the flashlight or S.O.S. function.

Auto Squelch/Maximum Range

Your microTALK® radio will automatically shut off weak transmissions and unwanted noise due to terrain, conditions or if you've reached your Maximum Range limit.

 You can temporarily turn off auto squelch or turn on maximum range extender, allowing all signals to be received and extending the maximum range of your radio.



To turn maximum range extender on:

Press and hold the Max Range Hi/Lo button for at least two seconds until you hear audio from the speaker which indicates the maximum range extender is on.

To turn maximum range extender off:

Press and release the Max Range Hi/Lo button for 2 seconds or change channels.

Lock Function



The Lock function locks the Channel Up, Channel Down, MEM/ESC, Scan, Volume Up, Volume Down Weather and Mode/Power buttons to prevent accidental operation.

 


To turn the lock on or off:


Press and hold the Call/Lock button for three seconds. A single beep sound is used to confirm your lock on or off request. When in Lock mode, the Lock icon will be displayed.

microTALK® Range

Your range will vary depending on terrain and conditions.



 
In flat, open country your radio will operate at maximum range.



Buildings and foliage in the path of the signal can reduce the range of the radio.



 Dense foliage and hilly terrain will further reduce the range of the radio.



On Channels 8 through 14, your radio automatically switches to low power, which will limit the range the radio can communicate.

 


Remember, you can achieve maximum range by using maximum range extender. See page 4 for details.

Operation Mode Functions

Scrolling Through the Mode Function

By scrolling through the Mode function, you will be able to select or turn on preferred features of your microTALK® radio. When scrolling through the Mode function, your radio features will be displayed in the same predetermined order:



- Set CTCSS Privacy Codes • Set DCS Privacy Codes • Set Vox On/Off • Set Vox Sensitivity • Set Call Tones 1-10 • Set VibrAlert On/Off • Set Roger Beep On/Off • Set Key Tones On/Off

Privacy Codes

Your microTALK® radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch System) provides 38 privacy codes and DCS (Digitally Coded Squelch) provides 83 privacy codes. This provides a total of 121 Privacy Codes. Either system can be used on all channels, but both systems cannot be used on the same channel at the same time.

To successfully communicate using a privacy code, both the sending and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.

The privacy code 00 is not a privacy code, but allows all signals to be heard on a channel that is set to 00 on both the CTCSS and DCS systems.

Set CTCSS Privacy Codes



To select a CTCSS privacy code:

1. After selecting a channel, press the Mode/Power button until the CTCSS icon appears and the small numbers next to the channel number flash on the display.



If DCS is turned on at the channel selected, the display will flash the CTCSS icon and "OFF." To switch from DCS to CTCSS, press the Channel Up or Channel Down button while the display is flashing "OFF." The display will then show the small numbers flashing and you will then be able to proceed to step 2.



2. Press using the Channel Up or Channel Down button to select a privacy code. You can hold the Up or Down button for fast advance.

- 3. When your desired CTCSS privacy code is displayed, choose one of the following: a. Press the Mode/Power button to enter the new setting and proceed to other functions. b. Press the Talk or Call/Lock button to enter the new setting and return to Standby mode. c. Do not press any buttons for 6 seconds to enter the new setting and return to Standby mode.

Set DCS Privacy Codes



To select a DCS privacy code:

1. After selecting a channel, press the Mode/Power button until the DCS icon appears and the small numbers flash on the display (00 through 83).



If CTCSS is turned on at the channel selected, the display will flash the DCS icon and "OFF." To switch from CTCSS to DCS, press the Channel Up or Channel Down button while the display is flashing "OFF." The display will then show the small numbers flashing and you will then be able to proceed to step 2.



2. Press using the Channel Up or Channel Down button to select a DCS privacy code. You can hold the Up or Down button for fast advance.

- 3. When DCS privacy code is displayed, choose one of the following: a. Press the Mode/Power button to enter the new setting and proceed to other functions. b. Press the Talk or Call/Lock button to enter the new setting and return to Standby mode. c. Do not press any buttons for 6 seconds to enter the new settings and to return to Standby mode.


Operation

Mode Functions (continued)


Voice Activated Transmit (VOX)

In **VOX** mode, your microTALK® radio can be used “hands-free,” automatically transmitting when you speak. You can set the **VOX** sensitivity level to fit the volume of your voice and avoid transmissions triggered by background noise.


Mode/Power

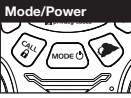

VOX Icon




Channel Button

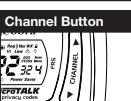


To turn VOX mode on or off:

- Press the **Mode/Power** button until the **VOX** icon flashes on the display. The current **On** or **Off** setting is displayed.
- Press the **Channel Up** or **Channel Down** button to turn **VOX On** or **Off**.
- Choose one of the following:
 - Press the **Mode/Power** button to enter the new setting and proceed to other functions.
 - Press the **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.


Mode/Power

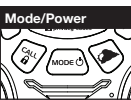

VOX Sensitivity Level

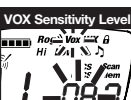

Channel Button



To set VOX sensitivity:

- Press the **Mode/Power** button until the **VOX** icon flashes and the current sensitivity level is displayed.
- Press the **Channel Up** or **Channel Down** button to change the setting.
- Choose one of the following:
 - Press the **Mode/Power** button to enter the new setting and proceed to other functions.
 - Press the **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.

Memory Scan continued


During scanning (while receiving an incoming transmission), you can choose from the following:

- Press the **Talk** button to stop the scan then press and hold the **Talk** button to communicate on that channel. Your radio will remain on that channel and return to **Memory Standby** mode.
- Press the **Channel Up** or **Channel Down** button to resume scanning channels.
- Press and hold the **Scan** button to return to **Memory Standby**.


Privacy Code Scan

Your microTALK® radio can automatically scan the **Privacy Codes** (either CTCSS 01 through 38 or DCS 01 through 83) within one channel. Only one set of privacy codes (CTCSS or DCS) can be scanned at a time.


Scan Button

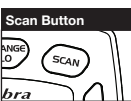


Channel Button

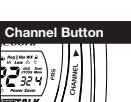

Select Channel



Scan Privacy Codes

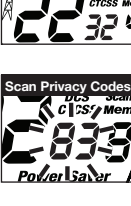

To scan privacy codes:

- While in **Standby mode**, press and release the **Scan** button twice (CTCSS) or three times (DCS) until the CTCSS or DCS icon and numbers are flashing.
- Press and hold the **Scan** button to begin scanning privacy codes within the selected channel.

The **Scan** icon will continue to be displayed when privacy code scan is **on**. Your radio will continue to scan privacy codes and stop as an incoming transmission is detected. Your radio will remain on that privacy code for 6 seconds after the last incoming transmission.


During scanning (while receiving an incoming transmission), you can choose from the following:

- Press the **Mode/Power** button to enter the new setting and proceed to other functions.
- Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
- Press the **Channel Up** or **Channel Down** button to resume scanning Privacy Codes.


10 Memory Location

Your microTALK® radio has **10 Memory Locations** for storing your most frequently used channels and channel/privacy code combinations. These **Memory Locations** can be selected individually or can be scanned. (See page 14 for memory location scan.)


MEM/Esc Button

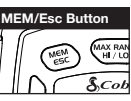


Channel Button

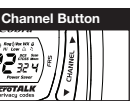


MEM/Esc Button




Channel Button

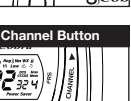

Memory Channel



Channel Button



To program a memory location:

- Press the **MEM/ESC** button. **Memory** icon and the **Memory Location** show on the display.
- Press the **Channel Up** or **Channel Down** button to select the memory location (0 through 9).


If a location has been programmed before, its associated channel/privacy code will be shown on the display.

- Press the **MEM/ESC** button to enter a new memory location or edit an already programmed memory location.
- Press the **Channel Up** or **Channel Down** button to select the memory location.
- Press the **MEM/ESC** button. The channel numbers will flash on the display.
- Press the **Channel Up** or **Channel Down** button to select a channel (1 through 22).
- Press the **MEM/ESC** button. The **CTCSS** icon and privacy code numbers will flash on the display.
- Choose one of the following:
 - Press the **Channel Up** or **Channel Down** button to select a CTCSS privacy code (00 through 38) for the channel.
 - Press the **MEM/ESC** button to switch from CTCSS to DCS. The DCS icon and privacy code numbers will flash on the display. The **Channel Up** or **Channel Down** button can then be used to select a DCS privacy code (00 through 83) for the channel.


NOAA* All Hazards Radio Channels

You can use your microTALK® radio to listen to **NOAA All Hazards Radio** channels transmitting in your area.


Weather Button



Hazards Radio Icon



Channel Button

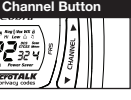

To listen to All Hazards Radio channels:

- Press the **Weather** button once until the **All Hazards Radio** icon and the currently selected All Hazards Radio channel are displayed.
- Use the **Channel Up** or **Channel Down** button to change **All Hazards Radio** channels.
- The **All Hazards Radio** icon will continue to be displayed when **All Hazards Radio** is **on**.
- To exit **All Hazards Radio**, press and hold the **Weather** button until you return to Standby mode.


Weather (WX) Alert Mode

Turning On the Weather Alert function will allow your radio to automatically receive NOAA weather signals and warnings from designated weather broadcast stations. If the radio is turned ON, it will alert to Weather and other emergency alerts broadcast by NOAA.


If this feature is set to **OFF** by default.

Make sure the strongest Weather channel is selected for your area using the channel selection in the previous menu.

Weather Button



Channel Button



To turn Weather Alert On or Off:


- Press the **Weather/Lock** button twice until the **Weather Alert** icon flashes on the display. The current **On** or **Off** setting is displayed.
- Press the **Channel Up** and **Channel Down** button to turn Weather Alert **On** or **Off**.
- Press and hold the **Weather/Lock** button again to save the new setting and exit the **Weather Alert Mode** and return to **All Hazards Radio** mode.

If “oF” flashes in place of the privacy code numbers, a privacy code is already set in the opposite (CTCSS or DCS) system. Press the **Channel Up** or **Channel Down** button to cancel the opposite code and select a privacy code from the active system for the selected channel.


9. Choose one of the following:

- Press the **MEM/ESC** button to enter the channel/privacy code in the selected memory location. Radio will flash the memory information and allow you to change to another memory location.
- Press and hold the **MEM/ESC** button to save the current state of the Set Memory Function and return to **Standby** mode.


MEM/Esc Button

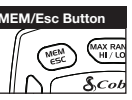

Memory Channel



Channel Button

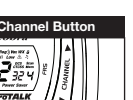


To recall a stored memory channel location:

- Press the **MEM/ESC** button until the **Memory** icon and the memory location number flash on the display.
- Press the **Channel Up** or **Channel Down** button to select a memory location (0 through 9).

If a location has been programmed before, its associated channel/privacy code will be shown on the display.

Channel Button




3. Press and hold the **MEM/ESC** button to return to **Standby** mode on the selected memory location.

A memory location can be reprogrammed at any time it is displayed. Press the **MEM/ESC** button to begin.


Ten Call Tone Settings

You can choose between ten different **Call Tone Settings** to transmit a call alert.


Mode/Power

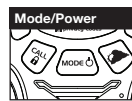

Call Tone Setting



Channel Button

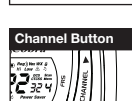


To change a call tone setting:

- Press the **Mode/Power** button until the letter “C” and the current call tone number (01 through 10) is displayed. The current call tone will sound for three seconds.
- Press the **Channel Up** or **Channel Down** button to hear the other call tone settings.
- Choose one of the following:
 - Press the **Mode/Power** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.


VibrAlert® and Call Alert

Your microTALK® radio can alert you to incoming signals by sounding an audible call tone, by vibrating silently or both.

Call Tone On/ Vibrate On



Call Tone On/ Vibrate Off




To change call settings:

- Press the **Mode** button until the **Call Setting** icon flashes on the display. The current setting (“01” vibrate + ring, “02” ring only) is displayed.
- Press the **Channel Up** or **Channel Down** button to change the call setting.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.


Roger Beep Confirmation Tone

Your listener will hear an audible tone when you release the Talk button. This alerts the other party that you are finished talking and it is OK for them to speak.


Mode/Power

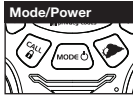

Roger Beep Off



Channel Button




To turn roger beep on or off:

- Press the **Mode/Power** button until the **Roger Beep** icon flashes. The current **on** or **off** setting is displayed.
- Press the **Channel Up** or **Channel Down** button to select roger beep **on** or **off**.
- Choose one of the following:
 - Press the **Mode/Power** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.


Key Tone On/Off

When **Key Tone** is **On**, an audible tone will sound each time a button is pressed.

Mode/Power

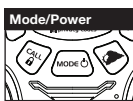

Channel Button



To turn key tone on or off:

- Current key tone status On/Off will flash.
- Press the **Channel Up** or **Channel Down** button to select key tone on or off.
- Choose one of the following:
 - Press the **Mode/Power** button to enter the new setting and return to **Standby** mode.
 - Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.

Warranty & Trademark Acknowledgment

Limited One-Year Warranty

Cobra warrants your product against all defects in materials and workmanship for a period of one (1) year from the date of original purchase.

Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge.

Cobra will not pay shipping charges that you incur for sending your product to us. Products received OOD will be refused.

To make a warranty claim, we will require proof of purchase in the form of an invoice or receipt. No proof of purchase is required for factory direct purchases.

Warranty Exclusions: Warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified. 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation). 3. Your product has been modified in any way. 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including E-bay, U-bid, or other non-authorized resellers.

LIMITATION OF WARRANTY: EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT “AS IS” AND “WHERE IS”, WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE. COBRA SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT.

The above limitations or exclusions shall be limited to the extent they violate the laws of any particular state. Cobra is not responsible for products lost in shipment between the owner and our service center.

General Warranty Information

Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guideline below will apply to most Cobra products.

All Cobra products purchased factory-direct or from our Authorized Resellers will come with a full one to three (1-3) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions).

Standard accessories packaged with each model will have a one-year factory warranty. Accessory items have a one-year factory warranty.

Shipping to our facility is not covered in our warranty. Return shipping is included within the U.S. This warranty is non-transferable.


For the sake of clarity, “repair or replace the Product or its defective part” does not include removal or installation work, costs or expenses which include but are not limited to labor costs or expenses.

Cobra will not be responsible for lost packages.


Channel Scan

Your microTALK® radio can automatically scan channels.


Scan Button

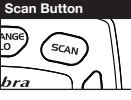

Scan Channels



Channel Button



To scan channels:

- Press and release the **Scan** button until the **Scan** icon and the channel numbers appear on the display.
- Press and hold the **Scan** button to begin scanning channels.

The radio ignores specific privacy codes while scanning channels.

The **Scan** icon will continue to be displayed when scan is **on**. Your radio will continue to scan all channels and stop if an incoming transmission is detected. Your radio will remain on that channel for 6 seconds after the last incoming transmission.


During scanning (while receiving an incoming transmission), you can choose from the following:

- Press the **Talk** button to stop the scan. Your radio will remain on that channel and return to Standby mode. Then press and hold the **Talk** button to communicate on that channel.
- Press the **Channel Up** or **Channel Down** button to resume scanning channels.
- Press and hold the **Scan** button to return to **Standby**.


Memory Scan

Your microTALK® radio can automatically scan memory channels.

Scan Button

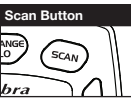

Channel Button

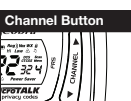

To scan Memory channels:

- Press and release the **Scan** button while you are on **Memory Standby** mode, the **Scan Mem** starts flashing.
- Press either **Channel Up** or **Channel Down** to begin scanning memory channels.

The **Scan Mem** will continue to be displayed when scan is **on**. Your radio will continue to scan all memory channels and stop if an incoming transmission is detected. Your radio will remain on the channel for 6 seconds after the last incoming transmission.

For Products Purchased Outside the U.S.A.

Please contact your authorized local reseller or agent for warranty information.

Trademark Acknowledgment

©2022 Cobra Electronics Corporation. Cobra and the snake design are proprietary trademarks of Cobra Electronics Corporation, USA. Other trademarks and trade names are those of their respective owners.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.

