


## BCDC Installation with existing distribution units and battery couplers

Examples - CBE, Schaudt, Nordelectronica, Scheiber

- The BCDC installation should replace the battery coupler so the start and auxiliary battery are no longer connected in parallel when the vehicle is running.
- If the auxiliary battery distribution and display system receives its start battery voltage reading from the battery coupler circuit this feature may no longer work.
- If the auxiliary battery distribution system charges the start battery through the battery coupler circuit, this feature may no longer work.
- This is a generic diagram for illustration purposes. Your specific system diagram can be modified by REDARC to assist with your BCDC installation; Please contact Redarc at [power@redarc.com.au](mailto:power@redarc.com.au)

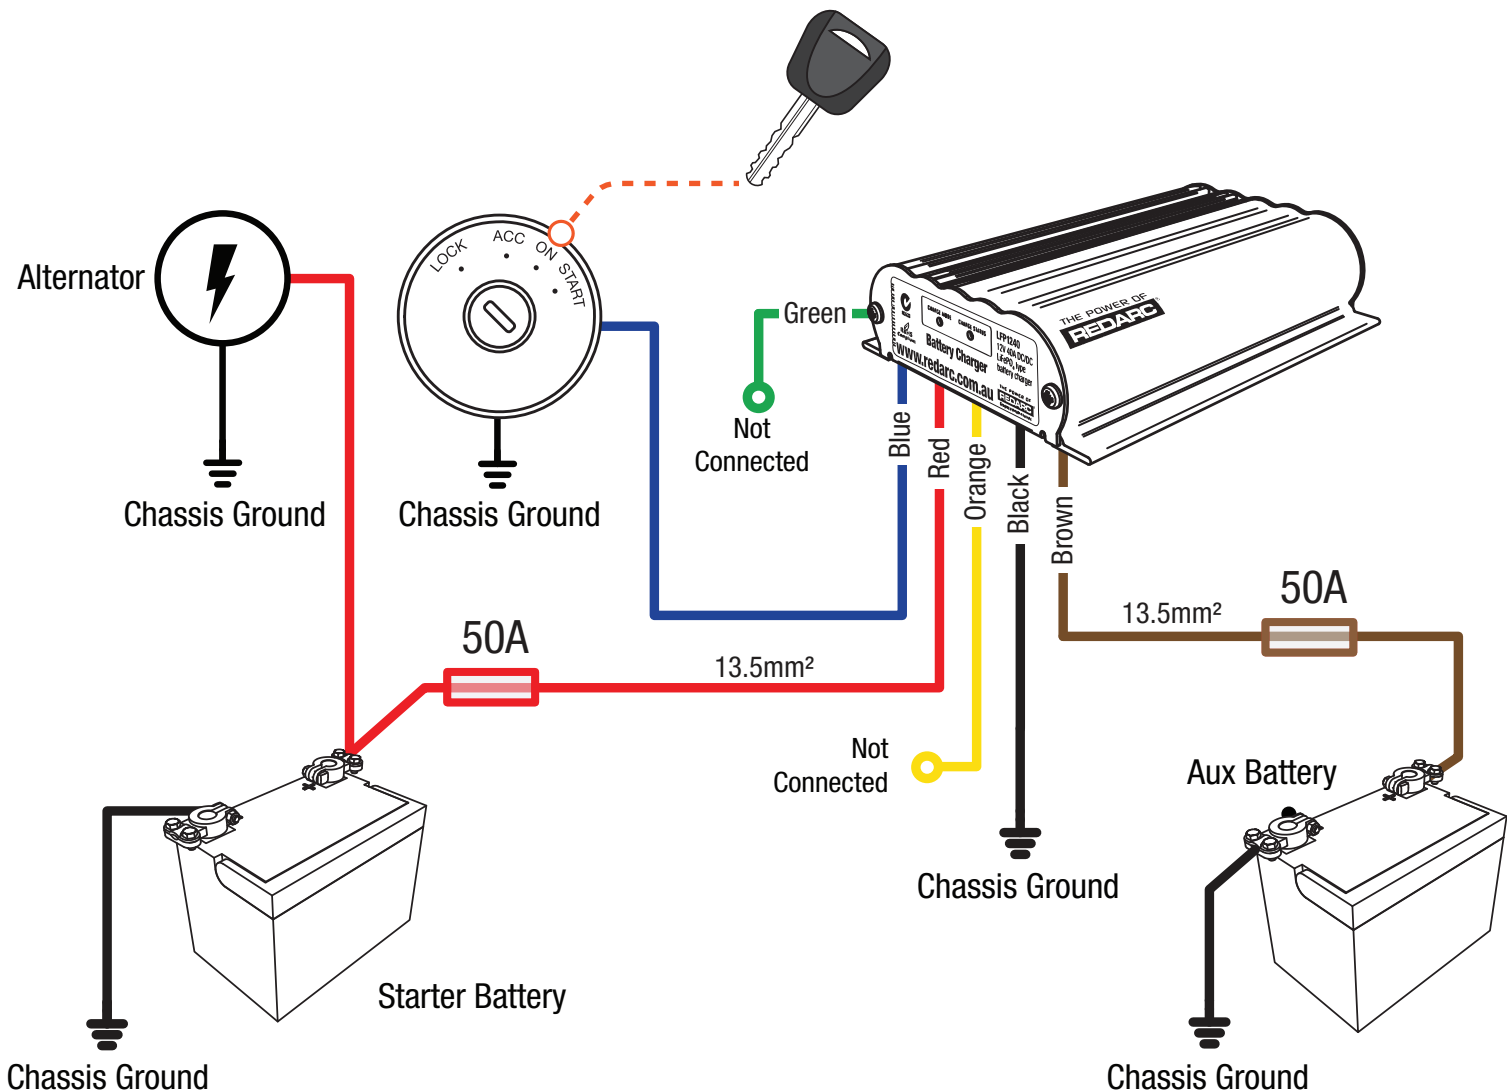

From User Manual Page 6