



Ground connection directly to battery negative, not to vehicle chassis.

Notes:

Auxiliary 12V battery positive goes to earth via SBI12.

SBI12 Black wire connects to 12V negative system.

Auxiliary loads mustq also be positive earth.

# WIRING DIAGRAM