

Remote Access by GUI

1. Choose LTE Gateway mode in Operation Mode of Device.

The screenshot shows the configuration interface for a device. On the left is a sidebar menu with categories: Wireless, Station, Application, System, Debug, and Development. Under the 'System' category, the 'Device' option is highlighted with a red box. The main area displays system information: Current Time (22:49:19 (04/18/2023)), Time Source (NTP Server), and Run Time (05:11:32). A 'System Reboot' button is visible. Below this, the 'Operation Mode' dropdown menu is open, showing options: Mix, AP, Gateway, Dual WAN Gateway, 2.4G WISP, LTE Gateway (highlighted with a red box), and Mix. Other settings include Time Zone, NTP (checked), NTP Server (cn.pool.ntp.org), NTP Server2 (time.windows.com), NTP Server3 (ntp.aliyun.com), and NTP Service (unchecked).

2. Enable UI in Firewall

The screenshot shows the Firewall configuration page. The breadcrumb path is 'Network > Firewall'. The left sidebar has 'Firewall' highlighted with a red box. The main configuration area shows: Interface (LTE), Status (checked), Default Action (Drop), and various access and through options. The 'WEB Access' toggle is checked and highlighted with a red box. Other options include ICMP Access, IPSEC Access, Telnet Access, SSH Access, ICMP Through, IPSEC Through, and NAT Through (checked).

3. Configure Web Port

The screenshot displays the WLINK web management interface. On the left is a vertical navigation menu with the following items: Dashboard, Utilization, Interface, Network, VPN, Wireless, Station, Application, System (highlighted with a gear icon), Device, Configure, Software, Password, Remote Management, Auto Reboot, Telnet Server, SSH Server, and Web Server (highlighted with a red arrow). The main content area shows the breadcrumb path 'System > Web Server'. The configuration options are: 'Web Server' (checked), 'Enable HTTP' (checked), 'Port' (input field with '80'), 'Enable HTTPS' (unchecked), and 'Designated Address Access' (unchecked). At the bottom of the configuration area are two buttons: 'Refresh' and 'Apply'.

Input SIM IP in web browser to access the router by remote.