## WLINK REMOTE ACCESS

- 1. Insert the sim card
- 2. Connect the network and WIFI antennas
- 3. Connect the ethernet cable between the router and the PC
- 4. Power on the router
- 5. Open a web browser and navigate to 192.168.1.1(default IP) if not changed
- 6. Edit the APN under Basic Network cellular

Network	APN	Username	Password
MTN, VodaCom, Telkom Mobile, Cell C	Internet	-	-
MTN	mymtn	mtn	mtn
Afrihost	Afrihost	-	-
VodaCom	Unrestricted	-	-

7. If the sim card being used is not a private APN with fixed IP, then you need to configure DDNS or alternatively use the M2M platform to get the current public IP address which can be used for remote access. Under the basic network go to DDNS

۲	Status	You haven't changed the default password for this router. To change router password_click here,						
Q	Basic Network	Dunamic DNS						
	WAN	bynamic DNS						
	Cellular	IP Address Use WAN IP Address 41.192.3.2	37 (recommended) 🗸					
	LAN							
	VLAN	Auto refresh every 28 minutes (0 = Disab	oled)					
	Schedule							
	DDNS							
	Routing	Dynamic DNS1						
ি	WLAN	Nopa						
۲	Advanced Network	service						
8	Firewall							
0	VPN Tunnel	Dynamic DNS2						
Я	Administration	Service None 👻						
	(i) More Info							

Device cloud platform	Ξ	4	Device	management	> Device monitor												🙎 test 🗸
Platform overview Device management		Total devices 341 / 3063				<b>1</b>	Online rates 11.1%				Day tas 0	k		Added devices today 0			
> Device monitor																	
> Group list	D	evice	list														
> Device files		All grou	цр <del>-</del>	C Device ed	it <b>O</b> Parameter	🐗 Remote c	ontrol 🗠	Statistical report	2 Refresh	Query		Q III Cor	figure Columns	𝑁 Task			
> Map information				Status û	SN	Device type	Description	Network	Signal	IP	1	Data	Firmware	First login	Login time	Last activity	
Data acquisition		1		Online	100000191000449	D10	Description	TD-LTE		39.1		12.8 GB	B3.20.02	2019-10-31 15:50:15	2021-12-16 11:11:11	2021-12-16 17:52:57	
		2		E Online	100000201200060	D10		TD-LTE	<b>an</b> 24	117.13		4.4 GB	B3.20.03	2020-12-30 14:04:24	2021-12-15 13:33:39	2021-12-16 17:53:08	
P⊐ Task management <		3		E Online	100000190400068	D10		TD-LTE	<b>1</b> 31	39.14		28.34 GB	B3.20.02	2019-11-01 15:58:03	2021-12-15 11:19:44	2021-12-16 17:53:15	
System management <		4		E Offine	9c052267	ROUTER		FDD-LTE	<b>11</b> 27	117.1		195.47 GB	4.3.4.5	2021-03-20 09:03:51	2021-12-16 14:11:25	2021-12-16 14:18:46	
		5		E Online	20R521808140666	RT52		NONE	<b>ant</b> 25	113.8		0 Bytes	4.3.4.1	2021-01-05 15:04:38	2021-12-14 14:31:47	2021-12-16 17:53:22	
		6		📃 Online	100000190400067	D10		TD-LTE	<b>1</b> 26	39.14		42.38 GB	B3.20.02	2019-11-01 15:48:34	2021-12-14 19:31:02	2021-12-16 17:52:57	
		7		💻 Online	100000191000473	D10		TD-LTE		39.14		13.51 GB	B3.20.02	2019-10-31 15:03:28	2021-12-16 03:28:19	2021-12-16 17:53:18	
		8		E Online	100000191000446	D10		TD-LTE	<b>an</b> 24	39.14		11.56 GB	B3.20.02	2019-10-31 15:54:12	2021-12-16 10:31:44	2021-12-16 17:53:18	
		9		📃 Online	100000201200043	D10		FDD-LTE	<b>1</b> 31	39.1		135.32 MB	B3.20.03	2020-12-25 15:43:00	2021-12-16 11:26:58	2021-12-16 17:53:00	
		10		💻 Online	100000191000456	D10		TD-LTE		39.14		12.4 GB	B3.20.02	2019-10-31 15:26:10	2021-12-16 09:14:16	2021-12-16 17:53:07	
		11		📃 Online	ac16503a	ROUTER		FDD-LTE	<b>ant</b> 23	112.9		17.8 GB	R50.4.3.4.5	2021-01-04 16:04:49	2021-12-16 07:53:15	2021-12-16 17:53:23	
		12		💻 Online	100000201200065	D10		TD-LTE		117.13;		23.48 GB	B3.20.03	2020-12-30 14:16:31	2021-12-15 18:54:26	2021-12-16 17:53:03	
		13		💻 Online	98132119	ROUTER	847617	FDD-LTE	<b>11</b> 31	221.17		15.59 GB	4.3.4.5	2019-08-13 15:49:34	2021-09-29 04:53:08	2021-12-16 17:52:29	
		14		E Online	9a125088	ROUTER		FDD-LTE		14.25		431.39 GB	4.3.4.5	2019-10-12 15:37:22	2021-12-16 14:25:40	2021-12-16 17:53:21	
		15		📃 Online	100000190400011	D10		CDMA	<b>1</b> 31	106.1		855.54 MB	B3.20.02	2020-09-23 11:28:48	2021-12-16 11:57:38	2021-12-16 17:53:01	
									14 4	Page 1 of	205   ►	F1 15 V				Vie	w 1 - 15 of 3,063

8. Select the service of your choice under the DDNS. You can use "No.IP.com" if you want a free service. And enter your DDNS details.

					DynDivs (https) - Static	
0	Status	<b>`</b>		You haven't chan	DynDNS (https) - Custom DyNS	I for this router. To change router password
Q	Basic Network				easyDNS (https)	
	WAN		Dynamic DNS		EditDNS EveryDNS	
	Cellular		IP Address		miniDNS eNom	37 (recommended) 🗸
	LAN				FreeDNS (afraid.org)	
	VLAN		Auto refresh every		HE.net IPv6 Tunnel Broker	pled)
	Schedule				ieServer.net namecheap	
	DDNS				No-IP.com	
	Routing		Dynamic DNS1		TZO ZopoEdit	
Ŷ	WLAN		Sanica		None	
۲	Advanced Network		Service	L		
8	Firewall					
0	VPN Tunnel		Dynamic DNS2			
Я	Administration		Service		None	¥
	(i) More Info					

9. Allow Remote access under "Administration" - Admin Access

Basic Network	WebAccess	*
🗟 WLAN	Local Access	нттр 🗸
Advanced Network	HTTP Access Port	80
🔯 Firewall 🔹		
VPN Tunnel	Remote Access	Disabled V Disabled
📕 Administration 👻	Allow Wireless Access	HTTP HTTPS
Identification	Block WAN Ping	
Time		
Admin Access	SSH Enable at Startup	
Storage Settings		
M2M Settings	Allow Telnet Remote Access	
Configuration		
Logging		
Upgrade	Password	v
More Info	<u> </u>	

Use HTTP for remote access

10. Take note of the Access Port number

11. Use Fixed IP or the DDNS, and the configured port number to access the router remotely. Example miya13.ddns.net:8080

Status		>	You haven't changed the default password for this router. To ch	ang
٢	Basic Network	•	WebAccess	
\$	WLAN	>		
<b>@</b>	Advanced Network	•	Local Access	
8	Firewall	•	HTTP Access Port 80	
٠	VPN Tunnel	•	Remote Access HTTP V	
ѫ	Administration		Access Port 8080	
	Identification			
	Time		Allowed Remote	
	Admin Access		IP Address	
Scheduled Reboot			Allow Wireless Access	
	Storage Settings			
	M2M Settings		Block WAN Ping	
	Configuration			
	Logging		SSH Enable at Startup	
ļ	Upgrade		• • • • • • • • • • • • • • • • • • •	