

How to Customize Front Panel

Go to RemoteUI of Sharp Copier and click Login in top right

SHARP MX-2610N

Top Page

Update(R)

Unit Serial Number: 2506455700
Name: Not Set
Model Name: MX-2610N
Machine Location: Not Set
Current Status: Auto Power Shut-Off
Memo: Not Set

Display Language Setting: American English

Display Pattern Setting: Pattern 1

Execute(E)

Execute(C)

Back to the Top on This Page

Update(R)

Sending request...

Login as admin (pass is 7654321)

Login

Login(P) Cancel(C)

Authority: admin

Login Name: Administrator

Password: (5-255digit)


Please enter the User Authentication information. This message can be edited from System Settings.

Login(P) Cancel(C)

On the left select System Settings, Then Operation Settings, then Home Screen Settings

- Address Book
- Document Operations
- User Control
- System Settings
 - Total Count
 - Default Settings
 - List Print (User)
 - Paper Tray Settings
 - Paper Type Registration
 - F-Code Memory Box
 - Fax Data Receive/Forward
 - Printer Condition Settings
 - USB-Device Check
 - Operation Settings
 - Soft Keyboard Template Setting
 - Customize Key Setting
 - Home Screen Settings
 - Device Control

Now Go to the bottom of the screen and choose the appropriate pattern (some recommended examples below)

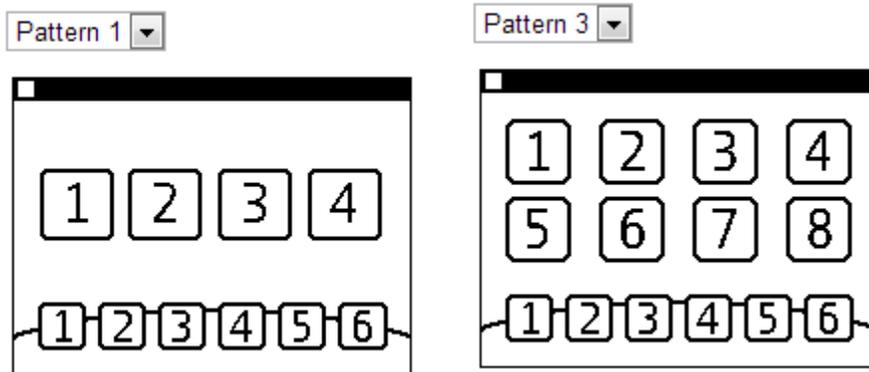

Once a pattern is selected move to the top 2 sections of the page.


Note: If there are more buttons than available display slots there will be a small arrow in the middle right of the screen to allow the user to move from screen to screen similar to on a smart phone. For example if buttons 1-8 in “home button” are filled out and Pattern 1 is selected the user will have 2 screens to optionally move between.

The first area “Home Button” are the buttons associated with the upper buttons whereas the “Fix Key” are the buttons associated with the lower buttons

No.	Home Button
1	Copy
2	Address Book
3	Not Set
4	Not Set
5	Not Set
6	Not Set
7	Not Set
8	Not Set
9	Not Set
10	Not Set

Previous(M) 1 / 6 Next(N)

No.	Fix Key
1	Operation Manual
2	Enlarge Display Mode
3	System Settings
4	Paper Tray Settings
5	LCD Control
6	Job Status
7	Not Set
8	Not Set
9	Not Set
10	Not Set

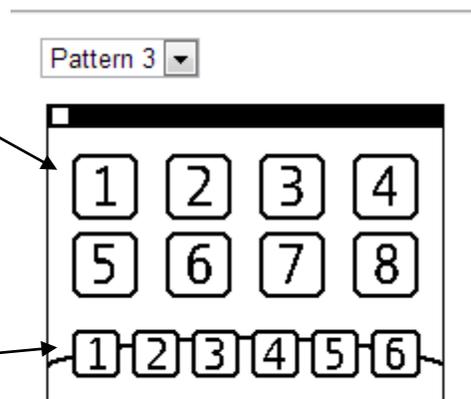

To change the numbered key, select the link under the “Home Button” or “Fix Key” that is either the existing button name or “Not Set”. Then select the radio button beside the desired function and, if applicable, the desired sub-function from the drop down.

What follows are descriptions of each button that will commonly be utilized:

- Copier - Copy

- Image Send Mode Key - Contains multiple functions for sending
 - Fax - Fax
 - E-mail - Scan to email
 - FTP/Desktop - Scan to FTP destinations and Scanning to Sharpdesk*
 - Network Folder - Scanning to a shared network folder (SMB)
 - PC Scan - For TWAIN scanning
- Address Book - The Address Book
- Address Control - Where you can add/remove/change Address Book
- Contacts/Group Addr. - This will allow you to select a destination from the Address Book using the "Search Address Book" button to dedicate to the button. For example a common scan folder would be selected

- File Information Mode Key - Contains multiple functions for hard drive/USB key
 - Scan to HDD - Scan to the Hard Drive of the Sharp
 - Scan to Ext. Memory Dev. - Scan to a USB key
 - File Information- Print jobs stored on the hard drive either through print hold or through scan to HDD.

- Job Status - Shows status and log of jobs on the device
- System Settings - Limited System settings on device screen (more available through remote UI)
- Total Count - Shows current Copier Counts
- Paper Tray Settings - Modify Tray settings
- Display Language Setting - Change displayed language
- Enlarge Display Mode - Makes functions have larger fonts and less options for easier use but less features
- Operation Manual - On device On screen Manual
- LCD Control - Control brightness of LCD

An example setup:

Item	Image
No.	Home Button
1	Copy
2	Fax
3	E-mail
4	edward scan folder
5	Scan to HDD
6	File Information
7	Scan to Ext.Memory Dev.
8	Not Set
9	Not Set
10	Not Set

Previous(M) 1 / 6 Next(N)

No.	Fix Key
1	Operation Manual
2	Enlarge Display Mode
3	System Settings
4	Paper Tray Settings
5	LCD Control
6	Job Status
7	Not Set
8	Not Set
9	Not Set
10	Not Set



Template:

Pattern 3

Key Layout of the Screen:

