




MC50 Dip Switch Settings

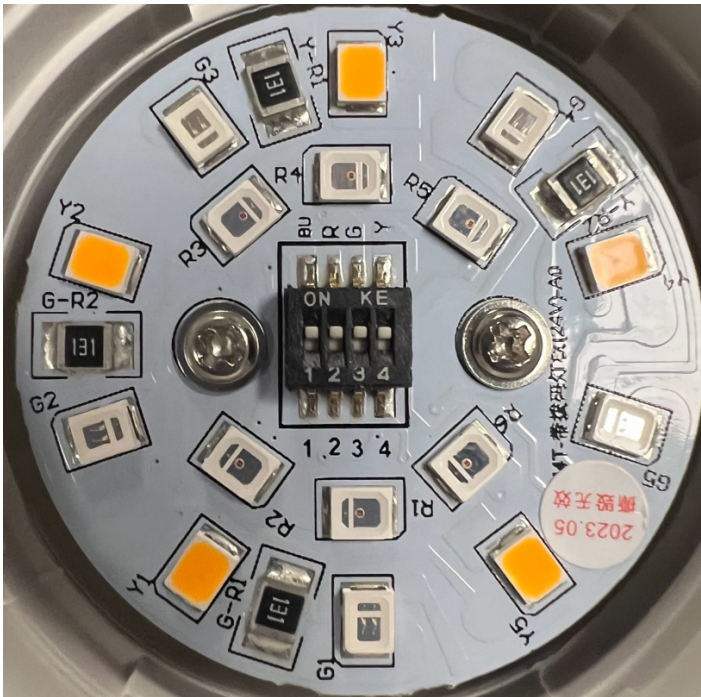

To access the dip switches, twist off the clear and white cover.

1. Move down to disable make Buzzer pulse.
2. Move down to make Red Light Flash
3. Move down to make Green Light Flash
4. Move down to make Yellow Light Flash