



CLOSE-UP BOUNDER TRIPOD SETUP INSTRUCTIONS



Introduction

Creating a close-up playing configuration is easy with the Close-Up Bouncer Mini-Tripod. Depending on the amount of reverse spin you provide, the ball will typically return with a slight backspin that you can push back to the board or flip cross-table.

You can replace either of the normal Wally Rebounder tripods with the mini-tripod and position the mini-tripod on the table. Play is then controlled by how close you position your board to the net and how steeply you tilt the board



Step 1: Setup Wally Rebounder

Attach one of your full-size tripods to your Rebounder board as you normally would by attaching the bolt to the metal bracket on the back of your board.


We suggest you use the Wally Rebounder Tripod with the lever arm as it will give you better ability to lock the board angle.

Step 2: Setup the Mini-Tripod

Open the collapsible legs of the mini tripod and lock them in place to create a stable base. You can also adjust the height of the mini tripod using the height adjustment lever. A typical height will position the bottom of the board just below the net when the board is tilted.

Step 3: Attach the Mini Tripod Stand

Attach the mini tripod to the board. It connects in the same manner that the larger tripods do by connecting the bolt to the metal bracket on the back of your board. You can do this by resting the mini-tripod on the table or you can use the table to hold the board and attach the mini-tripod hanging freely in the air to the side of the board as shown in this picture.

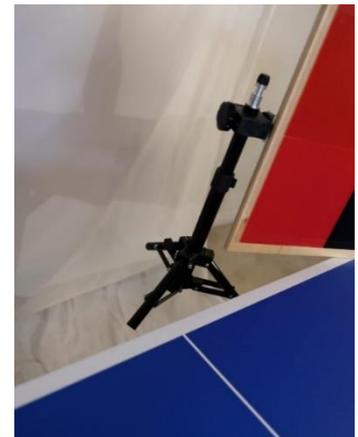

Step 4: Swing the board into place and adjust height

While still holding the floor stand mount with one hand, swing the board onto your table. Now level out the board and adjust the height by tweaking the height control mechanisms on each tripod one at a time.

Lift and move the board to about 6 inches from the back of the net. Position at a slight angle with the mini stand side further back from the net. It is important to stabilize the board by adjusting the base of the stands as necessary.



Final Step: Adjust the board tilt

Loosen the tilt control knobs on both floor and mini stands and tilt board so the bottom of the board is closer to the net than the top of the board. Start with just a small amount of tilt and continue to add more tilt depending on the speed and amount of spin you put on your shots.