



PADERNO^{TM/MC}

User Manual **1.7-LITRE ELECTRIC KETTLE**

Model No. KET004

Product No. 043-5263-2



Product No. 043-5263-2

The Paderno™ 1.7-litre Electric Kettle rapidly and quietly boils in just minutes. Precisely fill to the desired amount using the clear window and measurement markings. The cordless kettle and non-drip spout allow for easy and safe serving.

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	4
Technical Information	6
Using Your Kettle	8
Cleaning and Maintenance	9
Troubleshooting	10
Our Guarantee	11

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Only use the kettle to heat water. Never heat other liquids in the kettle.
3. Only plug the kettle into a grounded power outlet. Check that the voltage on the rating label of the appliance corresponds to that of the mains voltage in your home.
4. Keep the kettle and its power cord away from any source of heat, from any wet or slippery surface and away from sharp angles.
5. Your kettle should only be used with its lid locked, with the based and limescale filter supplied.
6. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs or machine in water or other liquid.
7. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. The appliance should not be repaired or opened by an unlicensed person. Refer to the "Our Guarantee" section regarding the product's warranty before returning the appliance to the point of purchase.
8. Close supervision is needed when any appliance is used by or near children.
9. DO NOT use outdoors.
10. NEVER immerse the kettle, its base, power cord or plug, in water or any other liquid.
11. DO NOT touch hot surfaces. Use handle or knobs.
12. NEVER use the appliance in a bathroom or close to a water source.
13. NEVER use the kettle when your hands or feet are wet.
14. DO NOT place the kettle or its base on or near a hot gas or electric burner or a hot surface such as a hotplate or in a heated oven or use it near an open flame.
15. Place the kettle and its power cord well to the back of the work surface.
16. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn ON/OFF switch to the off position, then remove the plug from wall outlet.
17. Always unplug the power cord immediately if you observe any anomaly during operation.
18. NEVER pull on the power cord to remove it from the wall outlet. DO NOT set a hot container on a hot or cold surface.
19. DO NOT use appliance for other than intended use.

-
20. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
 21. Always remain vigilant when the appliance is on, and in particular be careful of the steam coming out of the spout which is very hot.
 22. Be careful as the body of stainless steel kettles becomes very hot during operation. Only touch the handle of the kettle.
 23. NEVER leave your hand or the power cord on the hot parts of the appliance.
 24. NEVER leave the kettle connected to its base during filling, pouring, cleaning or moving.
 25. Always use the limescale filter during heating cycles.
 26. NEVER touch the limescale filter or the lid when the water is boiling.
 27. NEVER open the lid when the water is boiling.
 28. NEVER move the kettle when it is in operation.
 29. Scalding may occur if the lid removed during the brewing cycle.
 30. Unplug from outlet when not in use and before cleaning. Allow kettle to cool before attaching or removing parts, and before cleaning the appliance.

31. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons

WARNING!

Shock Hazard

Only for use with 120V AC outlet.

DO NOT use adaptor.

Failure to follow these instructions can result in death, fire or electrical shock.

WARNING!

To reduce the risk of fire or electric shock:

DO NOT remove cover (or back), no user-serviceable parts inside.

**SAVE THESE
INSTRUCTIONS
THIS PRODUCT
IS INTENDED FOR
HOUSEHOLD USE
ONLY**

Technical Information

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit in a polarized outlet only one way. If the plug does not fully fit the outlet, reverse the plug and reinsert. If it still does not fit, contact a qualified electrician. DO NOT modify the plug in any way.

 
Notes on the Power Cord

A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
- The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

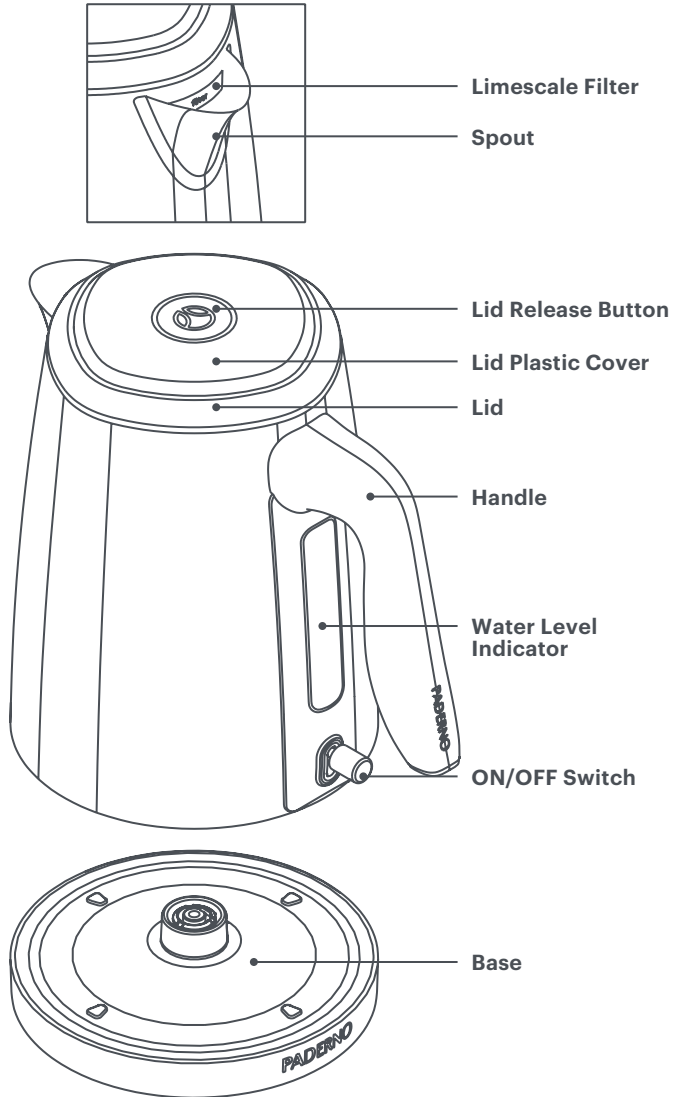

Note: Product may vary slightly from illustration.

Using Your 1.7-litre Electric Kettle

Quickly boil water with your Paderno™ 1.7-litre Electric Kettle.

Before First Use

1. Remove all packaging and accessories both inside and outside the kettle.
2. Adjust the length of the power cord by coiling the excess under the base. The power cord should extend from the base through the slot in the back.
3. Rinse the inside of the kettle and the limescale filter (located in the spout) several times. Boil 2 or 3 kettles of water and discard to remove all manufacturing residues and dust.
4. Wipe the outsides of the kettle and the base with a clean damp cloth. To avoid damage to the electrical parts, avoid exposing the base of the kettle or the bottom of the kettle to excess water.

Cleaning and Maintenance

DO NOT leave water in the kettle after use.

Empty the kettle after each use to reduce the accumulation of limescale deposits.

Cleaning the Kettle and Base

1. Unplug the base and allow the kettle to cool before cleaning.
2. Wipe the exterior of the kettle clean with a soft, damp cloth or sponge. A small amount of mild dish soap can be used if necessary. Never use abrasive cleaners or chlorine-based acids.
3. Immediately dry using a soft, dry cloth. Ensure all parts are dry before using.

CAUTION:

- Avoid exposing the base or the bottom of the kettle to excess water.
- To reduce the risk of electrical shock, do not immerse the base in water or any other liquid, or place under running water to clean.
- DO NOT use abrasive cleaners, chlorine-based acids, metallic sponges or sharp scrapers, as they will damage the surfaces.

Cleaning the Limescale Filter

The limescale filter is the removable mesh filter in the spout of the kettle. This filter DOES NOT treat or remove the scale from the water, it traps the scale particles from being poured out of the kettle.

The filter should be cleaned every 10–15 uses, as follows:

1. Unplug the base and allow the kettle to cool before cleaning.
2. If the filter is wet, run it under lukewarm water to remove particles.
3. If the filter is dry, brush it gently to remove particles.
4. To avoid damaging the mesh, DO NOT scrub the filter.
5. To remove excessive scale, descale as described in the next section.

Descaling

The amount of limescale that develops in your kettle depends on the hardness of your water and how frequently the kettle is used. Descale regularly, at least once a month or more often is your water is very hard, as follows:

1. Unplug the base and allow the kettle to cool before cleaning.
2. Use plain white vinegar at room temperature. Fill the kettle with 2 cups of vinegar and leave for one hour without heating.
3. Remove the filter from the spout and soak in 1 cup of vinegar for one hour.
4. Thoroughly rinse the kettle and filter with running, room temperature water until completely clean.
5. Repeat the descaling process if necessary.
6. Immediately dry using a soft, dry cloth. Ensure all parts are dry before using.

Troubleshooting

WARNING: Electrical Shock Hazard

- Failure to follow these instructions could result in death, fire or electrical shock

Issue:

- The On/Off switch does not stay in the On position.

Possible Causes:

- Check that the kettle is properly placed on the base.
- If the kettle is hot and contains water, leave the kettle to cool for a few minutes and then try turning it on again.
- If the kettle is hot and does not contain water, leave the kettle to cool for a few minutes, then fill with cold or room temperature water and try turning it on again.

Issue:

- The kettle does not stop boiling/turn off.

Possible Causes:

- Check that the lid is closed properly.

WARNING: If your kettle has fallen, is leaking, or if the power cord, plug or base are visibly damaged:

- DO NOT use the kettle
- Unplug the base immediately
- DO NOT attempt to disassemble or repair the kettle or override safety devices

THE APPLIANCE SHOULD NOT BE REPAIRED OR OPENED BY AN UNLICENSED PERSON.

Refer to the "Our Guarantee" section regarding the product's warranty before returning the appliance to the point of purchase.

Our Guarantee

If you experience any issues with your Paderno™ 1.7-litre Electric Kettle, please refer to the warranty terms below to determine the corrective course of action.

2-Year Limited Warranty

Padinox Inc. (“Paderno”) has been fuelling your passion for cooking since 1979. This iconic Canadian brand gives you outstanding durability and performance, so you can concentrate on the important things, like what to make next.

That’s why we stand by all our products! Starting from the date of purchase, Paderno warrants that your Kitchen Appliance is free from any manufacturing defects in materials or workmanship for a period of 2 years.

This warranty is only offered on Paderno appliances sold and used in Canada. The Paderno warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at Paderno’s discretion.

The Paderno warranty does not apply to appliances that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Paderno, are

used. You may also arrange for service after the warranty expires at an additional cost. **There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

CONTACT:

If you have any trouble with the product during the warranty period, please visit us online at www.Paderno.com or contact us at: **1-800-263-9768** or via email customer.service@padinox.ca

Padinox Inc. Toronto Canada M4P 2V8

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place. We recommend that you register your product on our website <https://www.paderno.com/pages/product-registration>

Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.



Cook. For life.

Valued by professional chefs and passionate home cooks alike, PADERNO™ offers an exceptional level of durability and performance guaranteed.

Connect with us at paderno.com to learn more and register your product.

For questions and concerns, please contact:
Customer.service@padinox.ca
1-800-263-9768