



PADERNO™

User Manual 9-CUP BALANCED-BREW COFFEE MAKER

Model No. CMK021

Product No. 043-5264-0



Product No. 043-5264-0

The PADERNO™ 9-cup Balanced-Brew Coffee Maker is designed with precise brewing technology so that you can enjoy the perfect cup of coffee in the comfort of your own home.

The intuitive dial interface and digital display screen allows for easy operation and programming. Its performance has been certified by the Specialty Coffee Association (SCA), who has developed the standards for the Gold Cup™ of coffee based on decades of testing and research. Each of the select few Certified Home Brewers are specially-designed to produce optimal water temperature, brew time and volume to ensure coffee is rich, delicious and consistently flavourful.

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	4
Technical Information	6
Using Your Coffee Maker	8
Cleaning and Maintenance	12
Our Guarantee	14

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from power outlet when either the appliance or display clock is not in use and before cleaning. Allow the appliance to cool before attaching or removing parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. The appliance should not be repaired or opened by an unlicensed person. Refer to the "Our Guarantee" section regarding the product's warranty before returning the appliance to the point of purchase.
7. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than its intended use.
12. To disconnect, turn off the appliance and remove plug from the power outlet. Always hold the plug when removing from the power outlet. Never pull the cord.
13. The carafe is designed for use with this appliance. It must never be used on a stovetop.
14. Do not place a hot carafe on a wet or cold surface.
15. Do not use a cracked carafe or a carafe with a loose or weakened handle.
16. Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
17. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
18. Some parts of appliance are hot when operated, so do not touch parts with hand. Use handles or knobs only.
19. Children must be supervised to ensure that they do not play with the appliance.

20. Do not let the coffee maker operate without water.
21. To reduce risk of fire or electric shock, do not open. There are no user-serviceable parts inside. The appliance should not be repaired or opened by an unlicensed person.

**FOR HOUSEHOLD
USE ONLY
SAVE THESE
INSTRUCTIONS**

Technical Information

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT modify the plug in any way.


Notes on the Power Cord

A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.


If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
- The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over.

Coffee Maker Parts

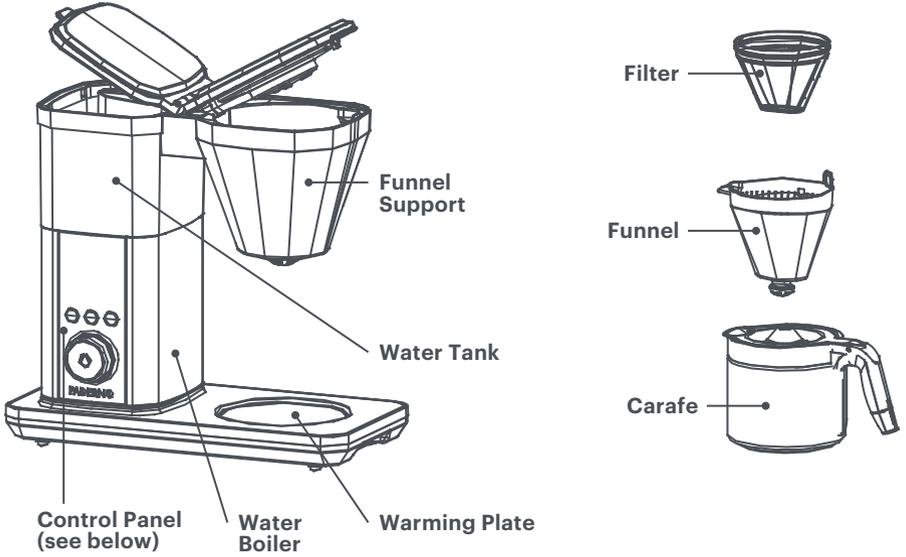

Control Panel

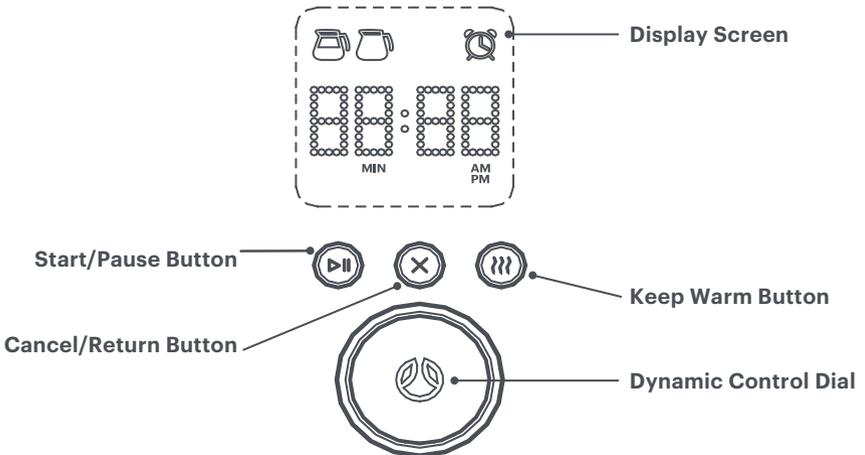

Using Your Coffee Maker

Before First Use

1. Check that all accessories are complete and the unit is not damaged.
2. Add water into water tank to the "MAX" level and brew water several times without ground coffee, to remove any residue left from the manufacturing process.
3. Discard water.
4. Clean all detachable parts thoroughly with warm water.

Initial Set Up

1. Plug the power cord into the outlet. The display screen will briefly display all the icons.
2. Click and hold the dial for 2 seconds to enter the "Clock Setting" mode. Rotate the dial to adjust the "Hour". To increase the "Hour", rotate the dial clockwise, to decrease the "Hour", rotate the dial counterclockwise. After setting the "Hour", click the dial to confirm. Note: The time cycle is 12 hours.
3. Rotate the dial to adjust "Minutes" using the same process as previous step. Click dial to confirm, as shown in Fig. 1.

Clock Setting

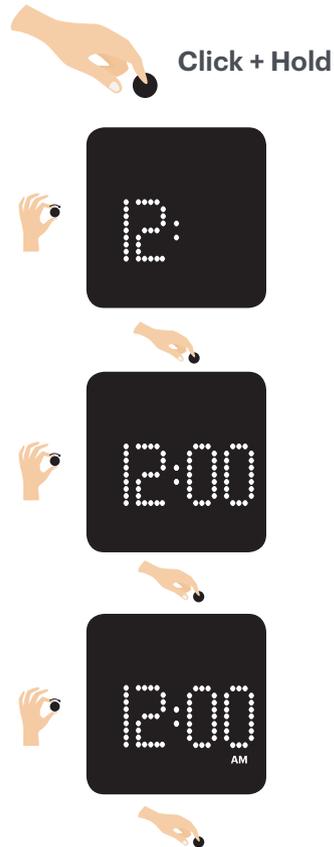


Fig. 1

Selecting the Brew Size

1. To enter "Brew Setting" mode, click the dial.
2. When setting Brew Size, carafe icons will blink on the digital display. Rotate dial to choose between "Small Batch" or "Full Batch". Click dial to confirm selection, as shown in Fig. 2.

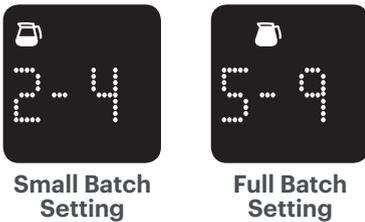


Fig. 2

Setting the Timer

1. When setting the timer to delay brewing, the alarm clock icon will blink. Rotate the dial to choose between setting a timer, or not setting a timer. Click the dial to confirm selection.
2. If setting a timer is selected, the "Hour" on the clock will blink. Rotate the dial to set hour. Click the dial to confirm selection, as shown in Fig 3.
3. The "Minutes" on the clock will blink after hour selection. Rotate the dial to set minutes. Click the dial to confirm selection, as shown in Fig 3.

4. Press "Start/Pause" to finish setting the timer, as shown in Fig 3. Set time will appear on screen for 2 seconds and "Start/Pause" will remain lit to indicate that the brew cycle will start at the set time.
5. When brewing is completed, the coffee maker will enter the Keep Warm function for 30 minutes. NOTE: To begin brewing immediately, select "Start/Pause" again.

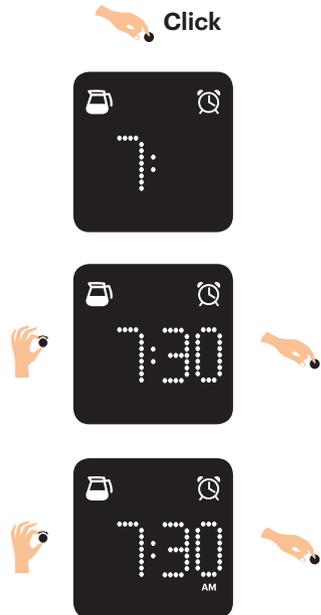


Fig. 3

NOTE: Sleep mode is activated after 2 minutes if the coffee maker is idle and not brewing. The dial turns off and only the clock will show on the display screen. To wake the coffee maker, user can either click/rotate the dial once or press any button. The dial will become illuminated. The display screen will then return to the settings it was set at before going into sleep mode.

Operating Instructions

1. Open the top lid and fill the water tank with cold drinking water. The water level should not exceed MAX level as indicated on the water level gauge.
2. Place the funnel into the funnel support and ensure that the funnel is positioned correctly. Then place the permanent filter or paper filter in the funnel, and ensure that it is positioned correctly.
3. Add ground coffee into permanent filter or paper filter. Usually a cup of coffee needs a level spoon of ground coffee, but you may adjust according to your personal taste.
4. Insert the glass carafe on the warming plate.
5. To reset brewing preferences, click dial to enter "Brew Settings" mode.
6. To begin brewing immediately, press "Start/Pause" button. The "Start/Pause" and "Cancel/Return" buttons will become illuminated. The display screen will show the time count-up during brewing process. The time count-up indicates the elapsed time in the brewing process.
NOTE: If there is no water in the reservoir to begin brewing, the coffee maker will beep, and the batch size icon will begin blinking. Add more water and press "Start/Pause" again to begin the brew cycle.
NOTE: The glass carafe can be removed at any time during brewing cycle. The appliance will stop dripping automatically. The carafe should be put back into position on the warming plate within 30 seconds.
7. Press "Start/Pause" to temporarily stop the brewing cycle. Press "Start/Pause" again to resume the brewing process.
8. When the brewing cycle is complete, the coffee maker will beep. The coffee maker will enter the "Keep Warm" function, and the "Keep Warm" button will become illuminated. The display screen will show time count up to indicate time elapsed in the "Keep Warm" function. After 30 minutes, the machine will beep and the "Keep Warm" button will turn off.
NOTE: To deactivate "Keep Warm" function, press the button again. If the button is pressed after the 30 minutes are done, "Keep Warm" function will activate again.
9. Remove the glass carafe to serve when brewing is finished (remove

about one minute after the coffee stops dripping).

NOTE: The coffee you get will be less than the water you have added, as some water is absorbed by the ground coffee.

10. Always turn the coffee maker off and disconnect power supply when not in use.

NOTE: Use caution when pouring coffee. Coffee will be hot and may cause injury.

Tips for Great-tasting Coffee

- A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "Cleaning and Maintenance" section of this user manual. Always use fresh, cold water in the coffee maker.
- Store unused ground coffee in a cool, dry place. After opening a package of ground coffee, reseal it tightly and store it in a refrigerator to maintain its freshness.
- For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- Do not reuse coffee grinds since this will greatly reduce the coffee's flavour. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
- Clean the coffee maker when

over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grinds.

- Oiliness may occur more frequently if heavily roasted coffees are used.

Brewing the SCA Certified Golden Cup™ of Coffee

To achieve the Gold Cup™ it is recommended to use 75 grams (2.6 oz) of coffee beans for every 9-cup (1350 ml) pot of coffee, or 8.5 grams (0.3 oz) per cup (150 ml), with beans freshly ground to a medium grind. It is also recommended to use a paper filter for optimal flavor.

Cleaning and Maintenance

Cleaning and Maintenance

CAUTION: Be sure to unplug this appliance and allow it to cool down before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure the plug is first removed from power outlet.

1. Clean all detachable parts after each use with hot water and soap.
2. Wipe the appliance's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the appliance base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Never use abrasive cleaners to clean it.
5. Replace all parts and keep for next use.

The appliance should not be repaired or opened by an unlicensed person. Refer to the "Our Guarantee" section regarding the product's warranty before returning the appliance to the point of purchase.

Removing Mineral Deposits

To keep your coffee maker operating efficiently, you should clean the mineral deposits left by the water.

Follow these directions:

1. Fill the water tank with water and descaler to the MAX level in the proportion of 4 to 1 (Use a "household descaler", and refer to the instructions on package of the descaler. You can also use citric acid instead of descaler).
2. Put the glass carafe on the warming plate. Ensure that the centre line of glass carafe aligns with that of funnel.
3. Press the "Start/Pause" button once. After a while, water will drip out automatically.
4. After brewing the equivalent of one cup, switch off the appliance by pressing the "Start/Pause" button once again.
5. Leave the solution to work for 15 minutes.
6. Repeat steps 3-5 again. Brew the remaining solution until the water tank is completely empty.
7. To remove solution, brew with water only (no ground coffee) at least 3 times.

Disposal of Appliance

DO NOT dispose of this product in household waste. Many parts of this product are recyclable. Dispose of as per the requirements of your local municipality.

Our Guarantee

If you experience any issues with your PADERNO™ 9-cup Balanced-Brew Coffee Maker, please refer to the warranty terms below to determine the corrective course of action.

2-Year Limited Warranty

Padinox Inc. (“PADERNO”) has been fueling your passion for cooking since 1979. This iconic Canadian brand gives you outstanding durability and performance, so you can concentrate on the important things, like what to make next.

That’s why we stand by all our products! Starting from the date of purchase, PADERNO warrants that your Kitchen Appliance is free from any manufacturing defects in materials or workmanship for a period of 2 years.

This warranty is only offered on PADERNO appliances sold and used in Canada. The PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at PADERNO’s discretion.

The PADERNO warranty does not apply to appliances that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by

PADERNO, are used. You may also arrange for service after the warranty expires at an additional cost. **There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

CONTACT:

If you have any trouble with the product during the warranty period, please visit us online at www.PADERNO.com or contact us at: **1-800-263-9768** or via email **customer.service@padinox.ca**

Padinox Inc. Toronto Canada M4P 2V8

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place. We recommend that you register your product on our website - <https://www.PADERNO.com/pages/product-registration>

Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.



Cook. For life.

Valued by professional chefs and passionate home cooks alike, PADERNO™ offers an exceptional level of durability and performance guaranteed.

Connect with us at PADERNO.com to learn more and register your product.

For questions and concerns, please contact:
Customer.service@padinox.ca
1-800-263-9768