


SABER VOLD

 
PRODUCT
MANUAL

▶ ILLUSTRATION OF MODEL

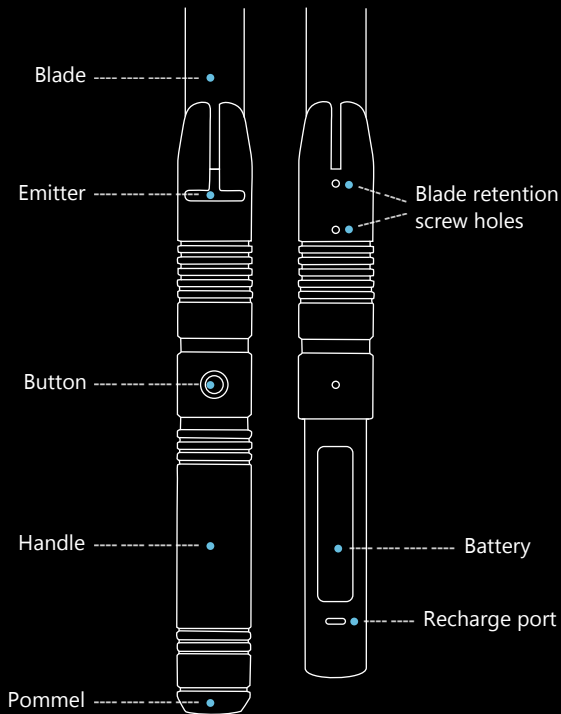


▶ DISMANTLING


- ① Rotate and unscrew the lightsaber body

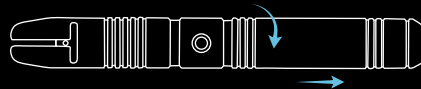

 
- ② Unscrew the back screws of the handle

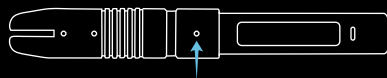

 - ③ Push the switch button from the handle surface into the infrastructure

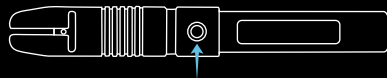


- ④ Pull down the inner structure

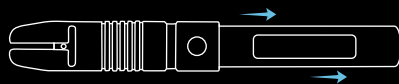 


▶ CHARGING DIAGRAM

 - ① For models with an external charging port, please use the charging cable provided by the merchant to plug in and charge.

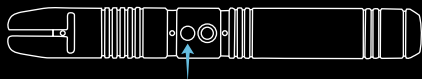

 - ② For models with built-in charging port, please unscrew the saber pommel or handle, and then use the charging cable provided by the merchant to plug in and charge.

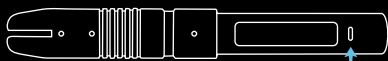

- ③ For models without a charging port, please unscrew the saber handle, then take out the battery and use the charging box provided by the merchant to charge.



▶ THREE SABERELECTRONICS VERSIONS

| Type | RGB S16 | S-RGB (upgrade model) | SN Pixel |
|-----------------|---|-------------------------------------|-------------------------------------|
| Blade Length | 82cm/92cm RGB Blade | 82cm/92cm RGB Blade | 82cm/92cm Pixel Blade |
| Blade Colors | 12 | 12 (multi-color) Connecting With | 12 (multi-color) Connecting With |
| Sound Fonts | 16 | 27(Customizable) | 27(Customizable) |
| Blade Style | Yes | Yes | Yes |
| Ignition Styles | Yes | Yes | Yes |
| Features | Flash on Clash / Gesture Ignition / Smooth swing / Lock-up Adjust colors / Removable battery and chassis | | |
| Bluetooth | No | Yes | Yes |
| BGM | Yes | Yes | Yes |
| SD Card | Not Supported | 32G | 32G |
| Speaker | 4 Ω 3W | 4 Ω 3W | 4 Ω 3W |
| Battery | 2000mAh 18650 | 2000mAh 18650 | 3200mAh 18650 |

▶ OPERATING INSTRUCTIONS-RGBS16

① Single Button Control

| Standby mode | Button Operation |
|-----------------------|--|
| Enter standby mode | Hold the button until the button light is on. |
| Enter boot status | Tap the button after enter standby mode. |
| Volume adjust | Hold the button until the breath light flashes once then release. |
| Switch sound fonts | Hold the button until the breath light flashes twice then release. |
| Switch BGM | Hold the button until the breath light flashes Three times then release. |
| FOC on/off | Hold the button until the breath light flashes Four times then release. |
| Motion control on/off | Hold the button until the breath light flashes Five times then release. |
| Power off | Hold the button until the breathing light is off. |
| Power saving mode | No operation for 10 minutes |
| Boot Status | |
| Blaster | Tap the button. |
| Lock-up | Hold the button until the breath light flashes once then release. |
| Switch blade color | Hold the button until the breath light flashes twice then release, and then tap button. Exit this mode need Hold the button until the breath light flashes once then release. |
| Switch blade effects | Hold the button until the breath light flashes Three times then release. |
| Enter standby mode | Hold the button until the breath light flashes Four times then release. |
| Standby mode | Gesture Operation |
| Enter boot status | Twist the saber after enter standby mode. |
| Switch sound fonts | Point blade upward, hold button and twist the hilt. |
| Switch BGM | Point blade downward, hold button and twist the hilt. |
| Boot Status | |
| Switch blade effects | Point blade upward, hold button and twist the hilt. |
| Switch blade color | Point blade downward, hold button and twist the hilt. |

| | |
|--------------------|------------------|
| FOC | Hit the saber. |
| Enter standby mode | Twist the saber. |

② PWR/AUX Control

When buttons are distributed up and down:
Upper button is PWR button–lower button is AUX button.
When the buttons are distributed left and right:
left button is PWR button–right button is AUX button.

| Standby mode | Button Operation |
|----------------------|---|
| Enter standby mode | Hold the PWR until hearing the prompt sound "power on" |
| Enter boot status | Tap the PWR after enter standby mode. |
| Switch sound fonts | Tap the AUX. |
| Adjust volume | Hold the PWR then release. |
| Power saving mode | No operation for 10 minutes |
| Boot Status | |
| Blaster | Tap the AUX |
| Lock-up | Hold the AUX then release. |
| FOC off/on | Hold the PWR then release |
| Enter standby mode | Tap the PWR |
| Boot Status | Gesture Operation |
| Enter boot status | Twist the saber after enter standby mode. |
| Switch sound fonts | When the blade is up, Hold the AUX button then twist saber. |
| Switch BGM | When the blade is down, Hold the AUX button then twist saber. |
| Boot Status | |
| Switch blade effects | When the blade is up, Hold the AUX button then twist saber. |
| Switch blade color | When the blade is down, Hold the AUX button then twist saber. |
| FOC | Hit the saber. |
| Enter standby mode | Twist the saber. |

▶ OPERATING INSTRUCTIONS-SRGB

① Single Button Control

| Standby mode | Button Operation |
|----------------------|---|
| Enter standby mode | Hold the button until the button light is on. |
| Enter boot status | Click the button after enter standby mode. |
| Volume adjust | Hold the button until the breath light flashes once then release. |
| Switch sound fonts | Hold the button until the breath light flashes twice then release. |
| Switch blade effects | Hold the button until the breath light flashes Three times then release. |
| Power off | Hold the button until the breath light flashes Five times then release. |
| Power saving mode | Hold the button until the breathing light is off. (No operation for 10 minutes) |
| Boot Status | |
| Blaster | Tap the button. |
| Lock-up | Hold the button until the breath light flashes once then release. |
| Switch blade color | Hold the button until the breath light flashes twice then release, then click the button to select color. |
| FOC off/on | Hold the button until the breath light flashes Three times then release. |
| Enter standby mode | Hold the button until the breath light flashes Four times then release. |
| Boot Status | |
| Gesture Operation | |
| Enter boot status | Twist the saber. |
| Switch sound fonts | Point blade upward, hold button and twist the hilt. |
| Switch BGM | Point blade downward, hold button and twist the hilt. |
| Boot Status | |
| Switch blade effects | Point blade upward, hold button and twist the hilt. |
| Switch blade color | Point blade downward, hold button and twist the hilt. |
| FOC | Hit the saber. |
| Enter standby mode | Twist the saber. |

② PWR/AUX Control

When buttons are distributed up and down:
Upper button is PWR button—lower button is AUX button.
When the buttons are distributed left and right:
left button is PWR button—right button is AUX button.

| Standby mode | Button Operation |
|--------------------------------|---|
| Enter standby mode | Hold the PWR until hearing the prompt sound "power on" |
| Enter boot status | Tap the PWR after enter standby mode. |
| Switch sound fonts | Tap the AUX. |
| Enter/Exit Volume adjust Mode | Hold the PWR and AUX at the same time until hear the beep then release it. |
| After Enter volume adjust Mode | Tap the PWR button to increase the volume. Tap the AUX button to decrease the volume. |
| switch blade effects | Press and hold the AUX button for 1 second and hear the beep and release it. |
| Power off | Click AUX button 3 times. |
| Power saving mode | No operation for 10 minutes. |
| Boot Status | |
| Blaster | Tap the AUX |
| Lock-up | Hold the AUX then release. |
| Enter standby mode | Tap the PWR |
| Standby mode | |
| Gesture Operation | |
| Enter boot status | Twist the saber. |
| Switch sound fonts | When the blade is up, Hold the AUX button then twist saber. |
| Switch BGM | When the blade is down, Hold the AUX button then twist saber. |
| Boot Status | |
| Switch blade color | When the blade is down, Hold the AUX button then twist saber . |
| FOC | Hit the saber. |
| Enter standby mode | Twist the saber. |

▶ OPERATING INSTRUCTIONS — SNV4

① Single Button Control

| Standby mode | Button Operation |
|---------------------|--|
| Switch pixel number | Tap the button 3 times when power off . |
| Enter standby mode | Hold the button until the button light is on. |
| Enter boot status | Tap the button after enter standby mode. |
| Volume adjust | Hold the button until the breath light flashes once then release. |
| Switch boot effect | Hold the button until the breath light flashes twice then release. |
| Switch blade effect | Hold the button until the breath light flashes Three times then release. |
| Switch sound fonts | Hold the button until the breath light flashes Four times then release. |
| Power off | Hold the button until the breathing light is off. |
| Power saving mode | No operation for 10 minutes |
| Boot Status | |
| Blaster | Tap the button. |
| Lock-up | Hold the button until the breath light flashes once then release. |
| Switch blade color | Hold the button until the breath light flashes twice then release. |
| FOC on/off | Hold the button until the breath light flashes Three times then release. |
| Enter standby mode | Hold the button until the breath light flashes Four times then release. |
| Standby mode | Gesture Operation |
| Enter boot status | Twist the saber. |
| Switch sound fonts | Point blade upward, hold button and twist the hilt. |
| Switch BGM | Point blade downward, hold button and twist the hilt. |

| Boot Status | |
|--------------------|---|
| Switch blade color | Point blade downward, hold button and twist the hilt. |
| Force | Point blade upward, hold button and twist the hilt. |
| FOC | Hit the saber. |
| Drag | Hold the button and hilt the blade. |
| Melt | Hold the button and thrust the blade forward. |
| Enter standby mode | Twist the saber. |

② PWR/AUX Control

When buttons are distributed up and down:
Upper button is PWR button—lower button is AUX button.
When the buttons are distributed left and right:
left button is PWR button—right button is AUX button.

| Standby mode | Button Operation |
|--------------------------------|--|
| Switch pixel number | Tap the PWR button 3 times when power off |
| Enter standby mode | Hold the PWR until hearing the prompt sound "power on" |
| Enter boot status | Tap the PWR after enter standby mode. |
| Switch sound fonts | Tap the AUX. |
| Enter/Exit Volume adjust Mode | Hold the PWR and AUX at the same time until hear the beep then release it. |
| After Enter volume adjust Mode | Tap the PWR button to increase the volume. Tap the AUX button to decrease the volume. |
| Switching boot effect | Hold the PWR button until hear the beep then release it. |
| Switch blade effect | Hold the AUX button until hear the beep then release it. |
| Power off | Tap the AUX button 3 times. |
| Power saving mode | No operation for 10 minutes. |

| Boot Status | Button Operation |
|--------------------|--|
| Blaster | Tap the AUX |
| Lock-up | Hold the AUX then release. |
| FOC off/on | Hold the PWR and AUX buttons at the same time until hear the beep then release it. |
| Enter standby mode | Tap the PWR |
| Standby mode | Gesture Operation |
| Enter boot status | Twist the saber. |
| Switch sound fonts | Point blade upward, hold AUX button and twist the hilt |
| Switch BGM | Point blade downward, hold AUX button and twist the hilt |
| Boot Status | |
| Force | Point blade upward, hold AUX button and twist the hilt |
| Switch blade color | Point blade downward, hold AUX button and twist the hilt |
| FOC | Hit the saber. |
| Drag | Hold the PWR button and hilt the blade |
| Melt | Hold the AUX button and thrust the blade horizontally forward |
| Enter standby mode | Twist the saber. |

▶ SECURITY INFORMATION

Before using and operating the product, in order to ensure optimal product performance and avoid dangerous or illegal situations, please read and follow all safety information.

① Operation and Safety

- Please fully charge before operation.
- Please use a 5V1A power adapter.
- Please keep small accessories safe and keep them out of reach of children to prevent them from accidentally swallowing.
- Please notice the anode and cathode of the battery.
- Please use this product within the temperature range of 0C~35C and store it in the range of -20C~+45C.
- Don't expose the battery to high temperatures or heat generating products, such as sunlight, heaters, microwaves, ovens, or water heaters. Overheating the battery may cause an explosion.
- Don't throw batteries into fire. It is prohibited to disassemble, drop, squeeze or modify batteries. Avoid foreign objects inserting, puncturing the battery, or immersing the battery in water or other liquids. Avoid external shocks and pressure on the battery. To prevent battery leakage, overheating, fire or explosion.
- Please dispose of batteries according to local regulations and don't dispose of them as household waste. Improper disposal of batteries may lead to battery explosions.
- When charging is complete or not charging, please disconnect the power adapter from the product and unplug the power adapter from the power socket.
- Don't use the power adapter in damp places (such as near sinks, bathtubs, or showers), and don't use wet hands to plug and unplug the power adapter.
- Using unauthorized or incompatible power sources, power adapters, or batteries may cause fire, explosion, or other hazards.
- [Warning] There is a risk of fire or explosion if the incorrect model of battery is replaced. For your personal safety and to ensure the normal operation of the product, we strongly recommend that you go to the Official store to replace the battery of this product.

② Warning

- This product is not suitable for children under 14 years old.

▶ FAQ

① The saber has no sound

Please confirm whether it is in mute mode, and you can adjust volume mode, or reinstall the battery.

② The blade is easy to loosen

Make sure that the screws that secure the blade are tightened. In addition, it is normal for the screws and the blade to loosen during the fight. You can change the fixed position of the screw and tighten the screw.

③ Saber cannot be turned on

Please charge the saber first to make sure it is fully charged. If it still can't be solved, please remove the battery and reinstall it (pay attention to the positive and negative poles), and make sure the battery are contact well.

▶ WARRANTY

The product has a one-year warranty period.

Warranty covers original products and accessories that have not been modified.

Includes: light saber handle, electronic internal structure, and light saber blade.

▶ WARRANTY DISCLAIMER

Product malfunctions caused by self modification of electronic software programs or product hardware are not covered by the warranty.