

**Arteor™ selection of the "best sellers" control mechanisms**

Mechanisms supplied with white or magnesium square rocker plate, to be equipped with support frames and plates (p. 382)		White	Magnesium
<b>SWITCHES 10 AX - 250 V~</b>			
	1-way switch	5 720 04	5 725 04
	2-way switch	5 720 05	5 725 05
	Intermediate switch	5 720 08	5 725 08
	1-way switch	5 724 50	
	2-way switch with indicator To be equipped with LED	5 720 06	5 725 06
	1-way switch	5 720 34	5 725 34
	2-way switch	5 720 35	5 725 35
	Intermediate switch	5 720 38	5 725 38
	2-way switch with indicator To be equipped with LED	5 720 36	5 725 36
	2-way switch with indicator and label-holder To be equipped with LED	5 720 37	5 725 37
	Double pole switch	5 720 40	5 725 40
<b>SWITCHES 20 AX - 250 V~</b>			
	1-way switch	5 720 09	5 725 09
	2-way switch	5 720 10	5 725 10
	2-way switch with indicator To be equipped with LED	5 720 11	5 725 11
	1-way - double pole switch	5 720 13	5 725 13
	Double pole switch	5 724 51	
	1-way - double pole switch with indicator - Red LED supplied	5 720 14	5 725 14
	1-way switch	5 720 41	5 725 41
	1-way switch - 3 gang	5 720 43	5 725 43
	2 x 2-way switch + 1-way switch	5 720 44	5 725 44
	3 gang		
	2-way switch with indicator To be equipped with LED	5 720 42	5 725 42
	1-way - Double pole switch	5 720 46	5 725 46
	2-way - Double pole switch	5 720 48	5 725 48
	1-way - double pole switch with indicator - Red LED supplied	5 720 47	5 725 47
	1-way - double pole switch with indicator and "WATER HEATER" marking - Red LED supplied	5 720 49	5 725 49

Mechanisms supplied with white or magnesium square rocker plate, to be equipped with support frames and plates (p. 382)		White	Magnesium
<b>MICROPUSH SWITCH 100/240 V~</b>			
	2-way switch 400 W - without neutral	5 740 04	5 740 54
<b>SENSITIVE SWITCH 100/240 V~</b>			
	For controlling light sources by simply passing the hand in front of the switch	5 720 51	5 734 55
<b>PUSH-BUTTONS 6 A - 250 V~</b>			
	1-way push-button	5 720 00	5 725 00
	2-way push-button	5 720 01	5 725 01
	1-way push-button with bell symbol	5 720 15	5 725 15
	2-way push-button with locator Equipped with blue LED	5 720 02	5 725 02
	2-way push-button with label-holder	5 720 03	5 725 03
	Push-button with locator and bell symbol Equipped with blue LED	5 720 16	5 725 16
	1-way push-button	5 720 30	5 725 30
	2-way push-button	5 720 31	5 725 31
	1-way push-button with bell symbol	5 720 56	5 725 56
	2-way push-button with locator Equipped with blue LED	5 720 32	5 725 32
	2-way push-button with label-holder	5 720 33	5 725 33
<b>DIMMERS 100/240 V~ - 50/60 Hz</b>			
	Leading edge dimmer Without neutral - 400 W	5 722 13	5 727 13
	Rotary dimmer		
	Universal dimmer With neutral - 300 W	5 740 08	5 740 58
	Push-button dimmer		

Mechanisms supplied with white or magnesium square rocker plate, to be equipped with support frames and plates (p. 382)		White	Magnesium
<b>DOUBLE POLE SWITCHES 250 V~</b>			
	DP switch 40 A	5 720 81	5 725 81
	DP switch 40 A + neon	5 720 82	5 725 82
	DP switch 45 A + neon 2 gang	5 720 80	5 725 80
	DP switch 45 A + neon 1 gang	5 720 87	5 725 87
	45 A DP switch	5 720 88	-
<b>COOKER CONTROL UNIT</b>			
<b>LIGHTING CONTROL</b>			
	Time delay switches	5 720 55	5 740 84
	Single pole latching relay	5 722 27	5 727 27
<b>EMERGENCY STOP MUSHROOM HEAD PUSH-BUTTONS</b>			
	Emergency stop mushroom head with key	5 723 63	-
	Emergency stop mushroom head 1/4 turn	5 723 62	-

Mechanisms supplied with white or magnesium square rocker plate, to be equipped with support frames and plates (p. 382)		White	Magnesium
<b>VISUAL INDICATION</b>			
	Miniature emergency lighting unit	5 722 22	-
	Illuminated lighting unit	5 724 52	-
	Overdoor lighting unit - red diffuser - white diffuser	5 724 53 5 722 23	- -
<b>VENTILATION AND HEATING CONTROLLER</b>			
	Fan controller - AC speed control 4 positions	5 722 17	5 727 17
	Rotary speed controller for fan 40 to 400 VA	5 722 18	5 727 18
	Fan step regulator - 100 W	5 722 15	5 727 15
	Electronic room thermostat	5 722 03	5 727 03
	Thermostat for electronic floor heating	5 722 63	5 727 63
<b>ROLLER BLINDS CONTROL</b>			
	Double push-button - 10 A	5 722 19	5 727 19
	Double switch - 10 A	5 722 20	5 727 20