

GAMESIR G3w

WIRED CONTROLLER

We hope this manual answered any questions you may have had,
If you have any further questions, please contact us:

 GameSir Facebook: <https://www.facebook.com/myGamesir>

 
 Customer Service: cs@gamesir.hk

 For More Support: <http://www.gamesir.hk>

Model No: GameSir-G3w



1.Plug and play :

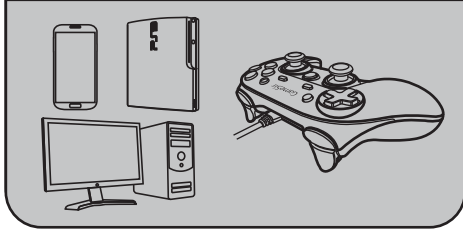

2.Download G3w supported games :

 
 


 
Happy Chick



GameSir World

3.Play anywhere, anytime! :

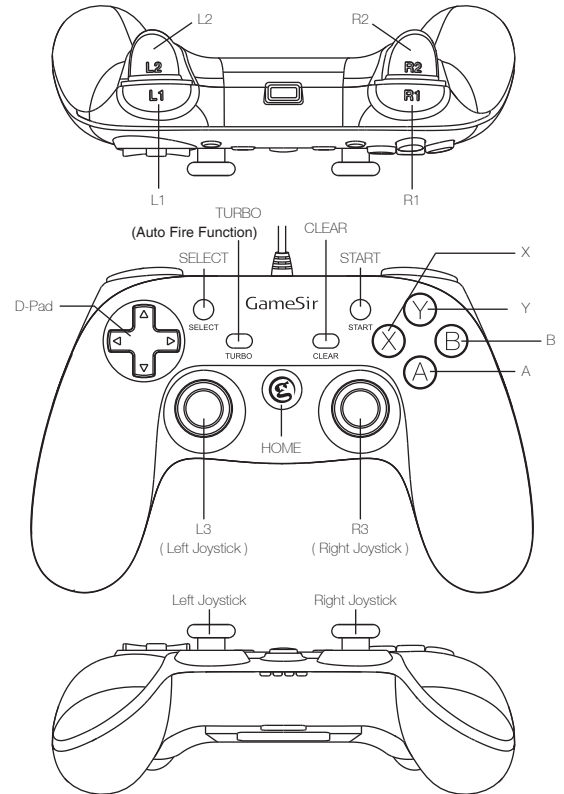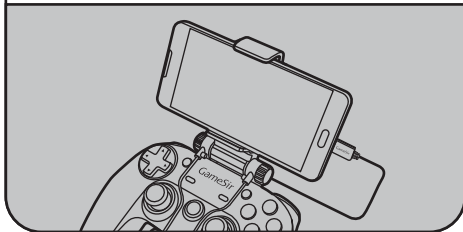

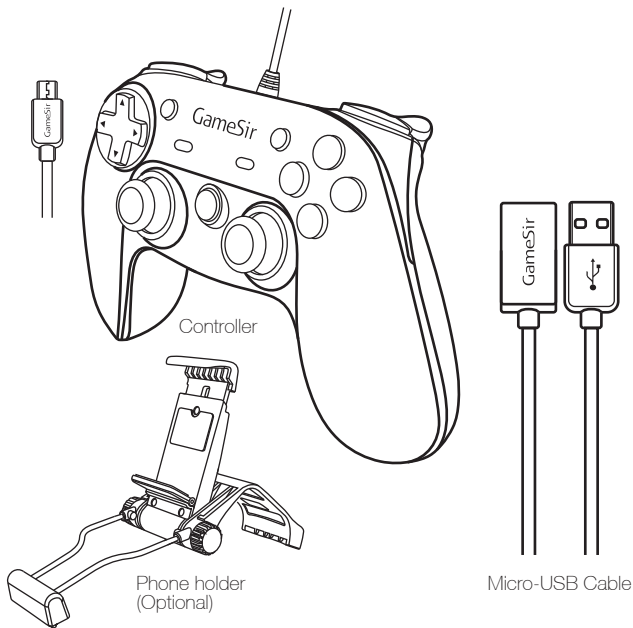

System Requirement : Requires Android 4.0 or later , Windows 7 or later.

Hardware Requirement : Android Smartphone / Android Tablet / NVIDIA Tablet / Android TV box
Windows PC / PlayStation 3

Connections :  Wired



GameSir.hk - Support



[Facebook - Mygamesir](#)



[GameSir.hk-Where to buy](#)



[GameSir.hk-Product-Manual](#)

Warning

 
- 1.Avoid strong vibration, do not disassemble, refit or repair on your own.
- 2.Do not keep in humid, high temperature or soot place.
- 3.Avoid water or other liquid in gamepad, it may affect the performance of the gamepad.
- 4.Keeping away from fire, the built-in battery has danger of explosion.
- 5.Charging voltage is USB 3.7-5.5V DC supply (normal Android smart phone charging power can be used)
- 6.Children should be under adult's supervision to use this product.

THE BATTERY POWER OF G3w

Being different with GameSir other model, G3w has no battery , it gets power from devices. There is no need to check the power of the G3w, just plug and play.

THE EXTENSION CORD OF G3w

G3w comes with integrated Micro cord for Smartphone connection, and there is another extension USB cord included for Windows PC connection.

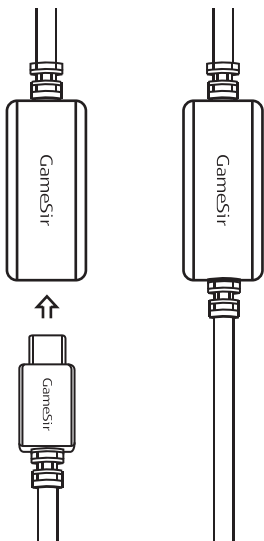

G3w HIGHLIGHT FEATURES

 
Turn on/off LED lights

When your G3w is connected successfully to any of your devices, hold down "L1+R1" simultaneously for 5 seconds to turn off all the LED lights. Press "L1+R1" simultaneously to turn on all the LED lights.

Auto fire function

TURBO is semi-automatic, it creates one or more continuous button press.


The Android Tablet/ phone can be connected to your G3w via integrated Micro cable of your G3w, Plug one end of the cable in your G3w and plug the other end into the Micro port of the Android Devices.

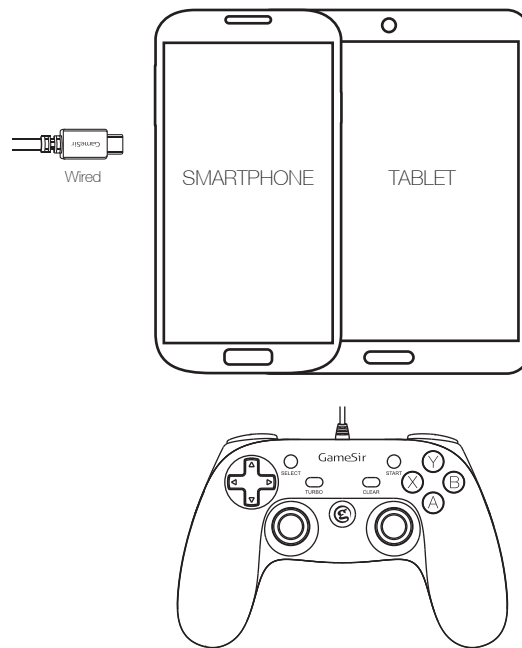

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu. If you do not know if the game is controller compatible, go to www.gamesir.hk and find "GameSir World" column.

CONNECTING ON ANDROID TV BOX

 You can connect your G3w on Android TV BOX via extension USB cable as follows:

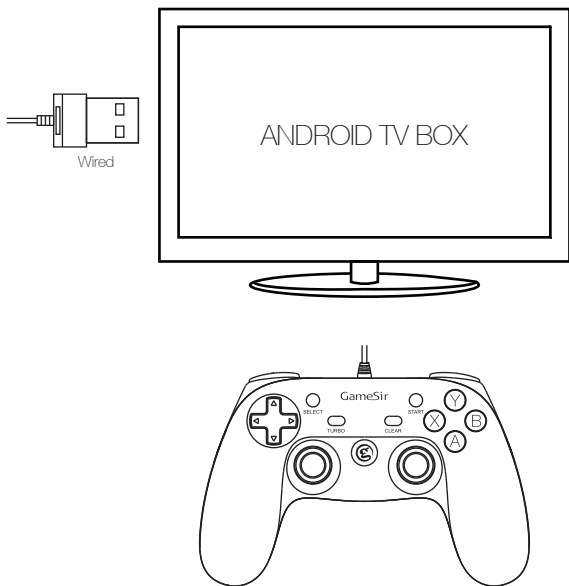


The interface of the extension USB cable holds the connection in place which makes it very easy for users to connect and disconnect, connect the USB cable to your GameSir G3w, plug one end of the cable into a USB port of the Android TV box.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu. If you do not know if the game is controller compatible, go to www.gamesir.hk and find "GameSir World" column.

CONNECTING ON WINDOWS PC

 
The Windows PC can be connected via USB cable.

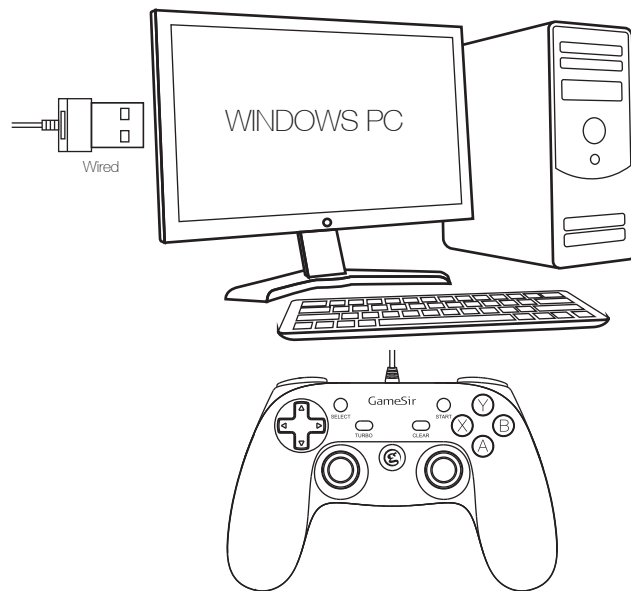


The interface of the extension USB cable holds the connection in place which makes it very easy for users to connect and disconnect, connect the USB cable to your GameSir G3w, plug one end of the cable into a USB port of the Windows PC.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu.

 
The PlayStation 3 can be connected via USB cable.



Wired

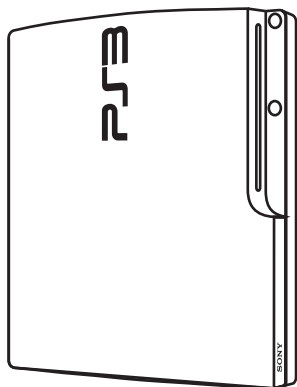 

 The interface of the extension USB cable holds the connection in place which makes it very easy for users to connect and disconnect, connect the USB cable to your GameSir G3w, plug one end of the cable into a USB port of the PlayStation 3.

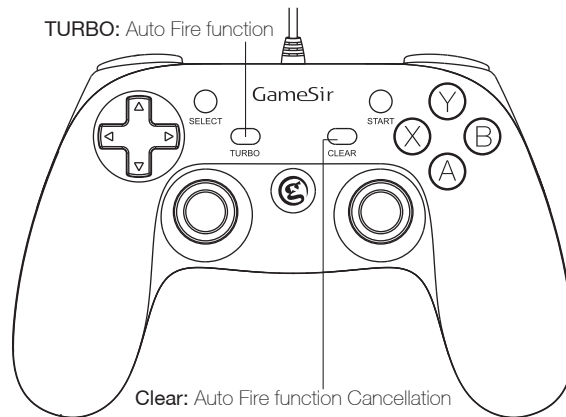

TURBO is used more in shooting games. Your fingers would easily get tired if you continuously press the same button (shooting button). With the TURBO, you can continuously shoot by holding the shooting button.

Setting Method

Press one or more buttons, (excluding D-pad, joysticks, SELECT, START button), and then press the "TURBO" button, to set TURBO function.

Clear TURBO

Press one or more buttons, and then click the "CLEAR" button to clear the TURBO.

"GameSir World" is the best app for your G3w and it's free! "GameSir World" catalogues thousands of Android games from Google Play market which natively supports GameSir Gamepads. Every Android gamer can discover their favorite mobile game easily now. The perfect combination of GameSir hardware and GameSir software brings the ultimate gaming experience to every user. Compare to the retro gaming app "Happy Chick Emulator", it put emphasis on popular smartphone games for gamer's wide choice.



Scan the QR code to download

On Android Tablet, Smartphone, and Android TV, you can download "Happy Chick" to play thousands of free retro games. Go to <http://www.happychick.hk> to download "Happy Chick Emulator" on the homepage. You can also scan the QR code below to download the App on Android Tablet, Smartphone.



Download "Happy chick" and follow the instructions on the screen, open the emulator to download your games and play via your G3w.



Connect game controller to Happy Chick emulator to play games freely .

- Download "Happy Chick" from user manual or <http://www.happychick.hk> in your Smartphone.
- Open the Bluetooth in your Smartphone .
- Open "Happy Chick" emulator and click the controller icon on the right top
- Wait until two signals appear "Speed connection" and "Common connection". Choose * Speed connection".
- The game controller will get a vibration when it is connected .
- Downloading the free games from "Happy Chick Emulator", G3w can match all the games perfectly.

Q: What devices can GameSir G3w work with?

A: Android Smartphone / Android Tablet / NVIDIA Tablet / Android TV box / Windows PC / PlayStation 3

Q: What is the system Compatibility requirements for G3w?

A: Android 4.0 or later or Windows 7.0 or later.

Q: What is the connections of GameSir G3w?

A: Wired.

Q: What games will work with the GameSir G3w controller on my device?

A: For Windows PC and PlayStation 3, G3w supports most of gamepad enabled games.

For Android Smartphone and Tablet, you can find a list of compatible games using the following links:
<http://www.gamesir.hk/> ---GameSir World.

Q: Why the gamepad does not vibrate?

A: Check out whether the game support vibration, if the game support vibration, please check whether the vibration function is started in the game settings.

Q:What should I do when the gamepad can not be turned on or frozen?

A:When the gamepad can not be turned on or frozen, press the "Home" button to check the remaining power, if the gamepad is not out of battery, you can make the factory reset settings for the gamepad : There is a small reset hole at the back of the gamepad, pressing the reset hole using a needle for 1 second to reset the gamepad. Then turn on your gamepad again.

Q: Does the gamepad support my games?

A: If you do not know if the game is controller compatible, go to www.happychick.hk to download "Happy Chick" app to find thousands of free games, or go to www.gamesir.hk and find "GameSir World" column. The game list in "GameSir World" is updated frequently, and your game is controller compatible if it is included in the game list.

FCC CAUTION STATEMENT

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(2) § 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(3) § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.