

# Bluetooth controller

## Operating Manual

 
### I. Product Introduction

Bluetooth controller T1d, support Bluetooth 4.0 wireless connection. It is suitable for Android devices (version 4.3 or above) and Apple devices (system version iOS8.0 or above). This product fully intelligent and automatically identifies various models of equipment, no need to manually set Android or iOS mode, connect and play.

### II. Product Parameters

Name of the product	Bluetooth controller T1d
Model of product	T1d
Supporting platform	Android, iOS
Bluetooth	Bluetooth 4.0
Battery type	600mAh, polymer lithium battery
Input	5V-1A
Packaging size	185*180*80mm
Product size	162*101*67mm

### III. Concept of Controller

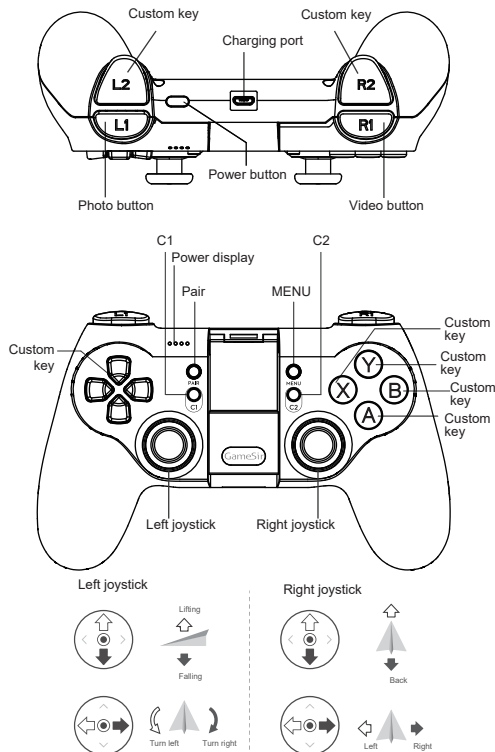

Note: The factory default setting of the controller is the "America hand". The left joystick control the height and the direction, the right joystick control the forward, backward, and left direction of the flight.

### IV. Function Description

#### 1. Turn on and connect the controller

- 1) Short press the button to turn on, if it starts successfully, the ABXY button of the controller will be always on.
- 2) Power display LED flickers slowly; Enter the Bluetooth mode directly to wait for the APP connection;
- 3) Enter the flight control APP to connect the controller;
- 4) After connecting, the power display LED is always on and show the quantity of electricity.
- 5) If the controller has been connected to other phones, press the "Pair" button of the controller to force the controller to enter the state of waiting match.

#### 2. Turn-off

- 1) Long press the power button for 3-5 seconds, shut down the controller, turn off all the LED lights;

#### 3. Automatic turn-off

- 1) The controller is in connecting state, if it is idle for more than 5 minutes, the controller will turn off automatically.
- 2) The controller is in disconnecting state (waiting for connection), if no connection for 2 minutes, the controller will turn off automatically.

#### 4. Check the power

After the controller connected successfully, the LED lamp will show current power information.

The LED lamp group shows the proportion: Fully bright is about 75% to 100%; 3 lights are about 50% to 75%; 2 lights are about 25% to 50%; 1 light is about 1% to 25%

#### 5. Low battery alarm

1. When the available power is lower than the low power alarm voltage, the LED light group lasts double flash;
2. When the available power is lower than the battery protection voltage, the controller will turn off automatically.

#### 6. Battery charging

- 1) LED lights 1-4 flicker slowly during charging;
- 2) When the charge is over (full), the LED light group is always on; Disconnect the charging cable after charging.

#### 7. Reset

Press the pinhole on the back of the controller quickly with the paperclip, to force the entire controller to power off once, and reboot.

#### 8. Firmware upgrading(OTA)

Connect the controller through the mobile phone APP Bluetooth, to process OTA upgrade. Support Android 4.3 +, iOS8.0 + system; App download address: [www.gamesirhk/t1d](http://www.gamesirhk/t1d)

- 1) After entering the upgrade mode, the LED keeps on Lantern Dance, and waits for the upgrade.
- 2) After the upgrade is completed, turn off the machine and restart it automatically.

### ✘Troubleshoot

1. When you can't start the machine, Maybe the built-in battery is out of power. Please recharge the controller with the USB line and start up again.
2. If the controller crashed or dropped please don't keep it far away from the device, or reconnect.
3. Factory setting (reset): There is a small hole on the back of the controller, press it down with a toothpick or other hard bar object, press RESET key to restore the factory setting.

### ✘Product notes

1. Avoid strong vibration, don't disassemble, refit, repair by yourself.
2. Avoid storing in humid, high temperature, fumes and other places
3. Avoid the water or other liquids entering the inside of the controller, it may affect the controller function.
4. There are batteries inside, do not drop the controller into the fire, there is a danger of explosion.
5. The charging voltage of this product is USB 3.7-5.5V DC power supply (ordinary Android mobile phone charging power can be used directly), otherwise it may not be able to charge or cause damage.
6. Children need to use this product in the custody of an adult.
7. If there is a quality problem or suggestion, please contact the seller or after sales personnel, and see the contact information on the outer packing.

 
## ⚡ IMPORTANT SAFETY INSTRUCTIONS

### For all products:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install this apparatus in accordance with the manufacturer's instructions.
8. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. Do not expose this apparatus to dripping or splashing, and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To disconnect this apparatus from the AC mains completely, disconnect the power-supply cord plug from the AC receptacle.



17. The mains plug of the power-supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.

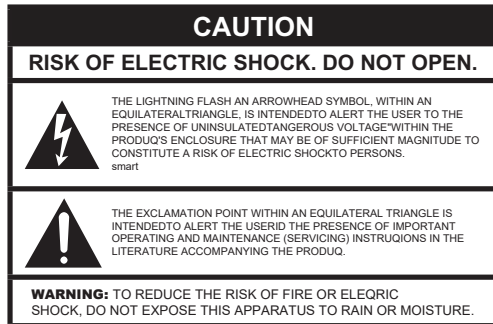

### CAUTION FCC AND IC STATEMENT FOR USERS (USA AND CANADA ONLY)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## For Products That Transmit RF Energy:

### IC INFORMATION FOR USERS

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) Ce dispositif ne peut causer d'interférences ; et (2) Ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

There are no restrictions in use in EU

### WARNING

**DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD** [The remote control supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## For All Products Except Those with Wireless Operation:

GuangZhou Chicken Run Network Technology Co., Ltd. hereby declares that this equipment is in compliance with the EMC 2014/30/EU Directive, LVD 2014/35/EU Directive, ErP 2012/27/EU Directive and RoHS 2011/65/EU Directive. The declaration of conformity may be consulted in the support section of our Web site, accessible from [www.gamesir.hk](http://www.gamesir.hk)

## For All Products with Wireless Operation:

GuangZhou Chicken Run Network Technology Co., Ltd. hereby declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU, ErP 2012/27/EU Directive and RoHS 2011/65/EU Directive. The declaration of conformity may be consulted in the support section of our Web site, accessible from [www.gamesir.hk](http://www.gamesir.hk)



### FCC&IC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3(B) / NMB-3(B)

# Bluetoothコントローラ

## 取扱説明書

 
### 一. 製品概要

BluetoothコントローラT1dは、Bluetooth4.0ワイヤレス接続方式に対応し、Android設備(システムバージョン4.3以上)、iOS設備(システムバージョンIOS8.0以上)に適用します。本製品は自動的に各種の設備を識別し、手動でAndroidまたはIOSを設定する必要がなく、接続すると使用できます。

### 二. 製品仕様

製品名	BluetoothコントローラT1d
品番	T1d
対応システム	Android、iOS
Bluetooth	Bluetooth 4.0
電池種類	リチウムポリマー電池600mAh
入力	5V-1A
包装寸法	185*180*80mm
製品寸法	162*101*67mm

### 三. コントローラー概要

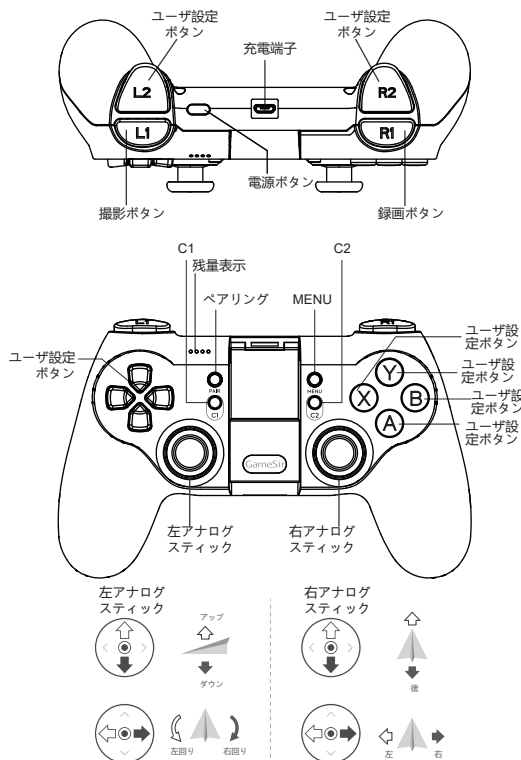

ご注意: コントローラーの出荷時設定コントロール方法は「アメリカハンド」です。左アナログスティックが飛行高度と方向を制御し、右アナログスティックがドローンの前進・後退および左右に飛行する方向を制御します。

### 四. 機能説明

#### 1. 起動およびコントローラー接続

- 1) 電源ボタンを押すと起動します。起動後にコントローラーのABXYボタンのカラーLEDが点灯します。
- 2) 残量表示LEDが点滅します。直接にBluetoothモードに入れてAPPの接続を待ちます。
- 3) 飛行APPに入れてコントローラーに接続します。
- 4) 接続完了後、残量表示LEDが点灯して残量を表示します。
- 5) コントローラーがその他のスマホに接続された場合、コントローラーの「Pair」ペアリングボタンを押し、コントローラーがペアリング待ちの状態になります。

#### 2. シャットダウン

- 1) 電源ボタンを3-5秒長押しするとコントローラーがシャットダウンし、すべてのLEDが消灯します。

#### 3. 自動シャットダウン

- 1) コントローラーが接続済みの状態で5分以上操作されないと自動にシャットダウンします。
- 2) コントローラーが接続なしの状態(接続待ち)で2分以上接続されないと自動にシャットダウンします。

#### 4. 残量確認

コントローラーが正常に接続された後、LEDが現在の残量情報を表示します。  
LED表示比例: 全部点灯=約75%~100%、3灯点灯=50%~75%、2灯点灯=25%~50%、1灯点灯=1~25%。

#### 5. 残量不足警告

1. 残量が警告低電圧を下回る場合、LEDが点滅します。
2. 残量が電池の保護電圧を下回る場合、コントローラーが自動にシャットダウンします。

#### 6. 充電

- 1) 充電時にLED1-4が順次に点滅します。
- 2) 充電完了(残量100%)時にLED1-4が点灯します。充電完了後に充電線ケーブルを抜いてください。

#### 7. リセット (Reset)

ゼムピンをコントローラーの裏面の穴に差し込み、コントローラーがオフになり、その後再起動します。

#### 8. ファームウェアアップグレード (OTA)

スマホAPPによってBluetoothでコントローラーに接続し、OTAアップグレードを行います。Android 4.3+, iOS 8.0+以上のシステムに対応します。APPのダウンロードリンク: [www.gamesir.hk/t1d](http://www.gamesir.hk/t1d)

- 1) アップグレードモードに入れる後にLEDが順次に点滅し、アップグレードを待ちます。
- 2) アップグレード完了後、シャットダウンして自動に再起動します。

### ※トラブルシューティング

1. 起動できない場合、電池の残量が0%になった可能性があるため、USBケーブルでコントローラーを充電して再起動してください。
2. コントローラーのフリーズまたは接続切断が発生した場合、適切な距離を保持すると再接続してください。
3. 出荷時設定リセット: 爪楊枝またはその他の棒状物をコントローラーの裏面の穴に差し込み、RESETボタンを押すと出荷時設定に戻すことができます。

### ※注意事項

1. 強い振動を避け、自分で分解・改装・修理しないでください。
2. 湿気・油煙のある場所または高温の場所に保存しないでください。
3. 水またはその他の液体がコントローラーの内部に入れるのを避けてください。コントローラーの機能に影響するおそれがあります。
4. 電池を内蔵するので、コントローラーを火中に入れてください。爆発のおそれがあります。
5. 本製品の充電電圧がUSB 3.7-5.5Vの直流電源(普通のAndroidスマホの充電電源を直接使用できる)で、できれば充電できないか本製品を損傷する可能性があります。
6. 子供は大人の監督保護下で本製品を使用してください。
7. 品質上の問題または提案がある場合に販売元またはアフターサービス担当者に連絡してください。連絡先は包装を参照してください。

小鴨快跑著作権所有バージョン: 2018v1.0