



THREAD
Einschrauben
Enroscar
Visser



RAISE
Anheben
Levantar
Relever



POSITION
Position
Posicionar
Positionner



ADJUST
Einstellen
Ajustar
Régler



TORQUE
Anziehmoment
Apretar
Serrer

HEX 4mm