MiGlo












P O P #OHITSNATURAL @OhItsNatural

WHAT'S INCLUDED

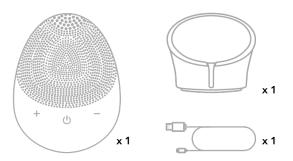


MiGlo FACE CLEANSING BRUSH

With gentle sonic cleansing technology and over 1600 silicone massaging touchpoints, MiGlo removes unwanted dirt, oil, makeup, and bacteria with only one use.

Made with food-grade silicone and five variable speeds, your skin will be thoroughly cleansed and your beauty products will absorb more effectively leaving you with clean, healthy, glowing skin!

FUNCTIONS

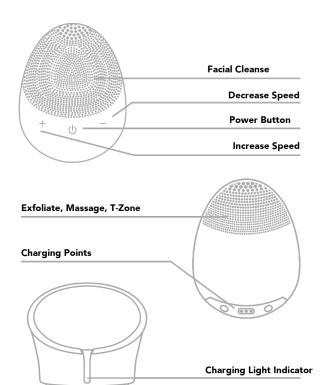



FEATURES

Sonic Vibration Technology / 5 variable massage settings, Miglo gently cleanses, exfoliates, massages, unclogs pores, and removes leftover makeup residue for clear, healthier-looking skin.

Super-Soft Silicone / With 1608 touchpoints, The Miglo is made with food-grade silicone that's BPA and phthalate-free, making it 30 times more hygienic than regular nylon bristles.

Cordless and Rechargeable / Includes a smart-touch charging base, MiGlo is cordless, portable and can last up to 100 uses or 60 days from a single charge. No replacement heads or batteries required.

100% Waterproof / IPX6 Water-Resistant, Miglo is ideal for use in wet areas like the shower or bath.

Can be easily cleaned with soap and water after use.



LET'S BEGIN

CHARGING

- 1/Attach the USB cord to the back of the charging base. Plug the USB cord into a power source such as a computer, or USB DC-5V adapter.
- 2 / Place MiGlo into the charging base so the metal contacts on the bottom touch each other.

- 3/The base will light up and begin to blink while charging. When the blinking stops, Miglo is fully charged.
- **4**/The battery takes approximately 2 hours to be fully charge **Important:** Store the charging base in a dry, ventilated place away from water.

USING MIGLO

- 1 / Ensure MiGlo is fully charged (see Charging Section).
- 2 / Remove all makeup first. Wet your face and Miglo with lukewarm water
- **3** / Apply cleanser directly to your face or to MiGlo.
- **4 /** Turn MiGlo on by pressing the power button on the front. It will automatically start on the medium speed setting. There are two faster and two slower speeds you can select as needed. Use the (+) and (-) buttons to adjust speed.
- ⁵ / In circular motions, use MiGlo to gently remove dirt, excess oil or leftover makeup residue.
- **6** / The larger nodules located on the back are designed for Exfoliating, Massaging or a deeper clean.
- 7 / Once you have finished cleansing, rinse and dry your face, and continue with the rest of your skincare routine.
 Important: Ensure MiGlo is dry before storing in the cradle or a drawer.

WARNINGS

- 1 / If you have a skin condition or any medical concerns, please consult with a physician or dermatologist before using MiGlo.
- 2/ Supervision is required when MiGlo is used by, on, or near young children, as well as those with reduced mental and physical abilities.
- 3 / Do not use this device in close proximity to eyes, eyelids, and other areas of exposed skin.
- 4 / Never submerge the device in water.
- 5 / Rinse and dry after each use.
- 6/ Use this device only for its intended purpose.
- 7/ Store the charging base in a dry, well-ventilated area away from water.
- 8 / For hygiene reasons, we do not recommend sharing your MiGlo with anyone.

(3)

BATTERY DISPOSAL

Note: Opening and dissembling the device will void the warranty. The process is not reversible.

This action must only be done when the device is ready to be disposed of permanently.

All batteries should be recycled or disposed of as per local guidelines, and should not be thrown away in household trash. To remove the battery, cut open the silicone plastic shell and carefully remove the lithium battery. Wear gloves during this process for your safety. Do not dispose of in a fire as the battery can explode and cause injury.



HERE TO HELP

We pride ourselves on providing premium-quality products, This device is backed by a 12-month warranty. If you have any questions or need further assistance, you can send us an email, at info@ohitsnatural.com.