



WIRELESS BLUETOOTH BOOKSHELF SPEAKERS

MODEL: ITSB-421 (MAIN & VICE)




QUICK START GUIDE

- 1. Make sure to remove ALL items before discarding package. This includes:
 - Speakers (2)

Power Adapers (2)

• 3.5mm AUX-IN Cable

- Instruction Manual
- 2. Very Important: The Speakers MUST be allowed to automatically pair together BEFORE being synced to a Bluetooth enabled device.

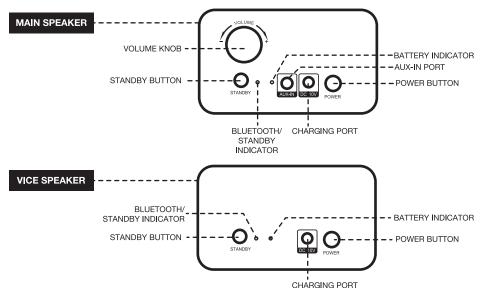

3. Turning the unit ON:

- 1. Press the **POWER** button on the <u>main speaker</u>, and then press & hold the **STANDBY** button to wake up the unit, the Bluetooth/Standby indicator will flash blue.
- 2. Press the **POWER** button on the <u>vice speaker</u>, and then press & hold the **STANDBY** button to wake up the unit, the Bluetooth/Standby indicator will flash blue.
- 3. The speakers will automatically pair together.

NOTE: Please allow 5-10 seconds for the speakers to pair.

- 4. After 5-10 seconds, an audible tone will play on both speakers indicating that they are synced. (The Bluetooth/Standy indicator will remain lit).
- 4. Connecting your smartphone, tablet or other audio device via Bluetooth.
 - Press the STANDBY button on the main speaker to pair with your external device.
 The Bluetooth/Standby indicator will flash blue, indicating the speakers are searching for a device (this is required for first time pairing of any external bluetooth device).
 - 2. Activate the Bluetooth function on your external device.
 - Select "ITSB-421" on your device to begin pairing. You will hear an audible beep, signifying your device is paired and the Bluetooth/Standby indicator will remain lit.
 - 4. Begin playing music from your device.

CONTENTS Safety Instructions 1 Buttons and Control 3 General Operation 4 Bluetooth Operation 4 AUX-IN Operation 4 Battery Charging 5 Troubleshooting 5 Important Information 6 Warranty 7

PRODUCT SPECIFICATIONS

Bluetooth range: 33' (10m)

Battery Capacity: 8800mAh Li-ion (65.12Wh) Total

Charging Input: DC 10V, 1.8A Charging Time: 5-6 hours

Play Time: Full Volume: 12 hours, 50% Volume: 28 hours

Max Power Consumption: 18W

Power Output: 7W (with internal battery)

12W (with power adaptor/charging)

Product Size: $125 \times 165 \times 195 \text{mm} / 4.9 \times 6.5 \times 7.7 \text{ in}$ Included: Speakers (2), Power Adaptor (2),

3.5mm AUX-IN Cable, User Manual

As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries, iPhone is not included.

Made in China.

SAFETY INSTRUCTIONS



The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Before using the unit, be sure to read all operating instructions carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1. Read these instructions All safety and operating instructions should be read before the product is operated.
- 2. Keep these instructions The safety and operating instructions should be retained for future reference.
- 3. Heed all warnings All warnings on the product and in the operating instruction manual should be adhered to.
- 4. Follow these instructions All operating and use instructions should be followed.
- 5. Do not use this apparatus near water. Do not use the product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
- The product must not be exposed to dripping of splashing, and no object filled with liquid should be placed on top of the product.
- Clean only with slightly moist, lint-free cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
- 8. Do not block any ventilation openings. Install in accordance with the manufacture's instructions. Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 12. Only use attachments/accessories specified by the manufacturer.
- 13. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 14. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.
- 16. Power source The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 17. Power lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 18. Overloading Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock,
- 19. Object and liquid entry Never push objects of any kind into the product as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product
- 20. Service Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified servicing personnel.

- 21. Replacement parts When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.
- 22. Safety check Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 23. Damage requiring service Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A: when the power-supply cord or plug is damaged.
 - B: if liquid has been spilled or objects have fallen into the product.
 - C: if the product has been exposed to rain or water.
 - D: if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - E: if the product has been dropped or the cabinet damaged in any way.
 - F: when the product exhibits a distinct change in performance this indicates a need for service.
 - G: A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

- 24. The marking information is located at the bottom of the apparatus.
- 25. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warning:

Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

Caution:


Use of control and adjustments or performance of procedures other than those specified here may result in hazardous radiation exposure. If this product develops trouble, contact qualified service centers, and do not use the product in a defective state.


Usage:

- Before use, choose unit installation location carefully. Avoid placing in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
- 2. Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact your dealer.
- 3. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
- 4. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- 5. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as while on vacation.
- 6. Keep this manual in a safe place for future reference.

BUTTONS AND CONTROLS

- 1 Volume Knob
- 2. Standby Button
- 3. Bluetooth/Standby Indicator
- 4. Battery Indicator
- 5. AUX-IN Port
- 6. Charging Port
- 7. Power Button

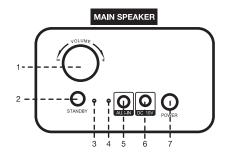

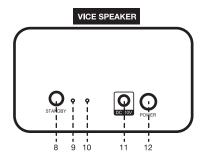

- 8. Standby Button
- 9. Bluetooth/Standby Indicator
- 10. Battery Indicator
- 11. Charging Port
- 12. Power Button

Model: ITSB-421 (MAIN & VICE)

LED INDICATOR OPERATION

LED Indicator	Color status	Description
Bluetooth/Standby Indicator	Blinks blue	Speaker is in pairing mode.
	Solid blue	Speaker is paired.
	Solid red	Speaker is in standby mode.
Battery Indicator	Red	Speaker is charging.
	No color	Speaker is fully charged.

GENERAL OPERATION

Overview:

- Before first use, it is recommended to charge the Speakers via the supplied Power Adaptors (see Battery Charging on page 5). Each Speaker will take approximately 5-6 hours to charge from 0-100%.
- 2. Very Important: The Speakers MUST be allowed to automatically pair together BEFORE being synced to a Bluetooth enabled device.

Turning the unit ON:

- Press the POWER button of the <u>main speaker</u>, and then press and hold the STANDBY button to wake up the unit, the Bluetooth/Standby indicator will flash blue.
- 2. Press the **POWER** button of the <u>vice speaker</u>, and then press and hold the **STANDBY** button to wake up the unit, the Bluetooth/Standby indicator will flash blue.
- 3. Next, the Speakers will automatically pair together.
 - **NOTE:** Please allow 5-10 seconds for the speakers to pair.
- 4. After 5-10 seconds, an audible tone will play on both speakers indicating that they are synced. (The Bluetooth/Standy indicator will remain lit).

Adjusting the volume:

Rotate the **VOLUME KNOB** or adjust the volume on your Bluetooth device to a comfortable level. Listening to music at a high volume level may destroy hearing. Avoid listening at a high volume level for an extended period of time.

BLUETOOTH OPERATION

Connecting an External Device via Bluetooth:

- 1. Press the **STANDBY** button on the main speaker to pair with your external device. The Bluetooth/Standby indicator will flash blue, indicating the speakers are searching for a device (this is required for first time pairing of any external bluetooth device).
- 2. Activate the Bluetooth function on your external device.
- Select "ITSB-421" on your device to begin pairing. You will hear an audible beep, signifying your device is paired and the Bluetooth/Standby indicator will remain lit.
- 4. Begin playing music from your device.

NOTE:

- -Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of your device.
- -Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- -Keep this unit away from any other electronic device that may cause interference.
- -If your device asks for password or PIN number, please enter "0000".

AUX-IN OPERATION

- 1. Use the 3.5mm AUX-IN cable to connect the speaker with the audio device such as an MP3/MP4 player or tablet.
- 2. Your Audio device (MP3/MP4 player or tablet) controls the music playback.
- 3. Adjust the volume on your device or by rotating the **VOLUME KNOB**.

BATTERY CHARGING

Recharge the internal batteries by inserting the supplied Power Adaptors with 10V, 1.8A output into the charging ports. The Battery indicator will remain red while charging. The Battery indicator will turn off when the battery charging process is completed. Charging will take approximately 5-6 hours.

NOTE:

To initialize the battery, it is recommended to charge for longer than 6 hours but DO NOT exceed 24 hours. Battery life will vary depending on operation. Loud music with heavy bass will drain the battery faster than spoken work audio.

CAUTION:

The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose device in standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

TROUBLESHOOTING

If you're experiencing a problem with your apparatus, there are some quick and easy checks that you can do to help to solve problems.

The unit does not work.

Fully charge the speakers.

Make sure the speakers are powered on.

No sound from speakers.

Is the volume control set at minimum?

Turn up the volume of the connected device and speaker.

Bluetooth not connected.


Check if the bluetooth device is in search mode.

Disconnect the paired device and connect again.

If the device is out of the Bluetooth range (33 ft, 10m), please put the device within the Bluetooth range and manually make connection again if the devices are disconnected.

For any static disturbance:

If sound quality issues occur, such as distortion, or the overall sound is not clear, the speakers may be out of range. All Bluetooth devices MUST BE within a 33 foot range of each other. To resolve, move the Speakers and Bluetooth device closer so they are within the required range.

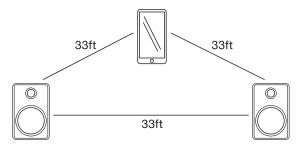

IMPORTANT INFORMATION

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

California Prop 65 Warning

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address: http://www.oehha.ca.gov/prop65.html

NOTE: This user manual has provided proper instructions to the users of the device, as well as usage restrictions, including the limits of exposure durations. The device is designed for reliable performance and the user manual states detailed installations, proper operations, as well as special usage conditions, which comply with SAR and RF eld strength limits. Users of this product should carefully study the user manual before using this device.

INDUSTRY CANADA

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivates: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectriue subi, même si le brouillae est suscetible d'en comromettre le fonctionnement.

WARRANTY

Innovative Technology Electronics LLC.
Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- USD \$5.00, for items \$10.00 to \$39.99 (Price Paid Per Unit)
- USD \$10.00, for items \$40.00 to \$99.99 (Price Paid Per Unit)
- USD \$16.00, for items \$100.00 and up (Price Paid Per Unit)
- · Shipping fees are non-refundable

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050 Toll free: 1-877-483-2497

Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.