

Glitter Lamp Bluetooth Speaker

Model: ITSBL-509



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE AND KEEP IT FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lighting flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1. Read these instructions All the safety and operating instructions should be read before the appliance is operated.
- 2. Keep these instructions The safety and operating instructions should be kept for future reference.
- 3. Heed all warnings- All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow all instructions All operation and use instructions should be followed.

- 5. Do not use this apparatus near water The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- 6. Clean only with dry cloth The appliance should be cleaned only as recommended by the manufacturer.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation, such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments / accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. An appliance and cart combination should be moved with care. Quick stop, excessive fore and uneven surfaces may cause the appliance and cart combination to overturn.



Portable Cart Warning

13. Unplug this apparatus during lightning storms or when unused for long periods of time. - To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. Power source This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.
- 16. Power lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 18. Object and liquid entry Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.
- 19. Service Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 20. Replacement parts When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.
- 21. Safety check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 22. Damage requiring service
 Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.
 - a) When the power-supply cord or plug is damaged.
 - b) If liquid has been spilled or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or the cabinet has been damaged.
 - f) When the product exhibits a distinct change in performance this indicates a need for service.

CARE AND OPERATION

The lamp is designed to operate in an average room temperature of 22-25°C (72-77°F), make sure the lamp is at room temperature before starting. Always operate the lamp on a firm, flat and stationary surface. Do not operate the lamp on any warm or hot surfaces.

Initial warm up of the lamp will take 10-30 minutes for the glitter to start flowing naturally.



CAUTION:

- The lamp should never be operated for more than 24 hours at a time. If operated for more than 24 hours, the base can get deformed from heat.
- Do not add any fluid or solids to your lamp. The air space at the top of the lamp has been provided to allow for expansion.
- Do not place near sources of heat or cold such as heat and air conditioning vents. Always operate the lamp only at room temperature. Operation or storage of lamp in direct sunlight will cause colors to fade.
- The lamp operates at a very high temperature and the vessel is made of glass.
- Operate out of the reach of the children and pets.

CAUTION:


- Do not operate the lamp wireless speaker with any other bulb except for the one provided by this manufacturer's customer service.
- Do not leave lamp unattended. Do not run the lamp while sleeping, as this is novelty item and it is not intended to be used as night light.
- Do not replace with unauthorized bulb in this lamp.
- The lamp and speaker base will be hot while in use and after the unit has been turned off/unplugged. Do not touch the lamp while it is on.
- Keep it out of the reach of the children and pets.
- While lamp is in operation, be sure not to move or shake it in order to avoid permanently damaging the lamp. Lamp should never be heated by any other means, nor should it be cooled artificially. Do not use when the glass is cracked or damaged.
- The space on the top of the lamp is provided for expansion. Do not break the seal of the cap to fill it with liquid or solid. Breaking the seal will void your warranty and ruin the product.
- If the external flexible cable or cord of the base is damaged, do not attempt
 to replace it yourself. It should be replaced by the manufacturer, service
 agent or a similar qualified person in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS / INSTRUCTIONS IMPORTANTES DE SÉCURITÉ

This portable luminaire has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

Ce luminaire portable a une prise polarisée (une lame est plus large que l'autre) comme une caractéristique pour réduire le risque d'électrocution. Cette prise s'adaptera à une sortie polarisée d'une manière unique. Si la fiche ne rentre pas complètement dans la prise, inversez la fiche. Si cela ne correspond pas toujours, contactez un électricien qualifié. Ne jamais utiliser avec une rallonge à moins que la fiche ne soit complètement insérée. Ne modifiez pas la fiche.

PRODUCT OVERVIEW

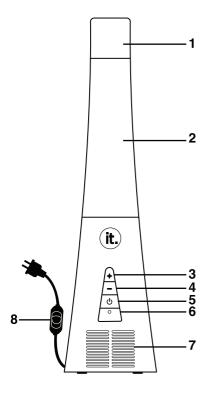

- 1 Vessel Cap
- 2 Glass Vessel
- 3 Volume Up/Next Track
- 4 Volume Down/Previous Track
- 5 On/Off, Play/Pause
- 6 Bluetooth Indicator
- **7** Speaker
- 8 Power Switch

NOTE: BE CAREFUL!

- THE GLASS VESSEL IS FRAGILE.
- THE GLASS VESSEL, AND SPEAKER BASE ARE BOTH VERY HOT WHEN IN USE AND SHORTLY AFTER USE.



- Do not replace with unauthorized bulb in this lamp speaker.
- The lamp and speaker base will be hot while in use and after the unit has been turned off/unplugged. Do not touch the lamp speaker or the bulb while it is on.
- Keep it out of the reach of the children and pets.
- Do not take the glass vessel out although it can be taken out from the speaker base!
- Do not put your fingers into the bulb cave, it is very hot, the temperature can reach up to above 100°C (212°F).
- Do not stare at the bulb cave, it may hurt your eyes.
- Unplug the speaker if you want to take out the glass vessel, and wait until the base, bulb cave and glass vessel cools down to room temperature.

BLUETOOTH OPERATION

- 1. Plug the power plug into the wall outlet with power supply of 120V~60Hz.
- 2. Switch the Power Switch on the AC Cord to "ON" position.
- 3. Press and hold the b button on the speaker for a couple of seconds to power on the unit and activate Bluetooth.

 NOTE: The Bluetooth indicator will illuminate and flash blue, to indicate the speaker is in pairing mode.
- 4. Turn on the Bluetooth on your external Bluetooth device and select the pairing name "ITSBL-509" from your device's Bluetooth settings.
- 5. The speaker will sound an audible tone and the Bluetooth indicator will stay lit after successful connection.
- 6. The speaker will automatically pair and connect with the last paired device if both the device and the speaker are activated and in range.

Functions:

- Press the **b** button to pause, press it again to play again.
- Press the + button to increase volume.
- Press the button to decrease volume.
- Press and hold the + button to skip to next track.
- Press and hold the button to skip to previous track.

WARNING!

DO NOT TOUCH the Lamp while in use, it is VERY hot. Before touching make sure the Lamp has cooled down to room temperature.

TROUBLESHOOTING GUIDE

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't Power On	Power switch is in "OFF" position.	Switch the power switch to "ON" position.
No Sound or Weak Sound	Volume level of the unit is too low.	Press + button to increase volume.
	Volume level of the paired device is too low.	Increase the volume of paired device.
Sound Distortion	Volume level of the unit is too high.	Press — button to decrease volume.
	Volume level of the paired device is too high.	Decrease the volume of paired device.
Bluetooth is not working	The external Bluetooth device is not paired to the unit.	Pair the external Bluetooth device to the unit.
	The external Bluetooth device is too far from the unit.	Bring the external Bluetooth device closer to the unit.
Lamp is not illuminated.	Bulb is loose.	Make sure lamp is cool, and screw the bulb in tighter.
	Bulb is burnt out.	Make sure lamp is cool, and replace the bulb with - R39 Reflector Spotlight E14 120V/20W Standard Bulb

For questions, please contact Customer Service at 1-877-483-2497.

SPECIFICATIONS

POWER SOURCE	AC 120V~60Hz
AUDIO OUTPUT	1X3W
BLUETOOTH RANGE	33ft (10m)
BULB LIFE	2000hrs
BULB FLUX	90 lm
BULB POWER	20W
BULB TYPE R39 Reflector Spotlight Contact Customer Service for replace	

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Made in China.

IMPORTANT INFORMATION

CALIFORNIA PROP 65 WARNING

WARNING: This product contains a chemical known to the State of California to cause cancer.

IC CAUTION

This device complies with Industry Canada license—exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

(2)This device must accept any interference received, including interference that may cause undesired operation. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY

Innovative Technology Electronics LLC. Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges,

connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)
- USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)
- · USD \$16.00, for items \$100.00 and up. (Price Paid Per Unit)
- Shipping fees are non-refundable

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050 Toll free: 1-877-483-2497

Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.
REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.