

VICTROLA™

Bluetooth® CD Stereo System

Model: ITCDS-5001



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER

Invisible and hazardous laser radiation when open and interlock failed or Defeated. Avoid direct exposure to beam.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD. This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc., or where it can be pulled on by children or tripped over accidentally.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

- English: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES-3(B)/NMB-3(B).

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. L'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

(1) Read these instructions

All the safety and operating instructions should be read before the appliance is operated.

(2) Keep these instructions

The safety and operating instructions should be kept for future reference.

(3) Heed all warnings

All warnings on the appliance and in the operating instructions should be adhered to.

(4) Follow all instructions

All operation and use instructions should be followed.

(5) Do not use this apparatus near water

The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

(6) Clean only with dry cloth

The appliance should be cleaned only as recommended by the manufacturer.

(7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation, such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

(8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

(9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

(10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

(11) Only use attachments / accessories specified by the manufacturer.

(12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

(13) Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

(14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

(15) Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

(16) Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

(17) Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

(18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

(19) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

(20) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

(21) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

 
(22) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or the cabinet has been damaged.
- f) When the product exhibits a distinct change in performance - this indicates a need for service.

PRODUCT OVERVIEW

FRONT VIEW

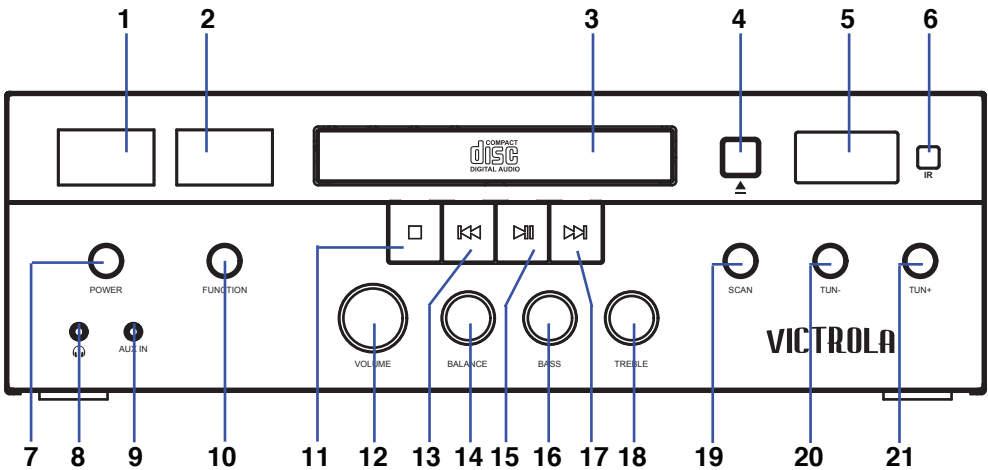

1 & 2. VU Meters

3. CD Drawer

4. Open/Close Button

5. Display

6. Remote Sensor

7. Power Button

8. Headphone Jack

9. Aux In Jack

10. Function Button

11. Stop Button

12. Volume Button

13. Previous Button

14. Balance Control Knob

15. Play/Pause Button

16. Bass Control Knob

17. Next Button

 
18. Treble Control Knob

19. Scan Button

20. Tune Down Button

21. Tune Up Button

REAR VIEW

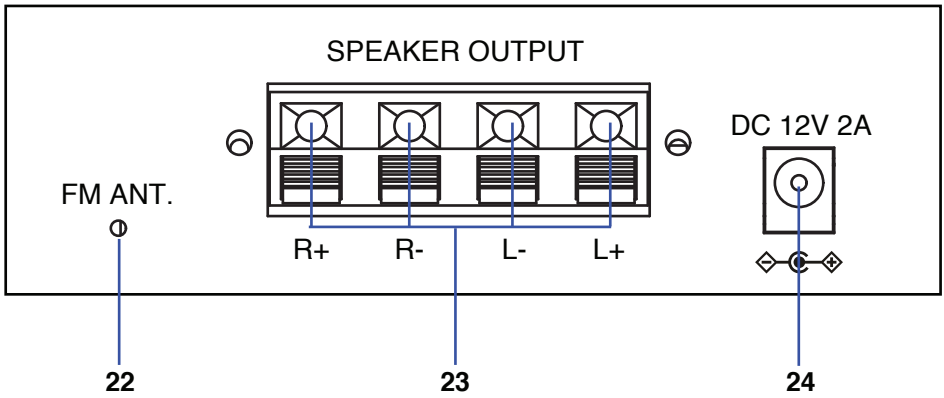


22. FM Antenna

23. Speaker Output Connectors

24. DC IN Jack

 EXTERNAL SPEAKER

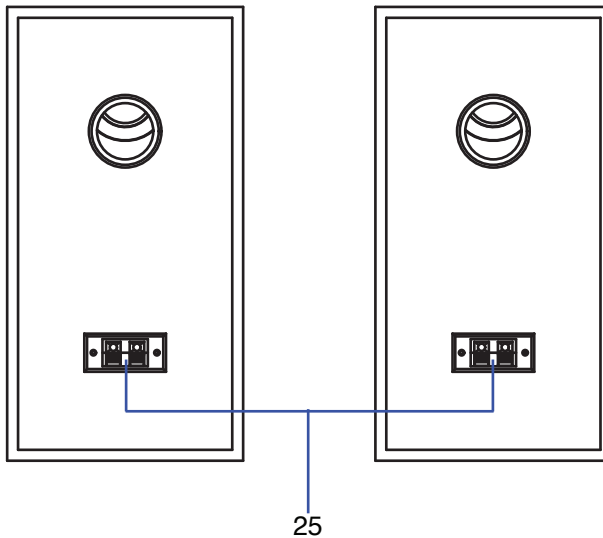

25. External Speaker Connectors

REMOTE CONTROL



- | | |
|-------------------------|-----------------------|
| 1. Power ON/OFF Button | 12. Scan Button |
| 2. Function Button | 13. Tune Down Button |
| 3. Random Play Button | 14. Open/Close Button |
| 4. Treble Up Button | 15. Repeat Button |
| 5. Right Balance Button | 16. Program Button |
| 6. Treble Down Button | 17. Bass Up Button |
| 7. Left Balance Button | 18. Bass Down Button |
| 8. Stop Button | 19. Volume Up Button |
| 9. Volume Down Button | 20. Next Button |
| 10. Play/Pause Button | 21. Tune Up Button |
| 11. Previous Button | |

 
 
 
 
REMOTE CONTROL BATTERY INSTALLATION

FIRST TIME USE

Remove and discard the insulation film as shown on Fig. 1.

BUTTON CELL REPLACEMENT


1. Push and slide out the battery holder as shown on Fig.2.
2. Replace the battery with a new CR2025 button cell as the polarity marking facing upward as shown on Fig.3.
3. Close the battery door as shown on Fig.4.

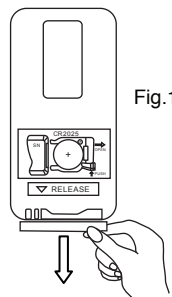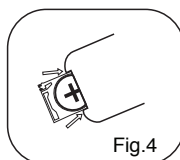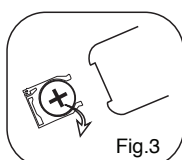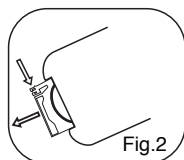

BATTERY PRECAUTIONS

Follow these precautions when using a battery in this device:

 1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reserved battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
5. Do not try to recharge the battery as it is not intended to be recharged; it can overheat and rupture. (Follow the battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine or fire.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. The remote control is supplied with a coin/button cell battery. If the coin button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the Battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed any part of the body, seek immediate medical attention.

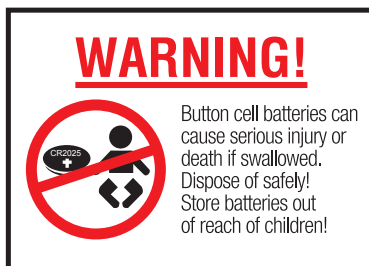


CAUTION

- Danger of explosion if the battery is incorrectly replaced.
 - Replace only with the same or equivalent type.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them into a fire.
 - Do not dispose batteries into standard garbage disposal sites. Dispose of at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.



Remote Control Operation Range

- When there is an obstacle between the transmitter and the unit, the unit may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the operation of the remote may be unstable.

GENERAL OPERATION

1. Connect the external speakers by connecting the respective R & L wires on the back of the unit.
Note: Make sure the cables are connected firmly. If there is no sound, please reconnect. Make sure the red cable is connected to the red connector, and the red-black cable is connected to the black connector.
2. Connect the adapter to the AC outlet and the DC IN jack at the rear of the unit.
3. Press the POWER button on the unit or the  button on the remote control to turn on the unit.
4. Press the FUNCTION button on the unit or the FUNC button on the remote control to switch to desired mode.

BALANCE, BASS, AND TREBLE ADJUSTMENT

 
- Rotate the VOLUME knob on the unit or press the  or  button on remote control to adjust the volume.
- Rotate the BALANCE knob on the unit or press the BALANCE + or - button on remote control to adjust set the balance.
- Rotate the BASS knob on the unit or press the BASS + or - button on remote control to adjust bass level.
- Rotate the TREBLE knob on the unit or press the TREBLE + or - button on remote control to adjust treble level.

HEADPHONE OPERATION

Plug your headphones (not included) into the headphone jack to listen and adjust the volume to proper level to avoid damaging to your ears.

VU METERS

VU Meters are used to measure power levels of audio frequency signals.

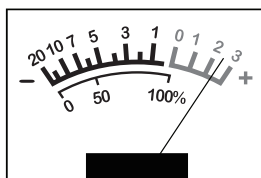

FM RADIO OPERATION

1. Press the FUNCTION button on the unit or the FUNC button on the remote control to switch to FM mode, the FM frequency will appear on the display.
2. Press and hold TUN- or TUN+ to search automatically until a station is found, and it will play automatically.
3. Press TUN- or TUN+ button to manually adjust the frequency.
4. Press the REPEAT button on the remote control to switch between stereo and mono.

Automatic Scanning and Programming

- Press and hold the SCAN button on the unit or remote control to scan and save the available stations automatically, it can save 20 stations in total.
- After scanning is finished, it will play the first programmed station.
- Press the ◀◀ or ▶▶ button to select and play the desired programmed station.

Manual Programming

- Press TUN- or TUN+ button to set and play the desired station
- Press the PROG button on remote control, "PXX" will appear on display, here "XX" stands for "01-20".
- Press the ◀◀ or ▶▶ button to select the desired storing location.
- Repeat the above steps to store more programmed stations.
- Press the PROG button on the remote control to confirm storing. *Note: The station that was stored before will be replaced.*


NOTE: For best reception, extend the antenna on the back of the unit.

CD OPERATION






1. Press the FUNCTION button on the unit or on the remote control to switch to CD mode. *If there is no disc in disc compartment, "diSC" will appear on display.*
2. Press the ▲ button to open the disc compartment, place a CD disc with label side facing up, then press the ▲ button again to close.
3. The unit will play the CD automatically within a few seconds.

Operation while playing:

- Press the ▶II button to pause, the track number will blink on the display, press the ▶II button again to resume.
- Press the ◀◀ or ▶▶ button to skip to the previous or next track.
- Press the ■ button to stop playing, press the ▶II button to play the first track.

- Press the REPEAT button on the remote control once to repeat one track, press it again to repeat all tracks, press it the third time to cancel repeat playing.
- Press the  button repeatedly to switch to random track and play randomly.

Programming:

- During playing, press the  button to stop.
- Press the PROG button on remote control, "P01" will appear on display for one second then "00" will blink on the display.
- Press the  or  button to select the track for P01.
- Press the PROG button on the remote control to confirm programming.
- Repeat the above steps to program up to 20 tracks.
- After programming, press the  button to play the programmed tracks.
- To cancel programming playing, press the  button twice.

AUX-IN OPERATION





An external device (e.g. smartphone, MP3 player, tablet, etc.) can be connected to this unit's speakers via AUX-IN.

1. Plug one end of the AUX-IN Cable into the AUX-IN jack on the unit.
2. Plug the other end of the AUX-IN Cable into the headphone jack or Aux Port on your external device.
3. Press the FUNCTION button on the unit or on the remote control to switch to AUX-IN mode, "AUX" will appear on the display.
4. Power on the connected external device and start playing the music as usual.

BLUETOOTH OPERATION

1. Press the FUNCTION button on the unit or on the remote control to switch to Bluetooth mode, "BLUE" will blink on the display.
2. Turn on Bluetooth on your external Bluetooth device and open your device's Bluetooth Setting Menu.
3. Select "ITCDS-5001" from the pairing list to connect to the unit.
4. Once your device is connected successfully, "BLUE" will stop blinking on the display.

 
While playing:

- Press the  button to pause, press the  button again to resume.
- Press the  or  button to skip to the previous or next track.


CARE AND MAINTENANCE

Caring for Discs

Treat the disc carefully. Handle the disc only by its edges.
Never allow your fingers to touch the shiny, unprinted side of the disc.

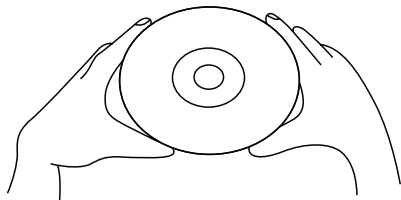

- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

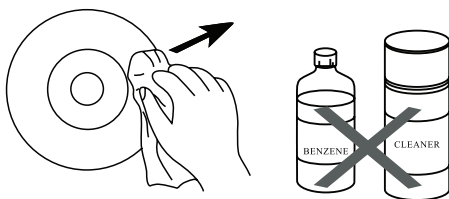 
 


- Discs should be stored in their cases after each use to avoid damage.
- Do not expose discs to direct sunlight, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power.	The adapter is not connected.	Connect the adapter to the unit to a wall outlet.
	The unit is off.	Press the  button to power on the unit.
No sound or weak sound.	Volume level is too low.	Raise the volume level by rotating the volume knob on the unit or press the  button on the Remote Control.
	Incorrect function mode is selected.	Press the FUNCTION button on the unit or press the FUNC button on the Remote Control to switch to the desired mode.
Remote Control is not working.	Remote Control is out of range.	Point the remote control to the remote sensor on the unit within 16 feet, +/- 30 degrees.
	Remote Control battery is dead.	Replace with new battery.
Radio has static.	Weak radio reception.	Extend the FM Antenna Wire to get better reception.
Disc not played.	Condensation has formed.	Unplug the unit and wait about two hours until the player is dry.
	Disc is not the correct format or the disc is corrupted.	Try a different disc.
	Disc is dirty or inserted incorrectly.	Clean disc and insert with label side up
Bluetooth is not working.	The external device is too far from the unit.	Move the external device within the Bluetooth Range of 33 ft (10 meters).
	The external device is not paired correctly.	Disconnect the bluetooth connection with the external device and reconnect.

SPECIFICATIONS

AMPLIFIER

Output Power 10W+10W
Frequency Response 60 to 20,000 Hz

TUNER

Frequency Range 87.5- 108.0 MHz


CD PLAYER

Frequency Response 60 to 20,000 Hz
Signal-to-Noise Ratio 55dB (IEC-A)
Compatible Disc CD, CD-R, CD-RW

SPEAKER SYSTEM

Impedance 6 ohms
Input Power 10W (woofer)
Max 3W (tweeter)

GENERAL

Adaptor Input 100-240V~50/60Hz 0.6A
Adaptor Output 12V  2000mA
Power Consumption 24W
Main Unit Dimension L 360mm (14") x W 204mm (8")x H 110mm (4.3")
Speaker Dimension L 203mm (8") x W 130mm (5") x H 250mm (9.8")

BLUETOOTH

Bluetooth Version V5.0
Bluetooth Profiles A2DP/AVCTP/AVDTP/AVRCP/HFP/SPP/SMP/ATT/GAP
GATT/RFCOMM/SDP/12 CAP Profile
Bluetooth Frequency Range 2.402 GHz-2.480 GHz
Operating Distance 10m (33ft)

ACCESSORIES INCLUDED:

User Manual, AC/DC Adapter, Remote Control, AUX-in Cable,
Speaker Connection Cables

Design and specification are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Made in China.

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from “Defects” in materials under normal use for a period of “One Year” from the date of the original purchase. The Warranty is “Not” transferable. IT agrees, within the initial “90 Day” period, to repair or replace the product if it is determined to be defective at “No Charge”. It is further agreed that IT will cover the cost to repair or replace damaged “Parts” only for a total period of “One Year” from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement.

Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer “Must” include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD \$5.00 for items \$10.00 to \$39.99. (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable.**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser’s failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website **www.victrola.com/pages/technical-support**.

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.