

VICTROLA™

by *innovative* technology.



SEVENTEEN INCH RETRO NEON WALL CLOCK

MODEL: V50-600

INSTRUCTION MANUAL


Please read this instruction manual carefully and keep it for future reference

ASSEMBLY

1. Turn the clock over onto a soft cloth (or non-abrasive paper towel) with the back facing up.
2. Insert one (1) AA battery (not included) into the battery compartment. (The polarity is marked inside the compartment.) Place the negative side of the battery in first then press down on the positive side to fully insert the battery.

NOTE: The operation of the clock does not require the power adapter. The clock runs on the AA battery only.

4. Adjust the clock by turning red adjustment knob above the battery compartment to display the proper time.
5. Attach the power adapter to the back of the clock to power the neon light feature. The neon lights will automatically turn on once the power adapter is plugged into an outlet.

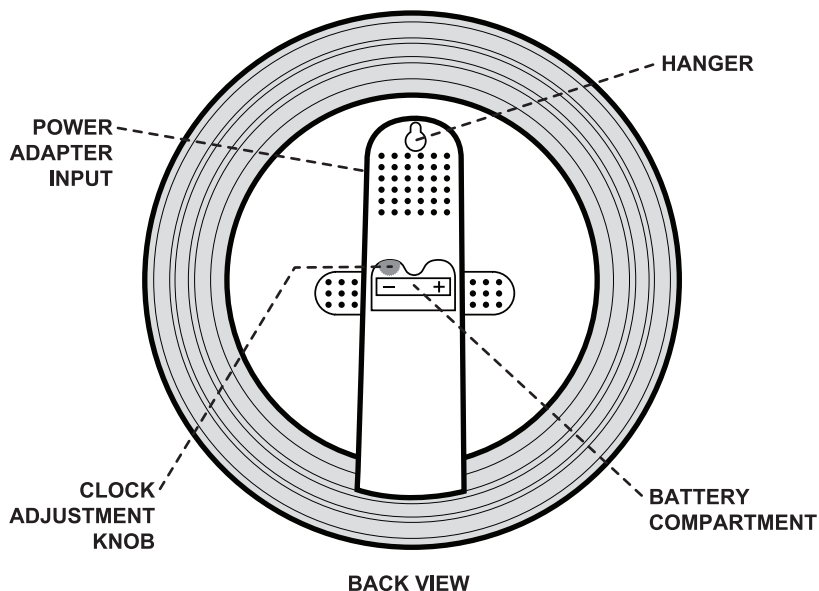

BATTERY REPLACEMENT

When the clock stops or operates abnormally, you will need to replace the battery with a new one.

BATTERY PRECAUTIONS

- Be sure to insert the battery in the correct positive "+" and negative "-" orientation.
- ALWAYS use batteries of the same type. Never mix different types of batteries together.
- When the clock is not to be used for an extended amount of time (more than a month), remove the battery to prevent them from leaking.
- Do not heat or disassemble batteries, and NEVER dispose of old batteries by throwing them in a fire.

POWER ADAPTER

1. Locate the adapter plug and plug it into clock's power adapter input. (See figure on Page 1).
3. To turn on the neon light, simply plug the adapter into an appropriate 120V outlet.

NOTE: The AA battery powers the clock mechanism and the power adapter powers the neon light - each work independently.

WALL MOUNTING

1. Put a nail or hook into a solid surface, such as a wall, where the clock is to be displayed. Optional screw (1) and anchor (1) are included for mounting.
NOTE: Be careful of any hidden pipes or electrical wiring that may be in the path of the drill or nail.
2. Make sure the hanging hardware (nail or hook) is strong enough to hold the weight of the clock. Hang the clock on nail or hook using the hanger hole in back of the clock.
3. Route the extension cord along a safe route to reach the wall clock's power adapter without creating a tripping hazard or exposing the extension cord to possible damage.

CLEANING AND MAINTENANCE

1. Clean the chrome frame of the clock with a soft non-abrasive cloth or paper towel.
2. Clean the glass with a soft, non-abrasive, cloth or paper towel. This is important because the "glass" is clear plastic, and subject to scratches.

WARNING! If the power cord to the adapter is damaged, a new adapter of the proper output voltage must be obtained.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture**

The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a set basement.

2. **Ventilation**

The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

3. **Heat & Flame**

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

4. **Power Source**

The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

Where the AC/DC Adaptor is disconnected from the clock, the clock shall remain readily operable.

5. **Power Cord Protection**

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.

6. **Cleaning**

The unit should be cleaned only as recommended. See the section "Care and Maintenance" of this manual for cleaning instructions.

7. **Object and Liquid Entry**

Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the unit. It shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

8. **Attachments**

Do not use attachments not recommended by the product manufacturer.

9. **Lightning and Power Surge Protection**

Unplug the unit from the wall outlet and disconnect it from the unit during the period of time during inclement weather. This will prevent damage to the product due to lightning and power-line surges.

10. **Overloading**

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

IMPORTANT SAFETY INSTRUCTIONS (CONTINUED)

11. **Damage Requiring Service**

This unit should be serviced by qualified service personnel when:

- A. The power supply cord or plug has been damaged.
- B. Objects have fallen into or liquid has been spilled into the enclosure.
- C. The unit has been exposed to rain.
- D. The unit has been dropped or the enclosure damaged.
- E. The unit exhibits a marked change in performance or does not operate normally.

12. **Periods of Nonuse**

If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged from the unit to prevent damage or corrosion.

13. **Servicing**

The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

SPECIFICATIONS

Power Adaptor (neon light)	Input: AC100V - 240V ~ 50 / 60 Hz
.....	Output: DC 12V, 1A
Power (for clock).....	1 x AA battery (not included)
Dimensions (W x H x D).....	42 × 42 × 7cm
.....	16.5 × 16.5 × 2.8in
Weight.....	1.2KG
Motivity Type.....	Quartz
Light Source.....	Neon Tube
Place of Use.....	Indoor Only
Voltage.....	100-240V
Wattage.....	6.5 - 7.2W
Accessories.....	Owner's Manual (1)
.....	12V, 1A AC/DC Adapter (1)

- Design and specifications are subject to change without notice.

FCC STATEMENT

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemical known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address:

<http://www.oehha.ca.gov/prop65.html>

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase.

Please contact us at www.ithomeproducts.com to request an RMA (Return Material

Authorization) number to return products for service or replacement. Returns without an RMA

number on the package will be refused and returned to sender. Upon receipt of the returning item and

our full inspection (IT) may issue a replacement to customer for the same item or of one that has

equivalent value and features. To return an item, supply full name, return address, phone number,

item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99 (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics LLC.
1 Channel Drive
Port Washington, NY 11050
Toll free: 1-877-483-2497
Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made In China.