

VICTROLA™

Bluetooth® Boombox

Model: VBB-10





Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

The Caution Marking is located at the bottom enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning-Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Unplug this apparatus during lightening storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. The product may be mounted to a wall only if recommended by the manufacturer.
19. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
20. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
21. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
22. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged
 - b) If liquid has been spilled, or objects have fallen into the product
 - c) If the product has been exposed to rain or water
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
2. **WARNING:** The mains plug or appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
3.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
4. No naked flame sources, such as lighted candles, should be placed on the apparatus.
5. Attention should be drawn to environmental aspects of battery disposal.
6. The product is designed to use in moderate climates.
7. minimum distances around the apparatus for sufficient ventilation;
8. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

“FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC’s RF exposure guidelines, place the product at least 20cm from nearby persons.”

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA PROP 65

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

SPECIFICATIONS

Power Supply:	AC 120V~60Hz
Radio Bands:	AM, FM/FM St.
Frequency Range:	FM 87.5-108MHz / AM 520-1710KHz
Output Power:	2 x 5W RMS, 10% THD
Included:	Bluetooth Boombox, Instruction Manual, AC Adaptor Cord


Design and specification are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Made in China.

PRODUCT OVERVIEW

1. Handle
2. Antenna
3. Function Switch
4. Band Switch
5. Volume Knob
6. Tuning Knob
7. LED Display
8. Power Indication Light
9. FM ST. Indication Light
10. ADJ. Button
11. Hour Button
12. Minute Button
13. Dial Lens
14. LED Light Effect
15. Standby Button
16. USB/SD Button
17. SKIP-
18. SKIP+
19. Play/Pause
20. Stop/Pair/AUX Button
21. Speaker
22. Mic Record
23. Cassette Door
24. Record Button
25. Play Button
26. Fast Foward Button
27. Rewind Button
28. Stop/Eject Button
29. Pause Button
30. Battery Door
31. Backup Clock
32. Cable Compartment
33. AC Socket
34. USB Port
35. SD Slot
36. AUX-In Jack
37. Headphone Jack
38. Silicone Cover

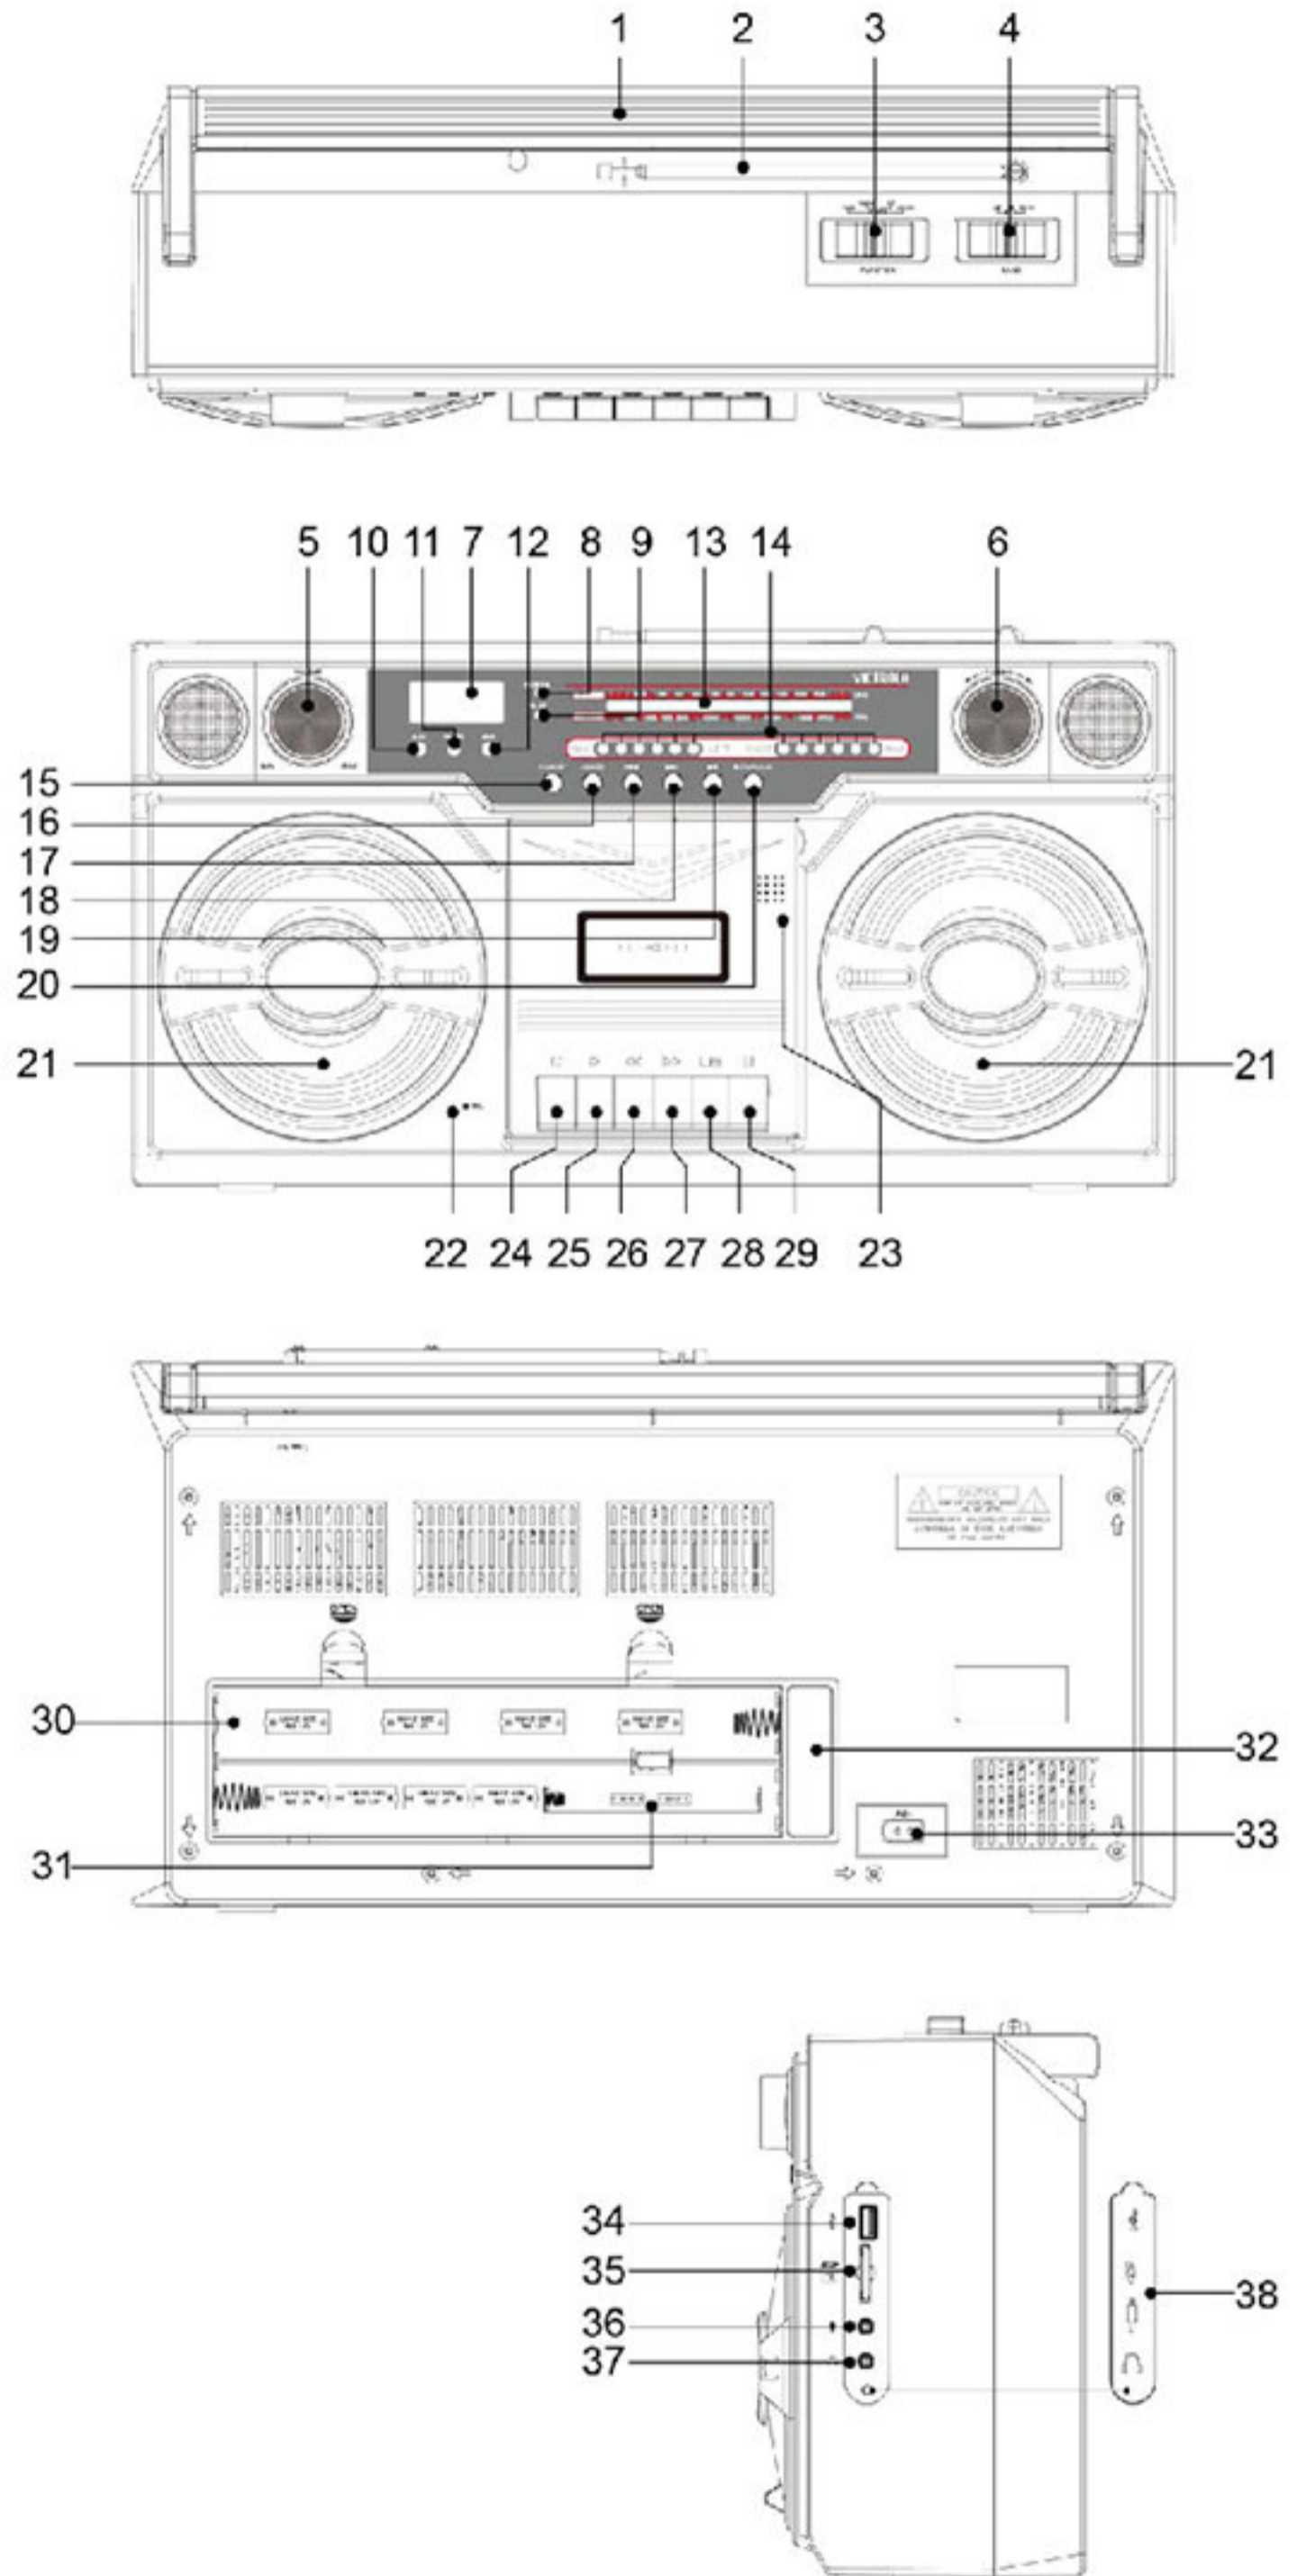

BASIC OPERATION

BASIC SET UP

1. Plug the provided AC Power Cord into the back of the unit, then insert plug into the nearest wall outlet.
Note: The unit can also be powered by 8 x D Size batteries (not included).
2. Press the Standby Button to power the unit ON.
3. Use the Function Switch on the top of the unit to switch between Tape, Radio, Bluetooth (BT), and USB/SD.
4. While listening to the radio function, use the Band Switch to switch between AM, FM, and FM ST.
5. Use the Tuning Knob to manually adjust the Radio.
6. Use the Volume Knob to manually adjust the volume.

CLOCK SET UP

1. To set up the Clock, make sure you first press the Standby Button so the unit is in Standby Mode.
 2. While holding the ADJ. Button, press the Hour Button to adjust the hour time.
 3. Then, while holding the ADJ. Button press the Minute Button to adjust the minute time.
- Note: Insert 2 x AAA Batteries in the Backup Clock Battery Compartment for Clock Back Up.*

CASSETTE OPERATION

Quickly press the STANDBY button to power on. Slide the function switch to TAPE mode, the LED Display will show "tAPE", then follow the steps below:

1. Press the **STOP/EJECT BUTTON**. Insert the cassette tape, bottom side up with the tape facing you. Manually close the Cassette door.
2. **Pause** - Press the PAUSE BUTTON to stop the tape during recording or playback, press the pause button a second time the resume play or recording.
3. **Automatic Stop (Auto Stop)** - When the cassette tape that is being played or recorded and reaches the end of the tape, the VBB-10 will automatically power off.
4. **Fast Forwarding and Rewind** - To fast forward or to rewind the tape, press the **FFWD** or **REWIND BUTTON**. Press the STOP/EJECT BUTTON to stop the tape at the desired location.
5. **Play Back**
 - (1) Install a Cassette Tape
 - (2) Set the FUNCTION to TAPE
 - (3) Press the PLAY BUTTON.
 - (4) Adjust the **VOLUME CONTROL** to desired sound level.
6. **Recording** - Install a cassette as described before. Press the RECORD BUTTON. To record from the Radio, convert the function button to the radio position.

MIC recording

Press the RECORD button in TAPE mode, the "MIC" will record all audible content. To stop recording, press the STOP button. Rewind the tape to play back the recorded content. The MIC recording can only be performed in TAPE mode.

RADIO OPERATION

1. Use the Function Switch to switch to Radio Mode.
2. The LED Display will show "rAd".
3. Use the Band Switch to switch between AM, FM, and FM ST.
4. Use the Tuning Knob to manually adjust the Radio to the desired station. For the best reception, fully extend the antenna located on the top of the unit.

Note: While in FM ST, the FM ST. Indication Light will light up red when tuned in properly to the station.

BLUETOOTH OPERATION

1. Use the Function Switch to switch to BT (Bluetooth) Mode.
2. The LED Display will flash "bt" indicating the unit is in pairing mode.
3. Make sure your external device has the Bluetooth turned on. Then open the Bluetooth settings menu on your device and select "VBB-10".
4. The "bt" on the LED Display will stop flashing and an audible tone will sound indicating the connection was successful.
5. Use the silver playback buttons on the control panel as usual or control playback directly from your external device.
6. To disconnect the external device, press and hold the Stop/Pair/AUX Button.

AUX-IN OPERATION

1. Use the Function Switch to switch to BT Mode. Then press the Stop/Pair/AUX Button to switch to AUX Mode. The LED Display will show "AUX".
2. Insert a 3.5mm cord (not included) into the AUX-In Port on the side of the unit.
3. Control playback directly from your external device.

HEADPHONE OPERATION

Plug the headphones (not included) into the Headphone Jack on the side of the unit to listen. The built-in speaker will stop playing once the headphones are plugged in.

USB/SD OPERATION

1. Use the Function Switch to switch to USB/SD Mode.
2. The LED Display will show "---". After a few seconds, it will then display "no" if there is no USB/SD inserted.
3. Insert USB/SD Card (not included) and press the USB/SD button to choose either USB or SD Mode.
4. Use the silver playback buttons location on the control panel to control playback as usual.

Note: the USB/SD supports MP3/WMA Format and supports a maximum of 32GB.

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD \$5.00 for items \$10.00 to \$39.99. (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable.**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.