

VICTROLA™



MODEL: VJB-127

BLUETOOTH JUKEBOX

Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

Important Safety Instructions	3
Product Overview	5
Setup / Basic Operation	7
Listening to FM Radio	7
Listening to an External Audio Device (Auxiliary Mode)	8
Listening to an External Audio Device (Bluetooth Mode)	8
Light Mode Function	8
Specifications	9
Troubleshooting Guide	10
FCC Statement	11
IC Statement	11
California PROP 65 Warning	12
Warranty	12






CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

WARNING: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure

Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

 


15. 
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
 - Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
16.  This equipment is a Class II or double insulated electrical appliance. It has been designed so that it does not require a safety connection to electrical earth.
17. The main plug is used as disconnect device, the disconnect device shall remain readily operable.
18. **WARNING**
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing. Objects filled with liquids, such as vases, shall not be placed on apparatus.
19. The equipment should always be used in a moderate climate.
20. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
22. The symbol with  Indicates AC voltage.
23. **CAUTION**, The servicing instructions are for qualified service personnel only. To reduce the risk of electric shock, do not perform any services other than that stated in the operation manual unless you are qualified to do so.


INCLUDED:

- BLUETOOTH JUKEBOX
- INSTRUCTION MANUAL
- WARRANTY (BACK OF MANUAL)

 
Product Overview

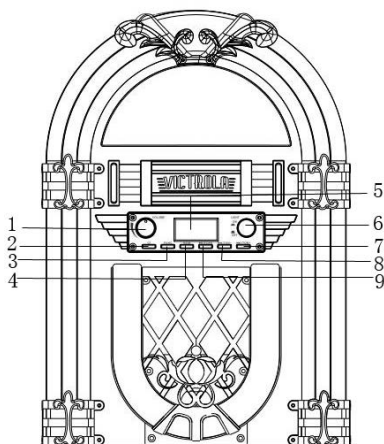

Front View

1. **VOLUME KNOB** Turn to adjust volume.
2. **POWER**  Press to turn the unit ON. / Press and hold to turn the unit OFF.
3. **FUNC.** Press to select a function mode (FM, AUX-IN or BLUETOOTH)
4. **MEM** In FM mode, press and hold to preset stations. / Press once to select a preset station.
5. **LCD DISPLAY**
6. **LED TUBE ON/OFF** Push ON / OFF button to turn the LED lights ON or OFF.
7. **▶▶/TUN+** In FM preset stations mode, press to select preset station number. / In FM mode, press to manually search a station. / Press and hold to auto search a station.
8. **◀◀/TUN-** In FM preset stations mode, press to select preset station number. / In FM mode, press to manually search a station. / Press and hold to auto search a station.
9. **▶||/SCAN** In BLUETOOTH mode, press to play or pause playback. / In FM mode, press and hold to scan the stations.

Rear View

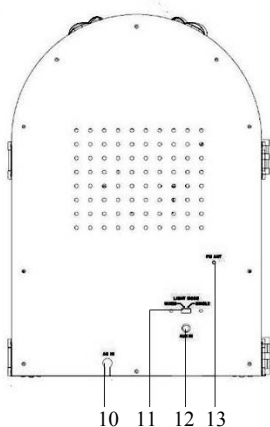

10. AC Power Cord

Plugs into a wall outlet.

11. Light Mode Switch

Single light mode or mixed light mode for LED Tube.

12. AUX-IN Port

Connect an external source to the AUX-IN port.

 
13. FM Wire Antenna

While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.

Setup / Basic Operation



Setup

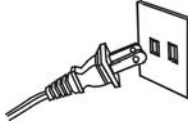Connect the AC power cord to a wall outlet.








Note: To prevent interference, avoid bundling audio signal cables together with the AC power cord.

Basic Operation

1. Press the  button to turn the unit on.
2. Press the FUNC. button to select a function (FM / AUX / BLUETOOTH).
3. Rotate the VOLUME knob to adjust to the desired sound level.
4. Press and hold the  button to turn the unit off.

Listening to FM Radio



1. Press the FUNC. button to select the FM tuning function.
2. Press the /TUN- or /TUN+ button to manually tune to a desired station.
3. You may also press and hold the /TUN- or /TUN+ button to auto scan for a station.
4. Press and hold the /SCAN button to auto search and save the stations.

Adjusting for Best Reception

FM broadcast: Extend and reposition the FM antenna located on the back of the unit.

Preset Tuning

You can preset and store up to 20 FM radio stations.

1. Select your desired FM station.
2. To save the FM radio frequency shown, press and hold the MEM button, and "P01" will flash on the display.
3. Using the /TUN- or /TUN+ button, you can manually choose the desired preset number (P01–P20). The manually selected number will flash on the display.
4. Press the MEM button before preset number "P—" stops flashing.
Once pressed the frequency shown will be stored as the corresponding number "P—".
5. Press the MEM button to scan through your preset stations.

Listening to an External Audio Device (Auxiliary Mode)

In AUX (auxiliary) mode, this unit can play audio from an external audio device (iPhone, MP3 Player, Portable CD Player, etc.)

CONNECTING VIA AUXILIARY


1. Press the FUNC. button to select the AUX-IN function.
2. Plug one end of the AUX-IN cable (not included) into the AUX-IN jack located on the back of the unit.
3. Plug the other end of the cable into the headphone jack of your external audio device.

NOTE: *Playback functions and operations are only available on your external device.*

Listening to an External Audio Device (Bluetooth Mode)

In BT (Bluetooth) mode, this unit can play audio from external devices that have a built-in Bluetooth function.

CONNECTING VIA BLUETOOTH

1. Press FUNC. Button to select the Bluetooth mode, the display will show this symbol: 
2. Turn ON the Bluetooth function on your external device.
NOTE: *The effective distance between your external device and this apparatus is 33 feet (10 m).*
3. Wait a moment until “**Victrola Jukebox**” appears on the paired devices list, then select “Victrola Jukebox” and allow it to connect. *If a window appears and asks for a password, simply type “0000”, then press ok on your external device.*
4. After a few seconds you will hear an audible tone to indicate that your device has paired successfully.

PLAYING MUSIC VIA BLUETOOTH

1. Once your device is connected, open the music player application or program on your external device. If your device is not connected yet, see “Connecting Via Bluetooth”.
2. You can now control music playback with the ►||/SCAN, ◀◀/TUN- and ►►/TUN+ buttons on the Bluetooth Jukebox.

PLEASE NOTE: *Some buttons may not work in certain music player applications or programs.*

Light Mode Function

1. Press the LED Tube On/Off button located on the front of the Jukebox to turn on the LED lights.
2. The LED Tube will illuminate the 5 changing colors (depending on the Light mode).
3. Using the Light Mode Switch located on the back of the unit, you can switch between Mixed Light Mode and Single Light Mode.
 - **Mixed Light Mode** will slowly transition through the 5 LED colors.
 - **Single Light Mode** will remain on the single color that the LED Tube currently displays.

Specifications

GENERAL

Power Requirements.....	AC 120 V~ 60 Hz
Power Consumption.....	35W
Dimensions (W x H x D).....	10.9 in x 15.75 in x 6.6 in (approx.) 278mm x 400mm x 168mm
Weight.....	5.5 lbs (approx.) 2.5kgs

AMPLIFIER

Output Power.....	10W
Frequency Response.....	60 to 20,000 Hz

SPEAKER SYSTEM

Type.....	1-way
Impedance.....	6 ohms
Input Power.....	Max. 10W

FM Radio

Range.....	88 to 108 MHz
------------	---------------

BLUETOOTH

Bluetooth Version.....	Bluetooth V2.1+EDR
Bluetooth Profiles.....	A2DP, AVRCP
Bluetooth Frequency range.....	2.402GHz-2.480GHz
Operating Distance.....	10 meters (33 ft.)

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

Troubleshooting Guide

	Symptom	Possible Cause	Solution
GENERAL	• Unit will not power on.	• Unit is unplugged.	• Connect the unit to the AC power supply.
	• No sound output from speakers.	• The volume level is set too low. • The input selector does not match the playback source.	• Adjust the volume. • Select the correct input source.
	• Noise/Distortion in sound output.	• The unit is too close to a TV set or another interfering device.	• Turn off the TV or other appliance, and relocate the unit.
	• Unit fails to respond.	• It might result from external factors such as ESD (Electro-static discharge).	• Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
FM RADIO	• Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio reception.	• Properly tune-in the desired station. • Turn-off the interfering TV set.
	• The sound is distorted.	• The antenna is not oriented properly.	• Re-orient the antenna until reception improves.
AUX	• No sound output with external audio device plugged into rear AUX-IN jack.	• AUX-IN jack is unplugged. • Unit is not in proper Mode	• Make sure the Auxiliary Cable is plugged into both sources. • Select proper AUX mode
BLUETOOTH	• No sound	• The unit is not switched to Bluetooth mode • Your device's and/or the unit's volume is not turned up. • Your device is too far from the unit or there're some obstacle between your device and the unit	• Ensure the unit is switched to BT mode. • Move your Bluetooth device closer to unit • Turn up the volume on your portable device and/or the unit. • Turn OFF your Bluetooth device and unit. Then power them both back ON
	• Sound has a lot of static	• Your device is too far away	• Bring your device closer to the Jukebox
	• Unable to pair with a Bluetooth device	• Your device doesn't have Bluetooth connectivity. • The Bluetooth pairing is not successful	• Confirm that your device is Bluetooth compatible. • Re-pair the unit and device again.

For further assistance with your product, call Victrola at
TOLL FREE# 1-877-ITECH-97 (1-877-483-2497).

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

IC Statement

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter. L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

California PROP 65 Warning



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Warranty

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number. All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address. Please include your check or money order in the amount of

- **USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99 (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information.

Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.