


LP support components, L, LM models

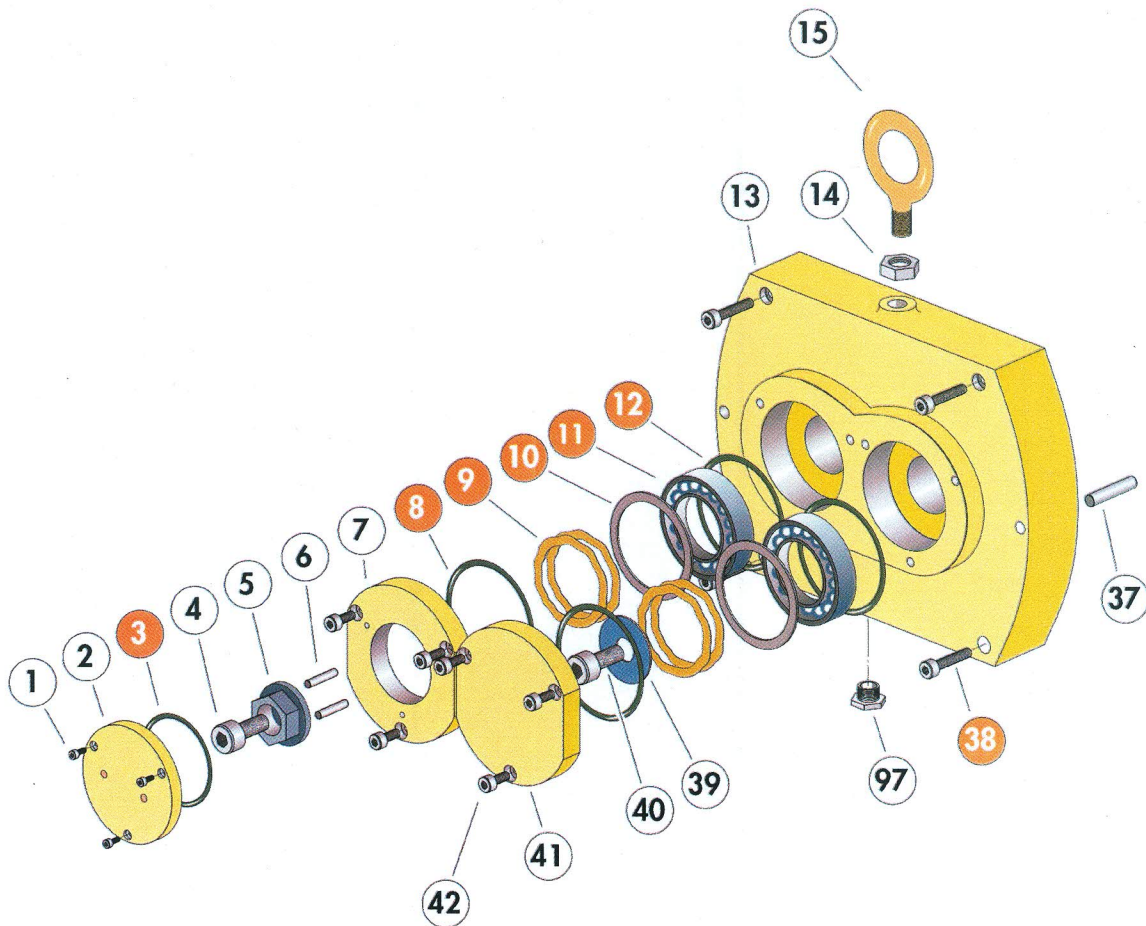

Rep.	Description	Qty*	P/N
1	Screw CHc M 4 x 10	3/3	084093
2	End cap	1/1	105464
3	O-Ring 2 x ø 35	1/1	Seals Kit
4	Screw CHc M 8 x 17	1/2	061941
5	Driving nut	1/1	051928
6	Needle ø 4 x 15.8	2/3	071052
7	LP Bearing cover	1/1	051929
8	O-ring 2.5 x ø 52	2/2	Seals Kit
9	Borrelly washer	4/4	Maint. Kit
10	Washer	2/2	Maint. Kit
11	Ball bearing	2/2	Maint. Kit

Rep	Description	Qty*	P/N
12	O-Ring 2.5 x ø 45	2/2	Seals Kit
13	LP support	1/1	106477
14	Nut	1/2	071216
15	Lifting ring	1/2	076189
37	Centering Pin ø 8 x 30	2/10	060267
38	Screw CHc M 6 x 20	4/40	050149
39	Washer	1/1	060242
40	Idem 4	1/2	-
41	LP bearing cover	1/1	061944
42	Screw CHc M 6 x 16	6/6	082367
97	Male plug	1/5	082930

* Quantity / Total Quantity