

PART #	DESCRIPTION	PART INCLUDED
8022802	AXLE,VAULT,FRONT,516 GOLD AM	I
8022803	BEARING 18X30 CN AM	H
8022807	SEAL KIT VAULT FRONT 516 AM	G,G
8022805	ENDCAP SET VAULT F 516 12x100 AM	A,B
8022806	ENDCAP SET VAULT F 516 15x100 AM	C,D
8022804	ENDCAP SET VAULT F 516 9x100QR AM	E,F
D60185	BEARING,DRIFT,KIT,VAULT,F+R	NOT SHOWN

NOTES

1. See eastoncycling.com for service and repair instructional videos
2. Remove end caps by hand, if tight try using a rubber glove or blind bearing puller tool
3. Always install rotor side bearing first
4. Longer end cap installs on rotor side
5. Lube outside facing bearing seals and end cap seals with light grease

