

Battery Replacement Instructions



Sewing Machine Light

Instructions

1. Slide the light body away from the mounting base, removing it.
2. Slide the exposed battery cover in the direction indicated by the arrow.
3. Remove the battery cover by inserting a finger into the gap and lifting the cover.