

WonderFlex





User Guide

Read all instructions prior to using your new product.

USING YOUR WONDERFLEX LED LIGHT:

- Turn on the light by pressing the on/off button located on the light head. Pressing the button again will cycle through the light's three brightness settings (High, Med, Low) and eventually cycle off.
- Your WonderFlex light uses energy efficient LEDs you'll never need to replace any bulbs.

 Your WonderFlex can be powered by the included.
- rechargeable batteries, or while connected to the micro included USB cable.
- The rechargeable battery charges fully in 3 hours, and will last for 10 hours on high, and up to 45 hours on low.
- Never remove the rechargeable battery unless you are recycling the product, in which case it can be removed by unscrewing and sliding off the back battery cover.

SAFETY INFORMATION:

- This product is not a toy and is not intended for children under 13 years of age.
- Do not stare directly into the LEDs or shine them into the eyes of others.
- Do not attempt to remove or replace the LEDs.
- Improper use of this or any other battery operated product may cause batteries to leak or explode, which may result in chemical burns and/or personal injury.

If any amount of battery leakage comes in contact, directly or indirectly, with skin, eyes, inside of mouth, or anywhere on body: 1) immediately flush the affected area with plenty of cool; 1) immediately flush the affected area with plenty of cool; 1 contact your local doctor, Poison Control Center, or hospital emergency room, or call the 24 hour National Button Battery Ingestion Hotline at: 1-202-625-3333, which accepts collect calls from both the US and Canada. Also, give the hotline number to your doctor or hospital emergency room. If injury appears serious, call: 911.







CUSTOMER SERVICE:

For questions and assistance please contact us at: 800.922.3233 • customerservice@mightybright.com



Visit us at: www.mightybright.com

WonderFlex-R REV200