



# Model 1204 Tuning/Playing Instructions

## Thumb Piano





Schoenhut® Piano Company, 6480-B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
*"Manufacturer of Toy Pianos since 1872"*

## Tuning Directions

DO NOT loosen the two screws holding the keys. Minor adjustments to pitch can be made by tapping the keys (to raise) or (to lower) pitch.

## Playing Directions

To play your thumb piano, lightly depress a key with your thumb (about 1/32 of an inch, or less). With the key still depressed, slide your thumb off the key, letting it snap back.

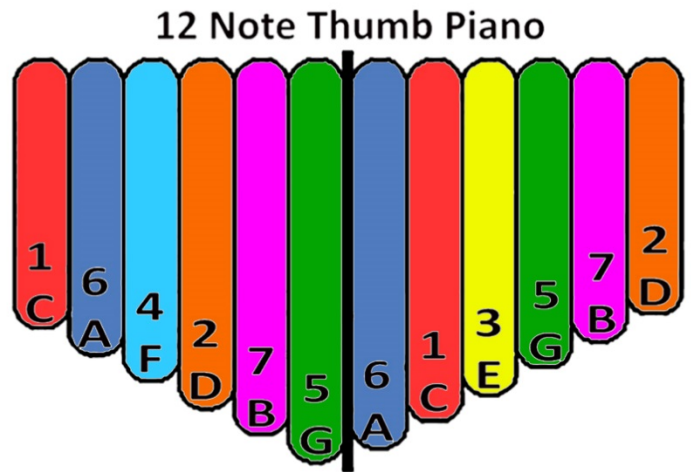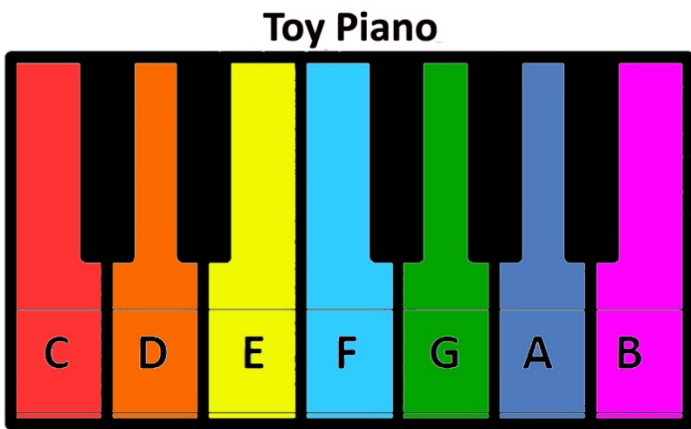

Note: A darkening of the brass tube and oxidation of the keys is normal. It does not affect the playability or tone of the instrument.

Schoenhut® Piano Company, 6480-B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
*“Manufacturer of Toy Pianos since 1872”*