



# Model 372 Assembly Instructions

## Elite Baby Grand



Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***

## **WARNING!**

This product must be assembled by an adult prior to play. Unassembled parts may have sharp edges which could cause injury. The piano and bench are designed for use by a child. Inspect the hardware periodically for tightness and integrity, tightening or replacing any loose parts.

## **PARTS LIST**

Piano Body	Bench legs (four)
Front legs (two)	Wood screws (two)
Rear spindle legs (two)	Short Allen screws for bench (four)
Rear foot	Long Allen screws for front legs (two)
Music stand	Barrel nuts (six)
Bench seat	Allen wrench
Song book and color strip	

## **Assembly**

### **Alert: Hardware is located inside the Styrofoam packing material**

Step 1: Turn piano body over. Screw in both rear spindle legs. Attach rear foot to bottom of rear spindle legs with wood screws.

Step 2: Turn the piano on its side. Insert legs into bottom of piano body. Note: the dowel in the leg pushes into the pre-drilled hole.

Step 3: Insert barrel nut in front leg. Keep leg parallel with side of the piano. Push the long Allen Screw in from the top and thread into barrel nut. Tighten with Allen wrench. Repeat with second leg. Important: Use vertical slot on barrel nut as a guide for proper alignment, enabling the screw to thread into it easily. Follow the same procedure when assembling the bench (Step 6).

Step 4: Insert music stand into the slot in the top of the piano.

Step 5 – Insert bench legs into the bench top. Place dowel on leg into the hole in the bottom of the bench. Install barrel nut and short Allen screw.

Step 6 – Push barrel nuts into legs. Push short Allen screws through bench top and into barrel nuts. Tighten screws.

Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***

A slight tilt to the piano keys is normal. The loose-pivot design is intentional to provide an easy, light touch for little fingers. Occasionally, keys may jog out of position during shipping. Running your hand lightly both ways across the keyboard, or further by lifting and gently shaking the piano may easily remedy this. The keys will then fall into their proper position.

Fold the color music strip so that it lines up appropriately behind the black keys.

Any questions, call our toll-free number during normal business hours so that a customer service representative may assist you.

In the event of shipping damage, DO NOT RETURN THE PIANO TO A STORE. Instead, call our office during normal business hours for a Return Authorization Number (RA#). This RA# is required and must be authorized by Schoenhut Piano Company for return of a product. Credit or replacement will not be issued unless the product is packed properly in its original packaging within the 30-day Manufacturer's Warranty.

Congratulations on your choice of Schoenhut®, leader in the world of toy pianos since 1872. Our musical instruments are designed to develop basic playing skills, while encouraging children on a path to music.

Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***