


Printomatic FW Update

- Feb. 2018. -


1. How to FW Update.

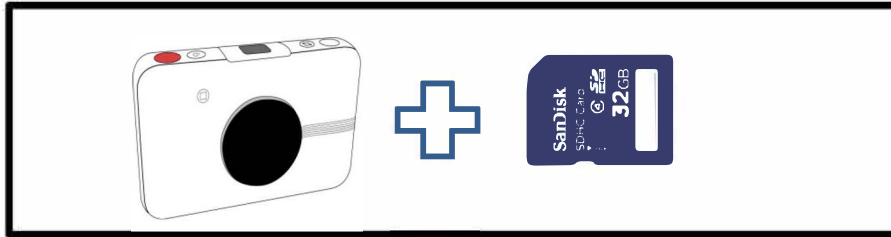

①. SD Card Insert.

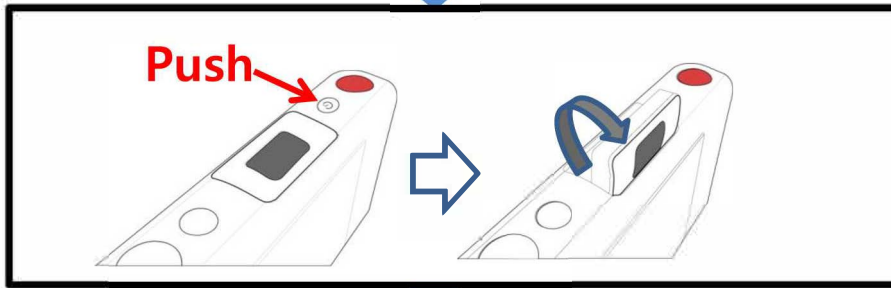


②. Power On and connect with PC.

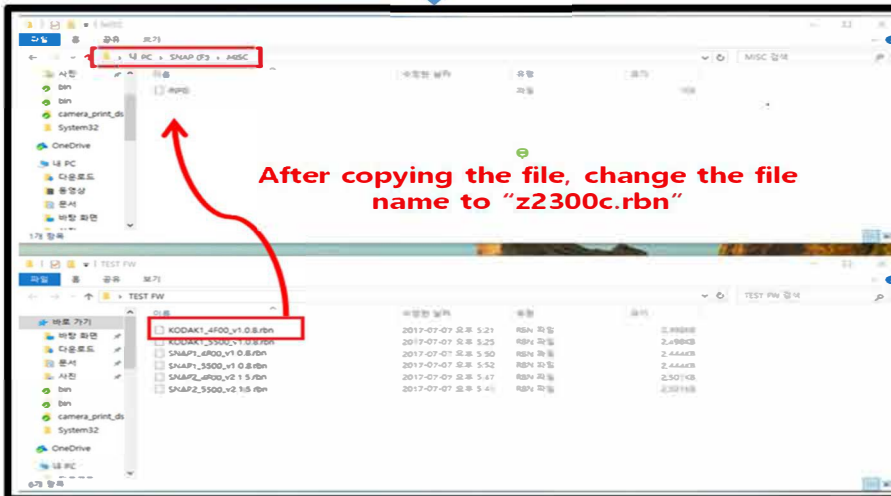

③. After copying the FW file to the "MISC" folder, change the file name to z2300c.rbn"

1. How to FW Update.

[Update Success LED Scene]

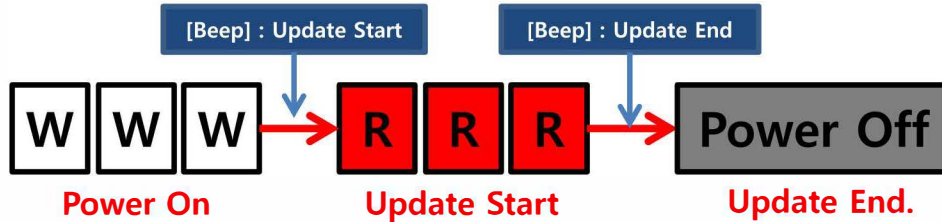

- ④. Turning the printer power off and then on again, will start the FW update.

[Update Fail LED Scene]



- ④. If the FW file is invalid, Error Beep sound is generated and the power is turned off after erasing the wrong file.

2. How to identify the wrong FW File

