

LED Light Status Chart

View the chart below to familiarize yourself with the light indicators of your **KODAK PRINTOMATIC** camera.

| Color | Condition | Description |
|--|---------------------|--|
| ● Off | Powered off | Camera is turned off. Press & hold the power button to turn on camera. |
| ○ Solid white | Standby | Camera is ready to be used. |
| ☼ Blinking white | Printing | Camera is printing. |
| ☼ Blinking white and red; 3 cycles before forced shutdown | Low battery | Camera battery is low and needs to be charged. Connect camera to USB cable to charge it. |
| ● Solid red | Battery charging | Camera is plugged in and charging battery. |
| ● Solid green | Full battery | Camera is fully charged. |
| ● Solid red (stops when SD card is removed) | SD card error | SD card is full, or camera cannot support the SD card that was inserted. Remove the SD card and insert a new one. |
| ☼ Blinking red (constant) | Paper jam | Paper is jammed in camera and needs to be readjusted. Reset the camera before trying to operate it again. |
| ☼ Blinking red (stops after 10 seconds) | Paper feeding error | Paper is not feeding through printing slot properly. Remove paper in camera and place it back into the compartment properly. |
| ☼ Blinking white | Firmware update | Firmware is updating. |

