

Hyper Green Sprayer

Parts

- ① Nozzle cap
- ② No.3
- ③ Washer
- ④ Valve rod
- ⑤ Spring
- ⑥ Pump
- ⑦ Pump
- ⑧ Lever pin
- ⑨ Lever
- ⑩ Cap
- ⑪ Washer
- ⑫ Washer
- ⑬ Cylinder
- ⑭ Pipe
- ⑮ Pump washer
- ⑯ Pump rod washer
- ⑰ Strainer

• How to Use

1. Remove ⑩ from the tank ⑱ and fill up with water below the marked line.
2. Securely close the sprayer.
3. Begin pumping the sprayer, 10~15 times. Do not pump further if you feel resistance. Re-pressurize as needed.
4. Press forward ⑧ while pressing down the lever ⑨ for a constant mist.
5. Take apart the sprayer after each use and let dry.

* Twisting the nozzle cap will adjust the mist size

** Do not use sprayer with oil based liquids or anything that might clog the nozzle.

