



LAURA JAMES

CARE GUIDE
CHARLIE



HOME - GARDEN - LIFESTYLE

LEVELING, ASSEMBLY.& MOVING

- The item must be positioned on a level surface to ensure that it does not rock.
- We recommend Charlie be lifted by two people as dragging it across the floor will cause damage to the item
- From time to time tightening of all fixings may be needed to prevent loosening which can create squeaks and movement, full instructions are enclosed with your product.
- As the item is self-assembly, it should be assembled at the intended location and lifted carefully into position..





SUNLIGHT & HEAT

- Please don't expose your product to excessive heat as this can cause an issue with the finish. A minimum 30cm clearance from heat sources such as radiators is advised.
- Direct sunlight will cause the colour of the product to change, especially if the furniture is placed near a window. Use in hot and sunny conservatories is not recommended.
- Leaving items such as ornaments in one place in sunlight on furniture may leave a mark when it is removed. Such marks should blend in with time.
- Never place hot dishes or mugs directly on surfaces, use tablemats or coasters. Prolonged use of hot equipment e.g., a laptop, may cause scorching..

CLEANING

Regularly dust with a soft cloth and occasionally wipe with a soft cloth very lightly dampened with a mild, bleach-free detergent solution and dry with a lint-free cloth. Beeswax furniture polish from a reputable supplier may be used, however, the repeated use of a polish containing silicone is not recommended as it will lead to a build-up of a silicone film altering the appearance.

Spills should be removed immediately by blotting with a dry cloth, especially fatty or oily substances. If the spillage causes staining or the piece requires routine cleaning, we recommend a specialist cleaner.



MAINTENANCE AND CARE INSTRUCTIONS

AVOIDING UNNECESSARY DAMAGE

- Prevent sharp objects such as keys from coming into contact.
- Avoid contact with any chemicals such as hair and skin preparations, fake tans, insect repellents and other cosmetics, or household cleaning materials, other than those recommended as these may affect the finish.
- If your furniture becomes stained, scratched, chipped or suffers other damage we recommend professional help is sought to restore it.
- Following the guidelines above will ensure product performance is maintained. Laura James is not responsible for defects caused by the misuse of your product.



LAURA JAMES

email: customercare@laura-james.co.uk

Address: Unit 2 Provincial Park, Nether Lane,
Ecclesfield, Sheffield, S35 9ZX

www.laura-james.co.uk