



LAURA JAMES

CARE GUIDE

RAYNA



HOME - GARDEN - LIFESTYLE



FEATURES

- Mango wood is strong, sturdy, and has an effortlessly stunning appearance. The appearance of the timber is naturally smooth.
- No two pieces of Mango are alike, which makes your item of furniture special to you.
- Some of the items within the range are self-assembly. Assembly is very simple, with detailed assembly instructions supplied with the furniture.

EXPANSION & TIMBER MOVEMENT

We do not recommend locating products in excessively high or low temperatures, or where the environment is often damp as this may cause product issues.

LEVELLING, ASSEMBLY AND MOVING PRODUCTS

- Furniture performs best on a level surface. Items have adjustable feet, to make sure the products do not rock, which can be altered if needed. If the product is moved, levels should be rechecked.
- Items with doors have adjustable hinges, so doors can be squared. Follow the instructions included with your furniture if adjustment is necessary.
- Take care when moving products. We recommend they are lifted by two persons as dragging items across the floor will cause damage to the item.
- From time to time, assembled products may need a little attention to prevent squeaks and creaks. Follow the instructions enclosed with your product to periodically check bolts and other fixings remain tight.
- For furniture that is over 60cm in height, we recommend the use of anti-topple straps to prevent tip-over accidents. Anti-topple straps are included with these products to use with your wall fixings.

SUNLIGHT AND HEAT

- Avoid exposing your furniture to excessive heat as this can cause issues with the finish of the product. A minimum 30cm clearance from heat sources such as radiators is advised.
- Direct sunlight will cause the colour of the product to change, especially if the furniture is placed near a window. Use in hot and sunny conservatories is not recommended.
- Leaving items such as ornaments in one place in sunlight on furniture may leave a mark when it is removed. Such marks should blend in with time.
- Never place hot dishes or mugs directly on surfaces, use tablemats or coasters. Prolonged use of hot equipment e.g., a laptop, may cause scorching.
- Dark rubber feet used on some equipment may occasionally contain chemicals that can permanently mark surfaces so care should be taken.

MAINTENANCE AND CARE INSTRUCTIONS

CLEANING

- Regularly dust with a soft cloth and occasionally wipe with a soft cloth very lightly dampened with a mild, bleach-free detergent solution and dry with a lint-free cloth.
- Beeswax furniture polish from a reputable supplier may be used, however, the repeated use of a polish containing silicone is not recommended as it will lead to a build-up of a silicone film altering the appearance.
- Follow cleaning instructions carefully, spills should be removed immediately by blotting with a dry white cloth, especially fatty or oily substances. If the spillage causes staining or the piece requires routine cleaning, we recommend a specialist clean

CARE

- Do not drop furniture onto corners or feet, this will weaken and damage frames, feet or legs
- Avoid contact with any chemicals such as hair and skin preparations, fake tans, insect repellents and other cosmetics, or household cleaning materials, other than those recommended as these may affect the finish.
- If your furniture becomes stained, scratched, chipped or suffers other damage we recommend professional help is sought to restore it.
- If you have relevant insurance you may wish to contact your provider for advice.

Following the guidelines above will ensure product performance is maintained. Laura James is not responsible for defects caused by the misuse of your product.



LAURA JAMES

email: customercare@laura-james.co.uk

Address: Unit 2 Provincial Park, Nether Lane,
Ecclesfield, Sheffield, S35 9ZX

www.laura-james.co.uk