

# varía®

BREW DIFFERENT


**INSTRUCTION MANUAL**

MODEL:  
VARIA04

Thank you very much for your purchase.  
For directions on how to use the product,  
please be sure to read the instruction manual.  
After reading the manual, store it in a safe place.

## DIGITAL LED SCALE WITH TIMER PRODUCT OVERVIEW

[www.variabrewing.com](http://www.variabrewing.com)

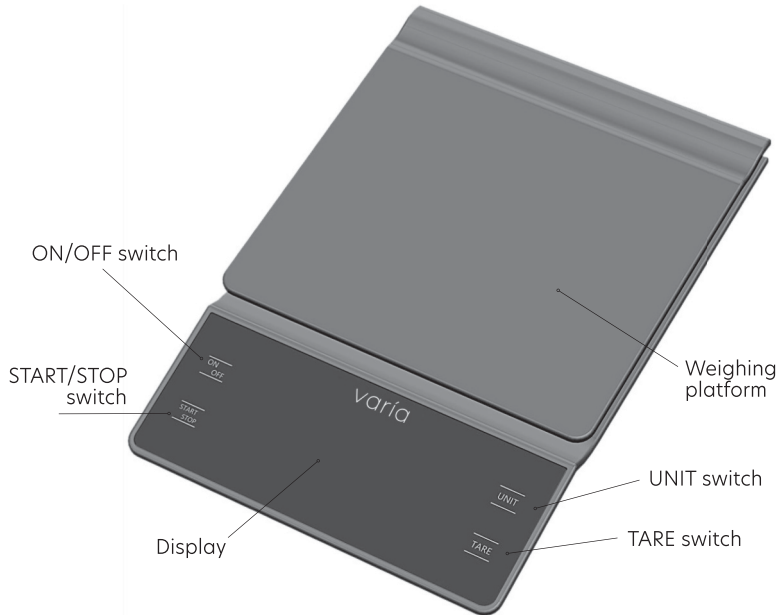

### SPECIFICATIONS

Maximum weight:	3kg
Deviation:	0.3 ~ 500g: 0.1g 500 ~ 1000g: 0.5g 1000 ~ 3000g: 1g
Timer Display:	4-Digit Digital LED
Maximum count up time:	99 minutes 59 seconds
Power source:	DC 6V 4 x AAA batteries
Automatic power off:	Approx. 3 minutes

### ACCURACY ASSURANCE RANGE

1. This product is manufactured and tested according to the technical standards of the Measurement Act.
  - Weight range is 0.3g ~ 3000g
2. When heated objects are placed on the scale the weight may fluctuate (accuracy  $\pm 2g$ )
3. The variance of gravity from region to region may cause detrimental errors.

## HOW TO USE

1. Touch the ON/OFF switch to turn it on.

Place the scale on a horizontal level surface. When the power is turned on, all letters and symbols will appear on the scale display. "0.00" / 0.0g" will appear on the display. If anything other than "0.0g" appears, press the "ON/OFF" switch for 2 seconds to power off the scale. Then try turning it back on.



- Please make sure that nothing is on the scale when turning it on.
2. When an object is placed on the weighing platform the weight will be displayed.

- Make sure the display is showing "0.0g" before placing anything on the scale.
- Place objects in the center of the weighing platform.
- The maximum display range is up to 3000g.
- If anything heavier than (3000g) is placed on the scale "Err" will be displayed.

3. Remove objects from weighing platform and press "ON/OFF" (about 2 seconds) to turn off.

## HOW TO MEASURE/TARE/WEIGH ITEMS IN CONTAINERS

1. Press the "ON/OFF" switch to turn on
2. When the container is placed on the scale the weight will be displayed.
  - Make sure the display is showing "0.0g" before placing anything on the scale
  - Place objects in the center of the weighing platform
3. Press the "TARE" switch and "0.0g" will be displayed
4. Only the weight of the contents in the container will be displayed.
  - If the weight of the container and its contents are heavier than the maximum weight range "Err" will be displayed.
5. When the container and contents are removed "—" will be displayed.

## TIMER FUNCTION

1. Press "START/STOP" to start the timer.
2. Press "START/STOP" once to pause the timer  
Press "START/STOP" again to resume timer.
3. Press "START/STOP" for about 2 seconds to reset the timer to zero.

## MAINTENANCE

1. Please use a slightly damp cloth to clean the main body of the product. Use a mild detergent to wipe hard to clean areas.
2. Do not use abrasive cleaners/pads, thinners, benzene, gasoline, kerosene or alcohol to clean this product. It may cause deterioration and/or discoloration.

## HOW TO REPLACE THE BATTERIES

1. Remove the battery cover on the back of the product.
2. Remove the old batteries and insert the new batteries of the same size (AAA) with "+" and "-" facing the correct direction.
3. Replace the battery cover and click it back into place.
  - When the battery runs low while the scale is in use, "Lo" will be displayed. Please replace the batteries immediately.
  - Please follow the rules of your local environmental policy when disposing batteries.

## HANDLING PRECAUTIONS

This is a precise instrument, please do not drop and avoid strong impact as it may cause the product to malfunction.

- Place objects to be weighed gently onto the weighing platform. Dropping the product may cause malfunctions.
- When storing the product do not place anything on or load the weighing platform with other objects, as this may lead to malfunctions.
- Use on a flat stable surface where the product will not slip. Unstable surfaces may lead to the proper weight not being displayed or cause the scale to fall.
- Do not insert fingers in openings, as this may cause injuries.
- Do not place in areas that are subject to high temperatures. High temperatures may cause deterioration of the product surface or cause fires. Please avoid leaving the product near stoves, other heating devices and exposed to direct sunlight.
- Mobile RF communication devices may affect the measurement of electronic scales. When using, avoid strong electromagnetic interference, such as near mobile phones, microwave or ovens as this may cause malfunctions.
- Do not use when the product has been heated, disassembled, modified or immersed in water as this may cause the product to malfunction.

## BATTERY PRECAUTIONS

Please follow the directions below. If batteries are misused it may lead to battery solution leakage or explosions and may cause product malfunction and injury.

- Please make sure the polarities(+/-) are facing the correct directions.
- Please remove old batteries from the product as soon as possible.
- If the product is to be stored for an extended period of time, please remove batteries.

Do not short circuit, disassemble, heat or place batteries in fire. This will lead to over-heating, battery solution leakage or explosion. Keep batteries out of reach of children. If swallowed, consult a physician immediately. Should alkaline solution leak from batteries on to skin or clothes wash thoroughly with clean water. If solution gets into eyes, wash thoroughly with clean water and consult a physician immediately. When disposing or storing batteries, please insulate batteries with tape or other methods. If they come in contact with other metals or batteries it may cause fire or explosions.