

RCA

Home Control Universal Remote

NITEglo
LIGHTS UP FOR NIGHT USE

**Control 3 Video Components, Lights and
Appliances With This Remote Control**

This Universal Remote is compatible with the RCA, Magnavox, IBM Home Director, Stanley, Leviton, X-10 Powerhouse, Radio Shack and Safety First brands of Home Control Systems and with most models of infrared controlled Televisions, VCRs and Cable Boxes manufactured after 1989.

Please retain this guide for future reference.



TABLE OF CONTENTS

Button Description	2
Installing The Batteries	3
Sleep Feature	3
NiteGlow Feature	3
FCC Regulations	4
Using The Remote with Home Control	4
Operating Lamps/Appliances.....	5
Setting The House Code.....	5
Programming For TV.....	6-7
Programming VCR.....	8-9
Programming For Cable Box.....	10
Programming For Home Control	11
Programming With Codes Search.....	12
Getting Codes From Your Remote	12
Trouble Shooting	13
Help Line	13
Optional Accessories	14-15
Warranty	15

Already programmed for RCA Home Control and most RCA, GE and ProScan TVs and VCRs

©1996 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered Marca(s) Registrada(s)
1J1219-Z

HC1310

Button Description

CODE SEARCH

Used to program the remote or to search through codes.

Indicator Light

The light flashes red to show that the remote is working.

SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes.

TV•VCR

The TV/VCR button operates the TV/VCR function of your VCR.

Mute

The MUTE button operates the same as on your original remote, and when in Home Control mode, turns all lights and appliances off*.

LIGHTBULB

The lightbulb button is used to control lighting the keypad and conserving battery power. Press the button and hold until the remote lights up. The remote will then light at the touch of any button. To turn off the feature, press the Lightbulb button a second time.

TV, VCR, CABLE

The TV, VCR, and CABLE buttons are used to select the device you want to control.

HOME CONTROL

The HOME CONTROL button puts the remote in Home Control mode.

REW, PLAY, FWD, REC, STOP, PAUSE

The REW (Rewind), PLAY, FWD (Fast Forward), REC (Record), STOP, and PAUSE buttons operate the same as on your original VCR or remote. **You must press the REC button twice to begin recording.**

ENTER

The ENTER button operates the same as on your original remote.

PRE CH

The PRE CH (Previous Channel) button operates the same as on your original remote.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons operate the same as on your original remote. When in Home Control mode, the CHAN buttons control module power (ON/OFF), and the VOL buttons control light brightness (DIM/BRIGHT)*.

POWER

The POWER button operates the same as your original remote. When in Home Control mode, the POWER button turns all lights on* (note: some RCA, GE and Proscan models require you to press the device key to turn the device on and the power key to turn the device off).




Battery Installation

Your remote requires four new AAA alkaline batteries. To install the batteries:

1. Turn the remote over and push down on the arrow and slide the cover off.
2. Insert the batteries, matching the battery to the + and - marks inside the battery case.
3. Press the battery cover back into place.

Note: Removing the batteries may require you to reprogram the unit.

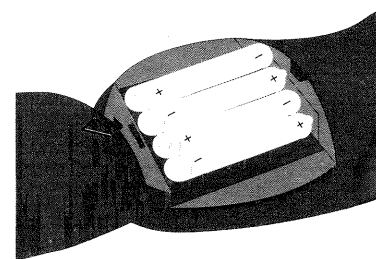


Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:

1. Press and hold the **SLEEP** button.
Indicator Light will stay lit.
Release the **SLEEP** button.
2. Enter time in minutes using the numerical key pad
(minutes 1 thru 9: hit 0 before the actual number)
(max: 99 minutes)

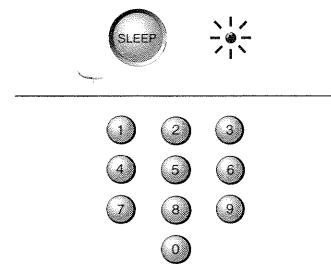

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and the clock reset to zero by either of the following:

Press and hold **SLEEP** button until Indicator Light blinks or Press **POWER** button, turning TV OFF.



Niteglo Feature

The Lightbulb button is used to control lighting the keypad.

Press the Lightbulb button and hold until the remote lights up. The entire keypad will light and go off after 5 seconds.



Every time a button is pressed the keypad will light and remain lit until the command is completed.

Do not press the Lightbulb button unless you want to completely deactivate the keypad light.

To deactivate the keypad light press the Lightbulb button.

To save battery power, do not activate the NiteGlo feature when remote is used in well lit rooms.

FCC Regulations

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Using The Remote To Control The Base Module

Your RCA Home Control Remote is preprogrammed for the following brands; RCA, Magnavox, IBM Home Director, X-10 Powerhouse, Stanley, Leviton and Safety First. If you are using Radio Shack or GE Home Minder see page 13 for programming instructions.

1. On your Home Control Universal Remote, press the Home Control button (House Icon).



2. Press the number code of the module(s) you want to control. For the Base Module always press 1.

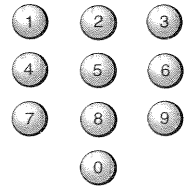

(It is not necessary to press 0 when entering a single digit code.)

3. Press the appropriate button to execute the following commands:

Module Power ON Press CHAN UP



Module Power OFF Press CHAN DOWN



All Lights ON Press POWER



All Modules OFF Press MUTE



IMPORTANT:

An unattended appliance such as coffee pot, portable heater, or fan may create a dangerous situation, or fire hazard if turned on remotely while unattended.

Operating Lamps/Appliances Independently

Each module in the Home Control System (sold separately, see page 18) should be assigned a unique "Module Number". The Base Unit's Module Number is always set to 1. Set each subsequent module code to a number between 2 and 16.

Operating Lamps/Appliances Simultaneously

To turn On/Off a number of lamps or appliances at the same time, assign them to the same module code (assign to module code 1 if you want the lamp or appliance using the Base Module to be within this group or use numbers 2 thru 16 for other groupings).

Setting The House Code

If you experience interference from a neighbor's Home Control system, reset the house code on the base module and all other modules in the system.

1. Use a dime or a small screwdriver to set the blue house code dial on the base module to the same letter on the accessory module. (All modules within this system should be set to the same house code letter.)



2. After changing the house code setting, reset your remote control as follows:

- Hold Code Search until light stays lit.
- Enter the numeric equivalent to the letter assigned above. The light will blink once after entry and then stay lit.



A=1	B=2	C=3	D=4	E=5	F=6
G=7	H=8	I=9	J=10	K=11	L=12
M=13	N=14	O=15	P=16		


- Hit Enter. The remote's indicator light will go off.



Programming Your Universal Remote For TV


Most RCA, GE and ProScan TVs will not require programming. Check to see if your TV responds to the Remote before you begin programming.

1. Manually turn on the TV.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **TV** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your TV in the code list starting below and enter it using the Number Buttons. After your code is entered, the **Indicator Light** will turn off.
5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.

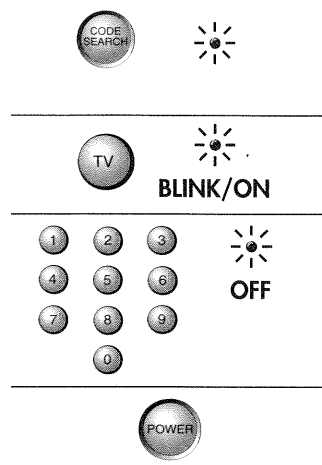

Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 12.

6. With your TV on, press **CHANNEL UP**. If the TV responds, no further programming is required.
7. Enter your code here for easy reference.

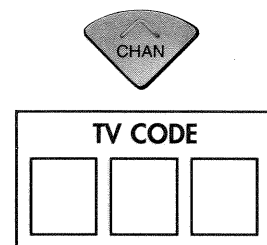

TV Code List

Abex.....	172	Crown	038, 171
Admiral	001, 173	Curtis Mathes.....	000, 004, 006, 015
Adventura.....	174		105, 162, 171
Aiko	016	CXC	038
Alleron.....	046	Daewoo	004, 005, 006, 016, 017
Amtron	038		018, 126, 127, 171
Akai	002	Daytron	004, 006, 171
Anam National.....	003, 038	Dimensia	000
AOC.....	004, 005, 006	Dumont	004, 151
	007, 175, 176	Dynatech	178
Audiovox	038	Electroband.....	002, 176
Belcor	004	Electrohome	003, 004, 006
Bell & Howell.....	001, 083, 162		019, 020, 021, 022
Bradford	038	Emerson	004, 006, 012, 014, 023, 024
Brokwood	004		025, 026, 027, 028, 029, 030
Candle	004, 006, 008, 174		031, 032, 033, 034, 035, 036
Capehart	175		037, 038, 039, 040, 041, 042,
Celebrity	002		043, 044, 045, 046, 047, 123
Centurion	009		124, 162, 163, 171, 176, 177, 179
Citizen	004, 006, 008, 016, 038	Envision.....	004, 006
	105, 171, 174, 177	Fisher.....	048, 049, 050, 051, 162, 180
Clairtone	176	Fujitso	046
Colortyme.....	004, 006, 010	Funai	038, 046
Concerto	004, 006	Futuretec	038
Contec/Cony	011, 012	GE	000, 003, 004, 006, 022, 052
	013, 014, 038, 176		053, 054, 055, 087, 163, 164
Craig	038		165, 166, 167, 168, 181

TV Code List Continued

Gibraltar	004, 151	Portland	004, 005, 006, 016, 171
Goldstar	004, 005, 006, 012, 019, 056	Price club.....	105
	057, 058, 155, 156, 171, 172	Prism	054
Grundy	038, 046, 171	ProScan	000, 181
Hallmark.....	004, 006	Proton	004, 006, 012, 093, 186, 175
Harvard	038	Pulsar	151
Hitachi.....	004, 006, 011, 012, 013, 053	Pulser.....	004
	059, 060, 061, 135, 136, 137	Quasar	003, 054, 070, 094
	138, 139, 140, 141, 142, 143	Radio Shack	000, 004, 006, 011, 012
	144, 145, 146, 147, 148, 150, 179		038, 049, 095, 162, 171, 172
IMA	038	Realistic	000, 004, 006, 011, 012
Infinity.....	062		038, 049, 095, 162, 171, 172
Janeil	174	RCA	000, 003, 004, 005, 006, 007
JBL	062		019, 096, 098, 099, 100, 101
JCB	002		102, 103, 129, 179, 181, 187, 188
JC Penny	000, 004, 005, 006, 008, 022	Rhapsody	176
	052, 054, 058, 063, 064, 072	Runco.....	151
	087, 105, 128, 171, 172, 181	Sampo	004, 006, 171, 172, 175
Jensen.....	004, 006	Samsung	004, 005, 006, 011, 012
JVC.....	011, 012, 013, 054, 060, 065, 066		015, 019, 020, 104, 105
	067, 089, 157, 158, 159, 182		106, 171, 172
Kawasho	002, 004, 006	Samsux	171
Kaypani	175	Sanyo.....	004, 048, 049, 050, 080, 107
Kenwood.....	004, 006, 019, 020		108, 162, 169, 180
Kloss Novabeam	068, 069, 174, 183	Scotch.....	006
KTV	038, 070, 171, 176, 177	Scott.....	004, 006, 012, 024, 035, 038, 046
Loewe	062	Sears	000, 004, 006, 013, 019, 020
Logik	083		046, 048, 049, 050, 051, 066, 071
Luxman	004, 006		072, 109, 110, 162, 180, 181, 189
LXI	000, 006, 049, 062, 071, 072	Sharp	004, 006, 012, 029, 095, 111
	073, 162, 181		112, 113, 114, 122, 171, 173
Megatron.....	006, 059	Shogun.....	004
Magnavox.....	004, 006, 008, 019, 062, 068	Signature	001, 083, 115
	069, 074, 075, 076, 077, 088	Simpson.....	008
	089, 130, 131, 132, 133, 134, 183, 184	Sonic.....	176
Majestic	083	Sony	002
Marantz.....	062	Soundesign	004, 006, 008, 038, 046
Marantz.....	004, 006, 062, 078	Squareview	189
MEI.....	176	SSS	004, 038
Memorex.....	001, 006, 082, 083, 162	Starlite	038
MGA	004, 005, 006, 019, 020, 021	Supre-Macy.....	174
	022, 051, 079, 080, 082	Supreme	002
Midland	054, 151, 171, 172, 181	Sylvania	004, 006, 008, 019, 062, 068
Minutz.....	052		069, 074, 075, 076, 077, 088
Mitsubishi.....	004, 005, 006, 019, 020		116, 161, 183, 184
	021, 022, 051, 079, 080	Symphonic	033, 038, 189
	081, 082, 082, 125	Tandy	173
Montgomery Ward	083	Tatung	003, 178
Motorola	003, 173	Technics.....	054
MTC.....	004, 005, 006, 105, 176, 178	Techwood	004, 006, 054
Multitech.....	038, 178	Teknika	004, 005, 006, 008, 012
Multivision	084		013, 016, 038, 046, 076, 082
NAD	006, 071, 072, 185		083, 105, 170, 171
NEC.....	003, 004, 005, 006, 020, 085, 089	Telecaption	117
Nikko.....	006, 016	Tera.....	186
NTC	016	TMK.....	004, 006
Onwa	038	Toshiba	049, 071, 072, 089, 105
Optimus.....	185		109, 117, 118, 160, 162
Optonica	095, 173	Totevision	171
Orion	035	Universal.....	052, 053, 087
Panasonic	003, 054, 062, 170	Victor	066, 182
Philco.....	003, 004, 005, 006, 008	Vidtech	004, 005, 006
	012, 019, 062, 068, 069	Viking	174
	074, 075, 077, 183, 184	Wards	000, 001, 004, 005, 006, 019
Philips	003, 004, 008, 012, 019, 046		024, 033, 046, 052, 053, 062
	047, 062, 068, 069, 074, 075		068, 069, 074, 075, 076, 083
	076, 086, 087, 088, 089		087, 088, 095, 119, 120, 184
Pilot	004, 171	Yamaha	004, 005, 006, 019, 020
Pioneer	004, 006, 090, 091, 092, 179, 185	Zenith	083, 121, 151, 152, 153, 154

Programming Your Universal Remote For VCR


Most RCA, GE and ProScan VCRs will not require programming. Check to see if your VCR responds to the Remote before you begin programming.

1. Manually turn on the VCR.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **VCR** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your VCR in the code list starting below and enter it using the Number Buttons.

After your codes is entered the **Indicator Light** will turn off.



BLINK/ON

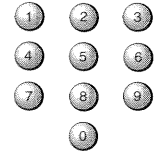

OFF



5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.

Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 12.

6. With your VCR on, press **CHANNEL UP**. If the VCR responds, no further programming is required.
7. Enter your code here for easy reference.



VCR CODE		

VCR Code List

Admiral	001	Colortyme	009
Adventura	026	Colt	061
Aiko	027	Craig	013, 014, 023, 061
Aiwa	002, 026	Curtis-Mathes	000, 002, 009, 013, 016
Akai	003, 004, 005, 006, 007		018, 021, 022, 024, 115
	008, 111, 112, 113	Cybernex	013
American High	021	Daewoo	015, 017, 019, 025
Asha	013		026, 027, 028, 110
Audio Dynamics	009, 010	Daytron	110
Audiovox	014	DBX	009, 010
Bell & Howell	011	Dimensia	000
Beaumark	013	Dynatech	002, 026
Broksonic	012, 025	Electrohome	014, 029
Calix	014	Electroponic	014
Candle	013, 014, 015, 016	Emerson	002, 006, 012, 014, 015
	017, 018, 019		021, 024, 025, 026, 029, 030
Canon	021, 022, 114		031, 032, 033, 034, 035, 036
Capehart	020, 110		037, 038, 039, 040, 041, 042
Carver	062		043, 044, 045, 046, 047, 065
CCE	027, 061		105, 113, 116, 117
Citizen	013, 014, 015, 016	Fisher	011, 023, 048, 049
	017, 018, 019, 027		050, 051, 052, 118


VCR Code List Continued

Fuji	021, 119	Quarter	011
Funai	002, 026	Quartz	011
Garrard	026	Quasar	021, 022, 125
GE	000, 013, 021, 022 053, 115, 120	RCA	000, 003, 013, 021, 055, 056, 082 083, 084, 085, 086, 087, 088, 089 090, 091, 107, 115, 120, 125
Goldstar	009, 014, 018, 054, 121	Radio Shack	001, 002, 011, 013, 014, 021 022, 023, 026, 029, 049, 050, 096
Gradiente	026	Realistic	001, 002, 011, 013, 014, 021 022, 023, 026, 029, 049, 050, 096
Harley Davidson	026	Radix	014
Harman Kardon	009, 068	Randex	014
Harwood	061	Ricoh	128
Headquarter	011	Runco	104
Hitachi	002, 055, 056, 057 107, 111, 120, 122	Samsung	005, 013, 015, 033, 053, 112
HI-Q	023	Sanky	001, 104
Instant Replay	021	Sansui	010, 092, 111, 123
JCL	021	Sanyo	011, 013, 023
JC Penney	009, 010, 011, 013, 014 021, 022, 055, 056, 058 059, 060, 107, 118	Scott	012, 015, 025, 032, 038 065, 093, 116
Jensen	111	Sears	011, 014, 021, 023, 048, 049, 050, 051, 055, 056, 107, 118
JVC	009, 010, 011, 018, 058, 111, 123	Sharp	001, 002, 017, 029, 094, 095, 096
Kenwood	009, 010, 011, 016 018, 058, 111, 123	Shintom	004, 056, 061, 098
KLH	061	Shogun	013
Kodak	014, 021	Signature	002
Lloyd	002, 026	Singer	021, 061
Logik	061	Sony	004, 098, 099, 119, 128
LXI	014	STS	021, 107
Magnavox	021, 022, 062, 063 104, 108, 124	Sylvania	002, 021, 022, 026 062, 063, 065, 124
Magnin	013	Symphonic	002, 026
Marantz	009, 010, 011, 016, 018 021, 058, 062, 064	Tandy	002, 011
Marta	014	Tashiko	014
Masushita	021	Tatung	058, 111
MEI	021	Teac	002, 026, 058, 085, 111
Memorex	001, 002, 011, 013, 014 021, 023, 026, 104	Technics	021, 109
MGA	029, 065, 113	Teknika	002, 014, 021, 100, 129, 026
MGN Technology	013	Toshiba	015, 049, 051, 055 065, 093, 116
Midland	053	Totevson	013, 014
Minolta	055, 056, 107	TMK	013, 024, 047
Mitsubishi	029, 055, 056, 065, 066 067, 068, 069, 070, 071 072, 073, 074, 106, 113, 123	Unitech	013
Montgomery Ward	001, 075	Vector Research	009, 010, 015, 016
Motorola	001, 021	Victor	010
MTC	002, 013, 026	Video Concepts	009, 010, 015, 016, 113
Multitech	002, 013, 026, 053, 061	Videosonic	013
NEC	009, 010, 011, 016, 018 058, 064, 076, 077, 078 079, 111, 123	Wards	001, 002, 013, 014, 015, 021 023, 026, 029, 055, 056, 061 096, 101, 102, 103, 107, 116
Nikko	014	XR-1000	021, 026, 061
Noblex	013	Yamaha	009, 010, 011, 018, 058, 111
Olympus	021	Zenith	004, 098, 104, 119, 128
Optimus	001, 014		
Optonica	096		
Panasonic	021, 022, 109, 125, 126, 127		
Pentax	016, 055, 056, 016, 107, 120		
Pentax research	018		
Philco	021, 022, 062, 063		
Philips	021, 062, 096, 124		
Pilot	014		
Pioneer	010, 055, 080, 081, 123		
Portland	016, 017, 019, 110		
ProScan	000		
Protec	061		
Pulsar	104		

Programming Your Universal Remote For Home Control


Your Remote is preprogrammed for RCA Home Control (Code 000). Your RCA Home Control remote can be programmed to operate other Home Control Systems. Follow the steps below to set up the remote for operating the brands in the Home Control Code List

1. Manually turn on the Base Module.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **Home Control** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your Home Control System in the code list starting below and enter it using the Number Buttons.

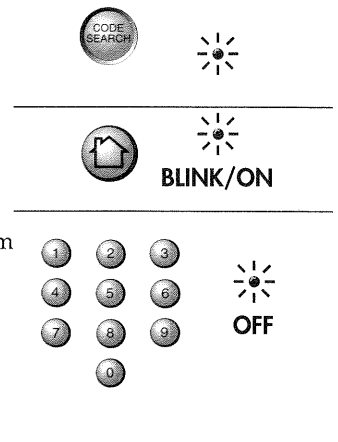

After your code is entered, the **Indicator Light** will turn off.

5. Press the **Mute/All Off** button. Your base unit should turn off.
6. Enter your code here for easy reference.

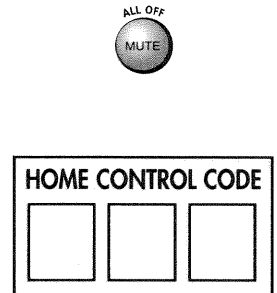

Home Control Code List

Home Minder	002
IBM Home Director.....	000
Leviton	000
Magnavox.....	000
Radio Shack.....	000,001
RCA	000
Safety First	000
Stanley.....	000
X-10	000

Programming With Code Search

If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Manually turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **Indicator Light** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV**, **VCR** or **CABLE**). The **Indicator Light** will blink once.



4. Press and release **POWER** until your device turns off.



Important: You may have to press Power up to 200 times.

5. When your device turns off, press the **ENTER** button, the Indicator Light will turn off.



Getting Codes From Your Universal Remote

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.

1. Press and hold **CODE SEARCH** until the **Indicator Light** lights, then release **CODE SEARCH**.
2. Press and release the device button for the device's code you are retrieving (**TV**, **VCR** or **CABLE**). The Indicator Light will blink once.
3. Press and release **CODE SEARCH**. The **Indicator Light** will turn off.
4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **Indicator Light** blinks.
5. The number which causes the indicator light to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers in the code.



Trouble Shooting

PROBLEM	SOLUTION
Red light not blinking when you press any key	A) Replace the batteries (with fresh, new AAA Alkaline batteries). B) Check that batteries are properly installed.
The remote does not operate your video devices	A) Try all the codes listed for your brand. B) Try the Code Search method (page 14).
Not performing commands properly	Start Code Search over again to locate the proper code for full compatibility.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, only the original remote will perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a key	A) Make sure you have new batteries and you are aiming your remote at your devices. B) Check that batteries are properly installed. See page 3.
Modules are turning on/off without a remote control command.	You may be receiving interference from a neighbors Home Control System, try changing your House Code.
Home Control Modules do not respond to a remote control command.	A) MAKE SURE LAMP OR APPLIANCE IS TURNED ON! B) Check to be sure Base Module, Remote and all additional modules are set to the same House Code. C) Check to make sure the electrical outlet is working, by plugging your appliance directly into it.
Home Control System responds intermittently.	Try moving Base Module to another outlet or room in the house.

Reprogramming may be required after batteries are removed.

Help Line

If you need additional set-up help, please call the Home Control Helpline at:
1-800-211-3089

Expanding Your Home Control System

To order these optional accessories today which will expand your home control system throughout your home, see your local RCA retailer or order direct.

Lamp Module

Remotely control and dim incandescent lamps only.

No wiring necessary, Just plug it in!

(Two Prong, Polarized Plug, 300W. Max.)

\$14.95



HC10L

Appliance Modules


Turn Appliances On/Off remotely. Use with Coffee Pot, Popcorn Maker, Stereo, Non-Incandescent Lamps : Halogen, Fluorescent, Low Voltage Lamps (500 W. Max Lamps, 1/3 HP Motors, 400W Max. TVs, 15A Resistive Load Max.)

HC20AM

(Two Prong Polarized Plug) \$16.95

HC25AM

(Three Prong Grounded Plug) \$16.95

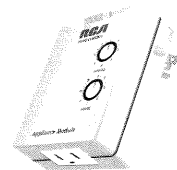

HC20AM
2-Prong

HC25AM
3-Prong

Single Pole Wall Switch

Turn a light switched from a single location On, Off, or Dim/Brighten. Replaces existing wall switch and installs like a dimmer. Can also be used on outdoor (security) lights switch on/off from indoors. (500W Max./60W Min. Incandescent lights only)

Incandescent lights only)

\$14.95




HC30WD

3-Way Wall Switch

Allows you to turn a light switched from two locations On, Off, or Dim/Brighten. (500W Max./ 60W Min. Incandescent lights only)

\$19.95

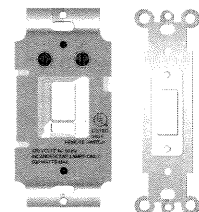

HC32WD

Key Chain Remote

Operates two sets of lights from up to 75 feet away. Great for use in your car!

(Requires 2 AAA batteries - not included)

\$12.95



HC40TX

Home Control Base Unit

Expand your Home Control System beyond 16 modules with a second base unit. Have one system upstairs and one downstairs, or one for your vacation home.(500 W. Max Lamps, 1/3 HP Motors, 400W Max. TVs, 15A Resistive Load Max.)

\$29.95



HC50RX

RCA Accessories

Description	Model #	Price	Qty.	Total
Lamp Module	HC10LM	\$14.95		
2-Prong Appliance Module	HC20AM	\$16.95		
3-Prong Appliance Module	HC25AM	\$16.95		
Single Pole Wall Switch	HC30WD	\$14.95		
3-Way Wall Switch	HC32WD	\$19.95		
Key Chain Remote	HC40TX	\$12.95		
Base Module	HC50RX	\$29.95		
Total Merchandise Order				
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				\$5.00
Total Amount Due				

Order Your RCA Accessories Today

SEE YOUR LOCAL RCA RETAILER OR ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above listed accessories.

1-800-338-0376

Shipping and handling and local sales tax will be charged on all orders.

ORDERING BY MAIL:

Provide your name, address, phone number and a check or money order for the total amount due, and mail to:

**RCA Accessories
PO Box 8419
Ronks, PA 17573**

Include this completed form with your order.

*Shipping and handling will be added to all orders.

Prices are subject to change without notice.

Warranty

Thomson Consumer Electronics, Inc. warrants that for 90 days from the date of purchase this products is free from defects in material and workmanship. If the item is defective within that period, return it at your expense to the dealer from whom it was purchased together with proof of purchase for replacement. The exchange unit is under warranty for the remainder of the original product's warranty period. This warranty excludes defects or damage due to misuse, abuse, neglect or acts of God, including but not limited to lightning damage. The foregoing represents Thomson's sole obligation under this warranty.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. For purchases outside the United States, contact your dealer for warranty information.

©1996 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
1J1194-Z

RCA Universal Home Control Remote

► **CONTROLS VIDEO COMPONENTS, LIGHTS AND APPLIANCES:**

Sends infrared signals (line of sight) to control TVs, VCRs and Cable Boxes.

Sends radio frequency signals (through walls and floors) to control lights and appliances throughout the home.

► **BACK-LIT KEY PAD:**

Easy to see in dark rooms.

► **BUILT-IN SLEEP TIMER:**

Turn off your TV automatically. Set for 1 to 99 minutes.

► **NITEglo-ENERGY SAVER:**

Key pad light automatically goes out to conserve battery power.

► **UNIQUE SHAPE:**

Conformed to the shape of your hand for comfortable key pad access.

► **CONSUMER HELPLINE:**

Customer service representatives are available to help with all your Home Control questions.

Requires Four (4) AAA Batteries (Not Included)



FCC
APPROVED



THIS NITEglo REMOTE CONTROL IS COMPATIBLE WITH MOST MODELS OF THE FOLLOWING BRANDS
(with infrared controlled components manufactured after 1989):

TV

Abex	Crown	Janeil	Minutz	Proton	Starlite
Admiral	Curtis Mathes	JBL	Mitsubishi	Pulsar	Supre-Macy
Adventura	CXC	JCB	Montgomery	Quasar	Supreme
Aiko	Daewoo	JC Penney	Ward	Quasar	Sylvania
Alleron	Daytron	Jensen	Motorola	Radio Shack/	Symphonic
Amtron	Dimensia	JVC	MTC	Realistic	Tandy
Akai	Dumont	Kawasho	Multitech	*RCA	Tatung
Anam	Dynatech	Kaypani	Multivision	Rhapsody	Technics
National	Electroband	Kenwood	NAD	Runco	Techwood
AOC	Electrohome	Kloss	NEC	Sampo	Teknika
Audiovox	Emerson	Novabeam	Nikko	Samsung	Telecaption
Belcor	Envision	KTV	NTC	Samsux	Tera
Bell & Howell	Fisher	Loewe	Onwa	Sanyo	TMK
Bradford	Fujitsu	Logik	Optimus	Scotch	Toshiba
Brookwood	Funai	Luxman	Optonica	Scott	Television
Candle	Futuretec	LXI	Orion	Sears	Universal
Capehart	*GE	Megatron	Panasonic	Sharp	Victor
Celebrity	Gibraltar	Magnavox	Philco	Shogun	Vidtech
Centurion	Goldstar	Majestic	Philips	Signature	Viking
Citizen	Grundy	Marantz	Pilot	Simpson	Wards
Claitone	Hallmark	Marantz	Pioneer	Sonic	Yamaha
Colortyme	Harvard	MEI	Portland	Sony	Zenith
Concerto	Hitachi	Memorex	Price Club	Soundesign	
Contec/Cony	IMA	MGA	Prism	Squareview	
Craig	Infinity	Midland	*ProScan	SSS	

VCR

Admiral	Curtis Mathes	Hi-Q	Minolta	Pulsar	Sylvania
Adventura	Cybernex	Instant	Mitsubishi	Quarter	Symphonic
Aiko	Daewoo	Replay	Montgomery	Quartz	Tandy
Aiwa	Daytron	JCL	Ward	Quasar	Tashiko
Akai	DBX	JC Penney	Motorola	*RCA	Tatung
American	Dimensia	Jensen	MTC	Radioshack/	Teac
High	Dynatech	JVC	Multitech	Realistic	Technics
Asha	Electrohome	Kenwood	NEC	Radix	Teknika
Audio	Electrohome	KLH	Nikko	Randex	Toshiba
Dynamics	Emerson	Kodak	Noblex	Ricoh	Television
Audiovox	Fisher	Lloyd	Olympus	Runco	TMK
Bell & Howell	Fuji	Logik	Optimus	Samsung	Unitech
Beaumont	Funai	LXI	Optonica	Sanky	Vector
Broksonic	Garrard	Magnavox	Panasonic	Sansui	Research
Calix	*GE	Magnin	Pentax	Sanyo	Victor
Candle	Goldstar	Marantz	Pentex	Scott	Video
Canon	Gradiente	Marta	Research	Sears	Concepts
Capehart	Harley	Matsushita	Philco	Sharp	Videosonic
Carver	Davidson	MEI	Philips	ShinTom	Wards
CCE	Harman	Memorex	Pilot	Shogun	XR-1000
Citizen	Kardon	MGA	Pioneer	Signature	Yamaha
Colortyme	Harwood	MGN	Portland	Singer	Zenith
Colt	Headquarter	Technology	*ProScan	Sony	
Craig	Hitachi	Midland	Protec	SYS	

CABLE BOX

ABC	Garrard	Memorex	Regal	Standard	TV86
Antronix	GC Electronics	Movie Time	Regency	Components	Unika
Archer	Gemini	NSC	Rembrandt	Starcom	United Artists
Cabletenna	General	Oak	Runco	Stargate	United Cable
Cableview	Instrument	Panasonic	Samsung	Stargate	Universal
Century	Hamlin	Paragon	Scientific	Tandy	VideoWay
Citizen	Hitachi	Philips	Atlanta	Television	Viewstar
Colour Voice	Hytex	Pioneer	Signal	Texscan	Zenith
Comtronics	Jasco	Pulsar	Signature	Tocom	
Contec	Jerrold	*RCA	SL Marx	Toshiba	
Eastern	Magnavox	Realistic	Sprucer	TUSA	

HOME CONTROL

GE	Leviton	Radio Shack	Safety First	Stanley	X-10
IBM Home Director	Magnavox	RCA			

* No Setup Required For Most Models.

Thomson Consumer Electronics, Inc.
Product Exchange Center
32 Spur Drive, El Paso, Texas 79906
1J1194-Z

Trademark(s) © Registered Marca(s) Registrada(s)
Made in China

HC1310

Industry Canada
Certified